



VOLVO PARTS
 1 030 15198
 (11625)

Sida	10	Grupp	3	Tändfördelare, 241532, 243131, 461526, 461527	Distributor, 241532, 243131, 461526, 461527	Illustration 15198	0150
Page		Group					1975-12

Pos. Fig.	Antal/Quantity				Detalj nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	241 532	243 131	461 526	461 527						
1	1	-	-	-	241532-1	Tändfördelare	Distributor		ERS AV 461660-3	0020
	-	1	-	-	243131-0	Tändfördelare	Distributor			0040
	-	-	1	-	461526-6	Tändfördelare	Distributor			0060
	-	-	-	1	461527-4	Tändfördelare	Distributor			0080
2	1	1	1	1		•Hus	•Housing	8		0100
3	1	-	-	-	233262-5	•Bussning, övre	•Bushing, upper			0120
4	1	-	-	-	238850-2	•Bussning, nedre	•Bushing, lower			0140
5	1	-	-	-	241396-1	•Smörjfilt	•Lubricating felt			0160
6	1	-	-	-	241650-1	•Kondensator för 241532	•Condensator for 241532			0180
	1	-	-	-	243802-6	•Kondensator för 461660	•Condensator for 461660			0182
	-	1	-	-	243656-6	•Kondensator	•Capacitor			0200
	-	-	1	-	243802-6	•Kondensator	•Capacitor			0220
	-	-	-	1	243805-9	•Kondensator	•Capacitor			0240
7	2	-	-	-	241667-5	•Fjäder	•Spring			0260
8	1	-	-	-	241668-3	•Brytarkam	•Breaking cam			0280
9	1	-	-	-	233836-6	•Koppling	•Coupling			0300
10	1	-	-	-	241651-9	•Brytarplatta	•Breaker plate			0320
11	1	-	-	-	241652-7	•Kontaktsats	•Breaker point kit			0340
	-	1	-	1	243655-8	•Kontaktsats	•Breaker point kit			0360
	-	-	1	-	243801-8	•Kontaktsats	•Breaker point kit			0380
12	1	-	-	-	240305-3	•Fördelararm för 241532	•Distributor rotor			0400
	1	-	-	-	243657-4	•Fördelararm för 461660	•Distributor rotor			0401
	-	1	1	1	243657-4	•Fördelararm	•Distributor rotor			0403
13	1	-	-	-	241669-1	•Fördelarlock för 241532	•Distributor cap			0404
	1	-	-	-	243803-4	•Fördelarlock för 461660	•Distributor cap			0420
	-	1	-	-	243658-2	•Fördelarlock	•Distributor cap			0440
	-	-	1	1	243803-4	•Fördelarlock	•Distributor cap			0441
13a	1	-	-	-	243761-4	•Kondensspärr för 241532	•Condensate trap			0443
	1	-	-	-	243762-2	•Kondensspärr för 461660	•Condensate trap			0444
	-	1	1	1	243762-2	•Kondensspärr	•Condensate trap			0460
14	1	-	-	-	241670-9	•Vakuumpregulator	•Vacuum governor			0480
	1	-	-	-	243984-2	•Vakuumpregulator	•Vacuum governor			0500
	-	1	-	-	243659-0	•Vakuumpregulator	•Vacuum governor			0501
	-	-	-	1	243806-7	•Vakuumpregulator	•Vacuum governor			0503
14a	-	1	-	-	243022-1	•Kontaktinsats	•Breaker point kit			0504
	-	-	1	1	243804-2	•Kontaktinsats	•Breaker point kit			0520
14b	-	1	1	1	243023-9	•Packning	•Packing			0540
15	1	-	-	-	241671-7	Rep.sats för	Repair kit for			0541
	1	-	-	-	273521-5	tändfördelare 241532	distributor shaft 241532			0543
16	1	-	-	-	241656-8	Rep. sats för 461660	Repair kit for 461660			0560
	-	-	-	-		medbringare	companion flange			0580
17	1	-	-	-	241658-4	Rep.sats för	Repair kit for			0600
	-	-	-	-		Brytarplatta	Breaker plate			0620
18	1	-	-	-	241659-2	Hållfjädersats	Retainer spring kit			0640
	-	1	1	1	273521-5	Rep.sats	Repair kit			0660