



VOLVO PARTS
 1 040 31115
 (105: 3)

Sida Page	Grupp Group	Växellåda BW55 1208128, 1208162, 1208173, 1208254				Växellåda BW55 1208128, 1208162, 1208173, 1208254.				Illustration 31115 1984-12	0700
Pos. Fig.	Antal/Quantity				Artikel nr Part No	Benämning	Description	Sats Kit	B P S R	Anmärkning Notes	
	1208 128 BW	1208 162 BW	1208 173 BW	1208 254 BW							
1	1	-	-	-	1208128-7	Växellåda	Gearbox	5		MARKED 011.	0020
	-	1	-	-	1208162-6	Växellåda	Gearbox	5		MARKED 012.	0040
	-	-	1	-	1208173-3	Växellåda	Gearbox	5		MARKED 020	0060
	-	-	-	1	1208227-7	Växellåda	Gearbox	5		MARKED 026.	0080
	-	-	-	1	1208254-1	Växellåda	Gearbox	5		MARKED 027	0100
2	1	-	-	-	1233391-0	.KonverterConverter	4		(1233000)	0120
x	1	-	-	-	5003558-3	.Konverter, utbytesenhet	.Converter, exchange unit	5			0130
	-	1	-	-	1233379-5	.KonverterConverter	4			0135
	-	-	1	-	1233341-5	.KonverterConverter	8		VXL MARKED 020	0140
	-	-	-	-						ERS AV 1 ST 1233410-8	0160
	-	-	1	-	1233410-8	.KonverterConverter	4		VXL MARKED 026	J
x	-	-	1	-	5003559-1	.Konverter, utbytesenhet	.Converter, exchange unit	5		VXL MARKED 026	0180
	-	-	-	1	1233378-7	.KonverterConverter	4			0190
3	1	-	-	-	1233001-5	.KonverterkåpaConverter housing	5			0195
	-	1	-	1	1233330-8	.KonverterkåpaConverter housing	5			0200
	-	-	1	-	1233342-3	.KonverterkåpaConverter housing	5			0220
4	2	1	-	1	1233328-2	.SkyddsnätStone guard	5			0280
	-	-	1	-	235814-1	.SkyddsnätStone guard	5			0280
5	4	4	4	4	955319-9	.SkruvScrew	2		M10 X 36	0300
	2	2	3	2	955343-9	.SkruvScrew	2		M12 X 45	0320
6	4	4	4	4	941908-6	.Fjädrande brickaResilient washer	2		DI 10.5 MM	0340
	-	-	-	-			.Resilient washer	2		DI 13.5 MM	0360
7	-	-	-	-		.Hus med planetväxelHousing with planetary gear			SE SIDA 110, 4-E15	0380
	-	-	-	-		..Mellangavel- utgående axel	..Centre section- output shaft			SE SIDA 116, 4-E21	0400
	-	-	-	-		.Pumphus-kopplingshus	.Pump housing- clutch housing			SE SIDA 122, 4-F03	0420
	-	1	1	1	1233374-6	.Bakre husExtension housing	8		ERS AV 1ST 1239637-0,	0440
	1	-	-	-	1233374-6	.Bakre husExtension housing	8		1 ST 1239883-0,	0460
9	1	1	1	1	235878-6	..BussningBushing	3		1 ST 1239884-8	0480
10	1	1	1	1	235728-3	.TätningringSeal ring	S 3		ERS AV 1277665-4	0500
11	1	1	1	1		.PackningGasket	S 8			0520
12	6	6	4	6	1233138-5	.SkruvScrew	3			0530
	-	-	2	-	1239884-8	.FlänskskruvFlange screw	4			0535
13	6	6	6	6	1233139-3	.LåsbrickaLock washer	3			0540
14	1	-	-	-	1233295-3	.KontrollsystemValve bodies, cpl	8		ERS AV 1ST 1233389-4	0550
	-	1	-	-	1233296-1	.KontrollsystemValve bodies, cpl	8		ERS AV 1ST 1233389-4	0560
	-	-	-	1	1233371-2	.KontrollsystemValve bodies, cpl	8		VXL NR-9071.	0580
	-	-	-	1	1233389-4	.KontrollsystemValve bodies, cpl	4		ERS AV 1ST 1233389-4	0640
x	-	-	-	1	5003562-5	.Kontrollsystem, utbytesenhet	.Valve bodies, exchange unit	9		VXL NR 9072-.	0660
	-	-	1	-	1233349-8	.KontrollsystemValve bodies, cpl	8		VXL NR 9072-.	0680
	-	-	1	-	1233349-8	.KontrollsystemValve bodies, cpl	8		VXL MARKED	0700
	-	-	1	-	1233349-8	.KontrollsystemValve bodies, cpl	8		020 NR-10810	0750
	-	-	1	-	1233349-8	.KontrollsystemValve bodies, cpl	8		ERS AV 1233387-8	0760
	-	-	1	-	1233387-8	.KontrollsystemValve bodies, cpl	4		VXL MARKED 026 NR-1668	0785
	-	-	1	-	1233387-8	.KontrollsystemValve bodies, cpl	4		ERS AV 1233387-8	0800
x	-	-	1	-	5003560-9	.Kontrollsystem, utbytesenhet	.Valve bodies, exchange unit	5		VXL MARKED	0810
	-	-	1	-	1233387-8	.KontrollsystemValve bodies, cpl	4		020 NR 10811-	0812
	-	-	1	-	1233387-8	.KontrollsystemValve bodies, cpl	4		020 NR 10811-	0815
	-	-	1	-	1233387-8	.KontrollsystemValve bodies, cpl	4		VXL MARKED	0820
	-	-	1	-	1233387-8	.KontrollsystemValve bodies, cpl	4		026 NR 1669-	0825
15	1	1	1	1	955278-7	..Det se sida 154, 4-G11Comps page 154, 4-G11	2			0840
	3	3	3	3	955276-1	.SkruvScrew	2		L 50	0860
	11	11	11	11	955275-3	.SkruvScrew	2		L 35	0880
	2	2	2	2	955274-6	.SkruvScrew	2		L 30	0900
								2		L 25	0920

Sida Page	Grupp Group	Växellåda BW55				Växellåda BW55				Illustration	0700
82	4	1208128, 1208162, 1208173, 1208254				1208128, 1208162, 1208173, 1208254.				31115	
										1984-12	
Pos. Fig.	Antal/Quantity				Artikel nr Part No	Benämning	Description	Sats Kit	B P S R	Anmärkning Notes	
	1208 128 BW	1208 162 BW	1208 173 BW	1208 254 BW							
16	-	-	1	1	1233336-5	.Mellandel.....	.Spacer, oil strainer.....	4			0940
17	-	-	1	1	1233337-3	.Packning.....	.Gasket.....	3			0960
18	1	1	1	1	1233394-4	.Oljesil.....	.Oil strainer.....	4	(1233211)		0980
19	5	5	-	-	955244-9	.Skruv.....	.Screw.....	2			1000
	-	-	5	5	955250-6	.Skruv.....	.Screw.....	2			1020
20	1	-	-	-	1233309-2	.Reglagevajer.....	.Control wire.....	3			1040
	-	1	-	1	1233224-3	.Reglagevajer.....	.Control wire.....	3			1060
	-	-	1	-	1233414-0	.Reglagevajer.....	.Control wire.....	3	(1233329)		1080
21	1	1	1	1	1220513-4	.Kabelstopp.....	.Cable stop.....	4			1100
22	1	1	1	1	1233141-9	.O-ring.....	.O-ring.....	3			1120
23	1	1	1	1		.Kam.....	.Cam.....			SE SIDA 158, 4-G15	11
24	1	1	1	-	1233321-7	.Växelväljaraxel.....	.Gear selector shaft.....	4			1160
	-	-	-	1	1233322-5	.Växelväljaraxel.....	.Gear selector shaft.....	8		ERS AV 1ST 1233321-7, 1ST 1233376-1, 1 ST 1233384-5 1ST 381879-6.	1180 1200 1220 1240
25	1	1	1	1	1233376-1	.Växelväljarkam.....	.Gear selector cam.....	3			12
25a	1	1	1	1	1233098-1	..Låsring.....	..Circlip.....	3	(1233377)		1200
26	1	1	1	1	1233384-5	.Låspinne.....	.Lock spring.....	3	(1233318) D 5MM		1320
27	2	2	2	2	1233064-3	.Tätningring.....	.Seal ring.....	S 3			1340
28	1	1	1	1		.Fjäderspärr med rulle.....	.Spring catch w. roller.....			SE SIDA 158, 4-G15	1360
29	1	1	1	1	1233294-6	.Parkeringspärr.....	.Catch.....	3			1380
30	1	1	1	1	1233116-1	.Lagertapp.....	.Bearing pin.....	3			1400
31	1	1	1	1	1233117-9	.Låsring.....	.Lock ring.....	3			1420
32	1	1	1	1	1233403-3	.Vridfjäder.....	.Torsion spring.....	3			1440
33	1	1	-	1	1233292-0	.Tryckstång.....	.Thrust rod.....	8	TID UTF.		1460
										ERS AV 1ST 1233404-1	1480
34	1	1	1	1	1233121-1	..Fjäder.....	..Spring.....	4			1500
35	1	1	1	1		..Tryckhylsa.....	..Thrust sleeve.....	8			1520
36	1	1	1	1	951932-3	..Låspinne.....	..Lock pin.....	2			1540
37	1	1	1	1	1233404-1	.Tryckstång.....	.Thrust rod.....	4	SEN UTF.		1560
38	1	1	1	1	1233124-5	.Låsplatta.....	.Lock plate.....	3			1580
39	2	2	2	2	955271-2	.Skruv.....	.Screw.....	2			1600
40	2	2	2	2	941906-0	.Fjädrande bricka.....	.Resilient washer.....	2			1620
41	1	1	-	-	1233212-8	.Oljesump.....	.Oil pan.....	4			1640
	-	-	1	1	1233333-2	.Oljesump.....	.Oil pan.....	8	49) ERS AV 1233415-7		1660
	-	-	1	1	1233415-7	.Oljesump.....	.Oil pan.....	4	50)		1680
41a	-	-	1	1	1233417-3	..Plugg.....	..Plug.....	2	50)		17
41b	-	-	1	1	235858-8	..Bricka.....	..Washer.....	3	50)		1700
42	1	1	1	1	235739-0	.Magnet.....	.Magnet.....	4			1740
43	1	1	1	1	1233383-7	.Packning.....	.Gasket.....	S 3			1760
44	14	14	14	14	955270-4	.Skruv.....	.Screw.....	2			1780
45	14	14	14	14	941906-0	.Fjädrande bricka.....	.Resilient washer.....	2			1800
46	1	1	1	1		.Fjäder, 2:an, B2.....	.Spring, 2:nd gear, B2.....	S			1800
47	1	1	1	1	1233313-4	.Ackumulatorkolv, 2:an, B2.....	.Accumulator piston, 2:nd gear, B2.....	3			1860
48	1	1	1	1	1233223-5	.Kolvring.....	.Piston ring.....	S 3			1880
49	1	1	1	1	1233221-9	.Kolvring.....	.Piston ring.....	S 3			1900
50	1	-	1	-		.Fjäder, 3:an, C2.....	.Spring, 3:rd gear, C2.....	S			1920
	-	-	-	1	1233144-3	.Fjäder, 3:an, C2.....	.Spring, 3:rd gear, C2.....	S 8			1940
51	1	1	1	1	1233314-2	.Ackumulatorkolv, 3:an, C2.....	.Accumulator piston, 3:rd gear, C2.....	3			1960
											1980
52	1	1	1	1	1233312-6	.Kolvring.....	.Piston ring.....	S 3			2000
53	1	1	1	1	1239582-8	.Kolvring.....	.Piston ring.....	S 3	(1233220)		2020
54	1	1	1	1		.Fjäder, 1:an, C1.....	.Spring, 1:st gear C1.....	S			2040
55	1	1	1	1	1233380-3	.Ackumulatorkolv, 1:an, C1.....	.Accumulator piston, 1:st gear, C1.....	4			2060
											2080
56	1	1	1	1	1233222-7	.Kolvring.....	.Piston ring.....	S 3			2100
											2120

