



VOLVO PARTS
1 023 31292
(102:2)

Sida Page	Grupp Group		Bränslesystem INJE		Fuel system INJE		Illustration 31292	0200		
50	2c		B27E, B27F, B28E, B28F.		B27E, B27F, B28E, B28F.		1984-12			
Pos. Fig.	Antal/Quantity				Artikel nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	B27E B28E	B27F B28F								
1	1	1	-	-		Bränsletank.....	Fuel tank.....		SE SIDA 92, 2-D21	0020
2	1	1	-	-		Bränslepump.....	Fuel pump.....		SE SIDA 88, 2-D17	0040
3	1	1	-	-		Bränsleledningar, chassi	Fuel pipes, chassis		SE SIDA 84, 2-D13	0060
4	1	1	-	-		Bränsleledningar, motor	Fuel pipes, engine		SE SIDA 58, 2-C11	0100
5	1	1	-	-		Bränslefilter.....	Fuel filter.....		SE SIDA 58, 2-C11	0120
6	1	1	-	-		Kolfilter med monteringsdetaljer	Carbon filter with installation components		2, 13) SE SIDA 78, 2-D07	0140
	1	1	-	-		Kolfilter med monteringsdetaljer	Carbon filter with installation components		2, 11) SE SIDA 80, 2-D09	0160
7	1	1	-	-		Luftfilter.....	Air filter.....		SE SIDA 178, 2-H11	0180
8	1	-	-	-	1269194-5	Mängdmätare.....	Air fuel control unit.....	8	ERS AV 1ST 1269145-7, 1ST 1269332-1	0200
	-	1	-	-	1269010-3	Mängdmätare.....	Air fuel control unit.....	8	B27F. ERS AV 1ST 1269147-3, 1ST 1269146-5.	0240
	-	1	-	-	1269459-2	Mängdmätare.....	Air fuel control unit.....	8	B28F(498628-498631) ERS AV 1 ST 1269146-5, 1 ST 1269484-0.	0260
	-	1	-	-		Mängdmätare.....	Air-fuel control unit.....	8	B28F(498638-498641, 498667)	0280
9	1	1	-	-	1218185-5	.Det se sida 110, 2-E15..... Packning.....	.Comps page 110, 2-E15 Gasket.....	S 2	(269493)	0300
10	12	12	-	-	940326-2	Skruv.....	Screw.....	2		0320
11	12	12	-	-	941906-0	Fjädrande bricka.....	Resilient washer.....	2		0360
12	1	1	-	-	1269185-3	Kallstartrör.....	Cold start pipe.....	4	B27E(498616-498619). B27F. B28F(498638,498639, 498667)	0400
	1	1	-	-	1269327-1	Kallstartrör.....	Cold start pipe.....	4	B27E(498624-498627). B28E. B28F(498628-498631, 498640,498641)	0420
13	1	1	-	-	959214-8	Skruv.....	Screw.....	2		0440
14	1	1	-	-	11991-7	Packning.....	Packing.....	S 2		0460
15	1	1	-	-	269403-2	O-ring.....	O-ring.....	S 2		0480
16	1	1	-	-	952069-3	Propp.....	Plug.....	2	ALT 1	0500
17	1	1	-	-	1269187-9	Nippel.....	Nipple.....	3	ALT 2	0520
18	-	1	-	-	460225-6	Gummihatt.....	Rubber cap.....	2	B28F.	0540
19	1	1	-	-	1269187-9	Nippel.....	Nipple.....	3		0560
20	1	1	-	-		Slang.....	Hose.....		SE SIDA 80, 2-D09	0580
21	1	-	-	-	462865-7	Kallstartventil.....	Cold start injector.....	3	B27E, B28E	0600
	-	1	-	-	269292-9	Kallstartventil.....	Cold start injector.....	3	B27F, B28F	0620
22	1	1	-	-	945214-5	O-ring.....	O-ring.....	2		0640
23	2	2	-	-	942001-9	Skruv.....	Screw.....	2		0660
24	2	2	-	-	941906-0	Fjädrande bricka.....	Resilient washer.....	2		0680
25	58MM	58MM	-	-	945751-6	Slang.....	Hose.....	2	B27E(498616-498619). B27F.	0700
	1	1	-	-	1269818-9	Slang.....	Hose.....	3	(1269326)B27E(498624- 498627),B28E B28F(498628-498631, 498640,498641)	0720
26	-	1	-	-	1269607-6	Slang.....	Hose.....	3	B28F(498638,498639, 498667)	0740

2. Med bensinavdunstningskontroll. With fuel evaporite control. Avec contrôle d'évaporation d'essence. Mit Benzinverdunstungskontrolle. Con control de evaporación de gasolina. Con controllo evaporazione benzina.
11. 242 CH 165570-, 244 CH 482505-, 245 CH 264755-, 262 CH 645 0-, 264 CH 83055-, 265 CH 21775-.
13. 242 CH -165569, 244 CH -482504, 245 CH -264754. 262 CH -64 49, 264 CH -83054, 265 CH -21774.

Sida Page	Grupp Group	Bränslesystem INJE	Fuel system INJE	Illustration 31292	0200						
52	2c	B27E, B27F, B28E, B28F.	B27E, B27F, B28E, B28F.	1984-12							
Pos. Fig.	Antal/Quantity				Artikel nr Part No	Benämning	Description	Sats Kit	B P S R	Anmärkning Notes	
	B27E B28E	B27F B28F									
27	2	2	-	-	943472-1	Slangklamma.....	Hose clamp.....	2			1160
28	1	-	-	-	1269193-7	Tillsatsluftslid.....	Auxiliary air slide.....	3		B27E(498616-498619)	1180
	-	1	-	-	269532-8	Tillsatsluftslid.....	Auxiliary air slide.....	3		B27F	1200
	1	-	-	-	1269319-8	Tillsatsluftslid.....	Auxiliary air slide.....	3		B27E VXL MAN, B28E VXL MAN.	1220
										EXCL B27E(498616, 498618)	1240
	1	-	-	-	1346477-1	Tillsatsluftslid.....	Auxiliary air slide.....	3		(1266910)	1260
										B27E VXL AUTO, B28E VXL AUTO.	1280
										EXCL B27E(498617, 498619)	1300
	-	1	-	-	1346477-1	Tillsatsluftslid.....	Auxiliary air slide.....	3		(1266910)	1310
										B28F VXL MAN.	1320
	-	1	-	-	460833-7	Tillsatsluftslid.....	Auxiliary air slide.....	3		EXCL B28F(498638)	1380
										B28F VXL AUTO.	1390
										EXCL B28F(498639, 498667)	1400
29	2	2	-	-	942001-9	Skruv.....	Screw.....	2			1420
30	2	2	-	-	941906-0	Fjädrande bricka.....	Resilient washer.....	2			1480
31	1	1	-	-	461499-6	Slang.....	Hose.....	3		B27E(498616-498619).	1500
										B27F	1520
	1	1	-	-	1269325-5	Slang.....	Hose.....	3		43) B27E, B28E, B28F	1540
										EXCL B27E(498616- 498619),	1560
										EXCL B28F(498638, 498639,498667)	1580
	1	-	-	-	1269852-8	Slang.....	Hose.....	3		44)	1600
32	1	1	-	-	943474-7	Slangklamma.....	Hose clamp.....	2		D32 MM	1640
	1	1	-	-	946308-4	Slangklamma.....	Hose clamp.....	2		D25 MM	1660
33	1	1	-	-	269352-1	Tillopsrör.....	Inlet pipe.....	3		B27E(498616-498619).	1700
						tillsatsluftslid	aux. air slide			B27F.	1720
	1	1	-	-	1269324-8	Tillopsrör.....	Inlet pipe.....	3		43) B27E, B28E, B28F	1740
						tillsatsluftslid	aux. air slide			EXCL B27E(498616- 498619),	1760
										EXCL B28F(498638, 498639,498667)	1780
34	1	1	-	-		O-ring.....	O-ring.....	2		SE GRUPP 2A	1800
35	-	1	-	-	1276871-9	Reglerslid.....	Control slide.....	3		B28F(498638,498639 498667)	1820
						Konstanttomgång.....	Const. idling.....				1840
36	-	1	-	-	1269605-0	Klamma.....	Clamp.....	2			1900
37	-	1	-	-	959209-8	Skruv.....	Screw.....	2		M6 X 40MM	1920
38	-	1	-	-	940197-7	Mutter.....	Nut.....	2			1940
39	-	2	-	-	942000-1	Skruv.....	Screw.....	2		M6 X 12MM	1960
40	-	3	-	-	955892-5	Bricka.....	Washer.....	2			2000
41	-	1	-	-	1269762-9	Konsol.....	Bracket.....	3		(1269604)	2020
42	3	-	-	-	1317011-3	Gummibussning.....	Rubber bushing.....	3		TID UTF	2040
	2	-	-	-	1317011-3	Gummibussning.....	Rubber bushing.....	3		SEN UTF	2060
43	3	-	-	-	1317007-1	Distanshylsa.....	Spacer sleeve.....	3		(1269572)TID UTF	2080
	2	-	-	-	1317007-1	Distanshylsa.....	Spacer sleeve.....	3		(1269572)SEN UTF	2100
44	6	-	-	-	192404-2	Bricka.....	Washer.....	2		TID UTF	2120
	4	-	-	-	192404-2	Bricka.....	Washer.....	2		SEN UTF	2140
45	-	3	-	-	940326-2	Skruv.....	Screw.....	2		M6 X 20MM	2160
46	-	1	-	-	1269606-8	Gummikrök.....	Hose bend.....	3		43)	2180
	-	1	-	-	1269851-0	Slang.....	Hose.....	3		44)	2200
47	-	2	-	-	943472-1	Slangklamma.....	Hose clamp.....	2			2220
48	-	1	-	-	1269650-6	Tillopsrör.....	Inlet pipe.....	3		43)	2240
						Reglerslid.....	Control slide.....				2260

Sida Page	Grupp Group	Bränslesystem INJE	Fuel system INJE	Illustration	0200					
54	2c	B27E, B27F, B28E, B28F.	B27E, B27F, B28E, B28F.	31292 1984-12						
Pos. Fig.	Antal/Quantity				Artikel nr Part No	Benämning	Description	Sats Kit P S R	Anmärkning Notes	
	B27E B28E	B27F B28F								
49	1	-	-	-	269531-0	Styrtrycksventil	Control pressure regulator	3	STD. B27E(498616-498619 498624,498625), B27E(498626) MO-76888, B27E(498627) MO-76888.	2300 2320 2340 2360
	1	-	-	-	268937-0	Styrtrycksventil	Control pressure regulator	3	16)B27E(498616-498619, 498624,498625), B27E(498626) MO-76888, B27E(498627) MO-76888. MARKED 0 438 140 038.	2380 2400 2420 2440 2460
	1	-	-	-	268937-0	Styrtrycksventil	Control pressure regulator	3	B27E(498626) MO 76889-B27E(498627) MO 76889-B28E	2480 2520
	-	1	-	-	463971-2	Styrtrycksventil	Control pressure regulator	3	B27F	2540 2560
	-	1	-	-	1269315-6	Styrtrycksventil	Control pressure regulator	3	B28F	2580 2600
50	-	1	-	-	1219970-9	Ventilationsslang, styrtrycksventil Bränsleslang	Ventilation hose, contr. press. reg. Fuel hose	3	B28F	2620 2640
	1	1	-	-					B27E, B27F, B28E SE SIDA 58, 2-C11	2660 2680
51	-	1	-	-	945652-6	Slangklamma	Hose clamp	2		2700
52	2	2	-	-	941747-8	Skruv	Screw	2	B27E, B28E, B28F L45 MM	2720 2740
	-	2	-	-	959207-2	Skruv	Screw	2	B27F. L30 MM	2760 2780
53	2	2	-	-	941906-0	Fjädrande bricka	Resilient washer	2		2800
54	-	1	-	-	1269403-0	Slang	Hose	2	B28F	2820
54a	-	1	-	-	945651-8	Slangklammer	Hose clamp	2	B28F	2840
55	-	1	-	-	945652-6	Slangklamma	Hose clamp	2	B28F	2860
56	-	1	-	-	949024-4	T-nippel	T-nipple	2	B28F	2880
57	-	1	-	-	1269520-1	Fördröjningsventil	Delay valve	2	B28F	2900
58	-	1	-	-		Termostatventil	Thermo valve		B28F. SE GRUPP 2B	2920
59	-	ERF	-	-	948958-4	Slang	Hose	2	B28F	2940
59a	-	1	-	-	945650-0	Slangklammer	Hose clamp	2	B28F	2960
59b	-	1	-	-	945650-0	Slangklammer	Hose clamp	2	B28F UAC	2980
60	-	1	-	-	462679-2	Mikrobrytare	Micro switch	3	B28F	3000
61	-	2	-	-	955231-6	Skruv	Screw	2		3020
62	-	2	-	-	955891-7	Bricka	Washer	2		3040
63	1	1	-	-	1219731-5	Termotidgivare	Thermal-time sender	3		3060
64	1	1	-	-	269314-1	Mellanstycke	Spacer	3		3080
65	1	1	-	-	11998-2	Packning	Gasket	1	(947624)	3100
66	-	1	-	-	1276951-9	Lambdasond	Lambda sond	2	(1276951)B27F	3120
	-	1	-	-	1274367-0	Lambdasond	Lambda sond	2	B28F (1274144)	3140
67	-	1	-	-	464958-8	Styrenhet	Guide unit	4	B27F	3160
	-	1	-	-	1274143-5	Styrenhet	Guide unit	4	B28F(498628-498631, 498638, 498639).	3200
	-	1	-	-	1274368-8	Styrenhet	Control unit	4	(1274219)	3220
	-	1	-	-	1274368-8	Styrenhet	Guide unit	4	B28F(498667)	3240
68	-	1	-	-	1254410-2	Hållare	Retainer	5		3260
69	-	2	-	-	955140-9	Skruv	Screw	2		3280
70	-	1	-	-	1269154-9	Temperaturgivare	Temperature sender	2	B27F, B28F.	3300
71	-	1	-	-	1269669-6	Differenstryckkontakt	Pressure diff. switch	2	B28F(498648,498649, 498667)	3320 3340
72	-	1	-	-	1218179-8	Mutter	Nut	2	B28F(498648,498649, 498667)	3360 3380
73	-	1	-	-	1269815-5	Konsol	Bracket	3	B28F(498648,498649, 498667)	3400 3420

16. Ej standardutrustning, service alternativ. Not standard equipment, service alternative. Pas en équipement standard, service au choix. Nicht serienmässig, Ausführung für Kundendienst- We rktätten No equipo standard, opción de servicio. Attrezzatura non di serie, alternativa di assistenza.

Sida Page		Grupp Group		Bränslesystem INJE		Fuel system INJE		Illustration			
56		2c		B27E, B27F, B28E, B28F.		B27E, B27F, B28E, B28F.		31292 1984-12			
Pos. Fig.	Antal/Quantity				Artikel nr Part No	Benämning	Description	Sats Kit	B P S R	Anmärkning Notes	
	B27E B28E	B27F B28F									
74	-	1	-	-	1317011-3	Bussning.....	Bushing.....	3	B	B28F(498648,498649, 498667)	3440
75	-	1	-	-	1269816-3	Distansstycke.....	Spacer tube.....	3	B	B28F(498648,498649, 498667)	3460 3480 3500
76	-	2	-	-	960139-4	Bricka.....	Washer.....	2	B	B28F(498648,498649, 498667)	3520 3540
77	-	1	-	-	955276-1	Skruv.....	Screw.....	2	B	B28F(498648,498649, 498667)	3560 3580
78	-	2	-	-	1210210-9	Låsplugg.....	Plug.....	3	B	B28F(498648,498649, 498667)	3600 3620
79	-	ERF	-	-	948958-4	Slang.....	Hose.....	2	B	B28F(498648,498649, 498667)	?
80	-	-	-	-	1274293-8	Styrenhet, konstanttomgång	Guide unit, constant idle control	3	B	B28F(498638,498639)	3660 3680 3700
	-	1	-	-	1274452-0	Styrenhet, konstanttomgång	Guide unit, constant idle control	3	B	B28F(498667)	3720 3740
81	-	1	-	-	1306024-9	Temperaturgivare, konstanttomgång	Temperature sender, constant idle control	3	B	B28F(498638,498639, 498667)	3760 3780
82	-	1	-	-	11994-1	Packning.....	Gasket.....	2		(947282)	3800
83	-	1	-	-	1274396-9	Impulsrelä.....	Impulse relay.....	3	B	B28E,B28F	3820
	-	-	-	-		Varmstart.....	Hot engine start.....				3840
84	1	1	-	-	955137-5	Skruv.....	Screw.....	2			3860