

Sida Page	Grupp Group	Bränslerör motor	Fuel pipes engine	Illustration	0210					
58	2c	B27E, B27F, B28E, B28F	B27E, B27F, B28E, B28F	34101 1984-12						
Pos. Fig.	Antal/Quantity			Artikel nr Part No	Benämning	Description	Sats Kit	B P S R	Anmärkning Notes	
	B27E B28E	B27F B28F								
1	1	1	-	1276050-0	Bränslefilter	Fuel filter		1	B27E, B27F	0020
2	1	1	-	1266692-1	Konsol	Bracket		4	B27E, B27F	0040
3	1	1	-	955139-1	Skruv	Screw		2		0060
	1	1	-	947542-7	Skruv	Screw		2	88)	0070
4	1	1	-	1276069-0	Nippel	Nipple		3		0080
5	1	1	-	11994-1	Packning	Gasket		2	(947282)	0100
6	1	1	-	18671-8	Packning	Packing		2	TID UTF. HST SEN UTF	0120
6a	2	2	-	18671-8	Packning	Packing		2	VST SEN UTF.	0140
7	1	1	-	948474-2	Nippel	Nipple		2	TID UTF. HST SEN UTF.	0160
7a	1	1	-	25167-8	Hålskruv	Hollow screw		2	VST SEN UTF.	0180
8	1	1	-	1276864-4	Bränslefilter	Fuel filter		1	87) B28E. B28F JAPAN	0200
	-	1	-	1306530-5	Bränslefilter	Fuel filter		1	87) B28F EXCL JAPAN	0220
	1	1	-	1306530-5	Bränslefilter	Fuel filter		1	88)	0230
9	1	1	-	1276862-8	konsol	bracket		4	87) B28E. B28F JAPAN	0240
	-	1	-	1306531-3	Konsol	Bracket		4	87) B28F EXCL JAPAN	0260
x 10	1	1	-	1336338-7	Konsol	Bracket		4	88)	0270
11	2	2	-	1276863-6	Bussning	Bushing		2	87) B28E, B28F.	0290
12	1	1	-		Tryckledning	Feeder pipe			SE SIDA 84, 2-D13	0300
13	1	1	-		Returledning	Return pipe			SE SIDA 84, 2-D13	0320
14	1	1	-	948524-4	Klamma	Clamp		2	TID UTF	0340
15	1	1	-	955139-1	Skruv	Screw		2		0360
15a	1	1	-	1269003-8	Bränslerör	Fuel pipe		3		0380
15b	1	1	-	464657-6	Bränslerör	Fuel pipe		3	HST	0400
16	1	1	-	946794-5	Nippel	Nipple		2	HST	0420
17	1	1	-	74040-7	Hålskruv	Hollow screw		4		0440
18	2	2	-	11994-1	Packning	Gasket		S 2	(947282)	0460
19	1	1	-	1269655-5	Bränslerör	Fuel pipe		3		0480
20	1	-	-	74040-7	Hålskruv	Hollow screw		4		0500
21	2	-	-	11994-1	Packning	Gasket		2	(947282)	0520
22	-	3	-	11994-1	Packning	Gasket		2	(947282)	0540
23	-	1	-	947975-9	Hålskruv	Hollow screw		2	(947277)	0560
24	-	1	-	1269047-5	Frekvensventil	Frequency valve		2		0580
25	-	1	-	952634-4	Klamma	Clamp		2	B27F VXL MAN	0600
26	-	1	-	949379-2	Klamma	Clamp		2	B27F VXL AUTO	0620
27	-	1	-	952634-4	Klamma (skruv M6)	Clamp (screw M6)		2	B28F TID UTF	0640
28	-	1	-	1269612-6	Klamma (skruv M8)	Clamp (screw M8)		2	B28F SEN UTF	0660
29	-	1	-	955271-2	Skruv	Screw		2	M6. TID UTF	0680
30	-	1	-	955892-5	Bricka	Washer		2	TID UTF	0700
31	-	1	-	1269125-9	Bränslerör	Fuel pipe		3		0720
32	-	1	-	74033-2	Hålskruv	Hollow screw		3		0740
33	-	2	-	947620-1	Packning	Packing		2		0760
34	1	1	-	1269005-3	Styrtrycksrör	Control pressure pipe		3		0780
35	1	1	-	74033-2	Hålskruv	Hollow screw		3		0800
36	2	2	-	947620-1	Packning	Packing		S 2		0820
37	1	1	-	48634-0	Hålskruv	Hollow screw		4		0840
38	2	2	-	18665-0	Packning	Packing		S 2	(947281)	0860
39	1	1	-	1269009-5	Bränslerör, retur	Fuel pipe, return		3		0880
40	2	2	-	74033-2	Hålskruv	Hollow screw		3		0900
41	4	4	-	947620-1	Packning	Packing		2		0920
42	410	410	-	1266500-6	Bränsleslang	Fuel hose		2		0940
43	2	2	-	945652-6	Slangklamma	Hose clamp		2		0960
44	1	1	-	1269959-1	Bränslerör	Fuel hose		3		0980
45	2	2	-	74033-2	Hålskruv	Hollow screw		3		1000
46	4	4	-	947620-1	Packning	Packing		S 2		1020
47	1	1	-	948211-8	Klamma	Clamp		2	TID UTF	1040
48	1	1	-	269713-4	Bränslerör, cylinder 1	Fuel pipe, cylinder 1		3		1060
49	1	1	-	269714-2	Bränslerör, cylinder 2	Fuel pipe, cylinder 2		3		1080
50										1100
51										1120

87. 242 CH -243211, 244 CH OMKR -36700, 245 CH OMKR -567100.
88. 242 CH 243212-, 244 CH OMKR 36700-, 245 CH OMKR 567100-.

