



		FUEL SYSTEM					BRÄNSLESYSTEM					Group Grupp
												23
												Page Sida
							B28E					185
Fig	Part No. Artikel nr	Quantity /Antal					P S	Description	Benämning	Notes Anmärkning	S R	
		A	B	C	D	E						
1		-	-	-	-	-		Fuel pipe .....	Bränsleledning .....	SEE 23-213		
2	(1269194)	1	-	-	-	-	SP	Volumeter .....	Mängdmätare .....	REPL 1 PCS 1269145-7, 1 PCS 1269332-1.	3	
		-	-	-	-	-		•SEE 23-209 .....	•SEE 23-209 .....			
3	1218185-5	1	-	-	-	-	IK	Gasket .....	Packning .....	(269493)	2	
4	942247-8	12	-	-	-	-		Screw .....	Skruv .....	(1269194)	2	
5	941906-0	12	-	-	-	-		Spring washer .....	Fjäderbricka .....		2	
6	1269327-1	1	-	-	-	-		Pipe .....	Rör .....		4	
7	959214-8	1	-	-	-	-		Screw .....	Skruv .....		2	
8	11991-7	1	-	-	-	-	IK	Seal .....	Tätning .....		2	
9	269403-2	1	-	-	-	-	IK	O-ring .....	O-ring .....		2	
10	191026-4	1	-	-	-	-		Plug .....	Propp .....	(952069) ALTER 1	2	
11	1269187-9	1	-	-	-	-		Nipple .....	Nippel .....		3	
12		1	-	-	-	-		Hose .....	Slang .....	SEE 23-247		
13	462865-7	1	-	-	-	-		Starter valve .....	Startventil .....		3	
14	945214-5	1	-	-	-	-		O-ring .....	O-ring .....		2	
15	942001-9	2	-	-	-	-		Screw .....	Skruv .....		2	
16	941906-0	2	-	-	-	-		Spring washer .....	Fjäderbricka .....		2	
17	1269818-9	1	-	-	-	-		Hose .....	Slang .....		3	
18	943472-1	2	-	-	-	-		Hose clamp .....	Slangklamma .....		2	
19	1269319-8	1	-	-	-	-		Auxiliary air valve .....	Tillsatsluftventil .....		3	
20	942001-9	2	-	-	-	-		Screw .....	Skruv .....		2	
21	941906-0	2	-	-	-	-		Spring washer .....	Fjäderbricka .....		2	
22	1269852-8	1	-	-	-	-		Hose .....	Slang .....		3	
23	943474-7	1	-	-	-	-		Hose clamp .....	Slangklamma .....		2	
24	1269940-1	1	-	-	-	-		Protecting plate .....	Skyddsplåt .....		4	
25	268937-0	1	-	-	-	-		Control pressure valve .....	Styrtrycksventil .....		3	
26		1	-	-	-	-		Fuel hose .....	Bränsleslang .....	SEE 23-213		
27	941747-8	2	-	-	-	-		Screw .....	Skruv .....		2	
28	941906-0	2	-	-	-	-		Spring washer .....	Fjäderbricka .....		2	
29	1219731-5	1	-	-	-	-		Thermo time sensor .....	Termotidgivare .....		3	
30	269314-1	1	-	-	-	-		Intermediate section .....	Mellanstycke .....		3	
☆ 31	947624-3	1	-	-	-	-		Gasket .....	Packning .....		2	
32	1274396-9	1	-	-	-	-		Impulse relay warm start .....	Impulsrelä varmstart .....		3	
☆ 33	969473-8	1	-	-	-	-		Screw .....	Skruv .....	(955317)	2	
34	1219566-5	1	-	-	-	-		Thermostat valve .....	Termostatventil .....		2	
35	1346125-6	X	-	-	-	-		Plug .....	Plugg .....		2	