



**VOLVO**  
Genuine Parts  
PV 640 44266

A	L.H.D					STEERING GEAR		STYRVÄXEL		Group				
	B	R.H.D					P	S	Description	Benämning	Grupp			
		C	D	E	F	G					H	I	J	64
														Page
														Sida
E	P.S					861								
Fig	Part No. Artikel nr	Quantity /Antal					P	S	Description	Benämning	Notes Anmärkning			
A	B	C	D	E										
☆	1	3516941-6	1	-	-	-	-	-	EU	Steering gear .....	Styrväxel .....	(1359900)CAM	5	
		5003666-4	1	-	-	-	-	-	EU	Steering gear, exch .....	Styrväxel, bytes .....		5	
☆		3516942-4	-	1	-	-	-	-	EU	Steering gear .....	Styrväxel .....	(1359901) CAM	5	
		5003667-2	-	1	-	-	-	-	EU	Steering gear, exch .....	Styrväxel, bytes .....		5	
	2		1	1	-	-	-	-	NS	• Housing .....	• Hus .....			
	3		1	1	-	-	-	-	NS	• Valve .....	• Ventil .....			
	4		1	1	-	-	-	-	NS	•• Gear complete .....	•• Kuggdrev komplett .....			
	5		1	1	-	-	-	-	NS	•• Input shaft .....	•• Ingående axel .....			
	6		1	1	-	-	-	-	NS	•• Torsion bar .....	•• Torsionsstav .....			
	7	1387451-6	2	2	-	-	-	-		• Steering rod .....	• Styrstag .....		2	
	8	1387445-8	1	1	-	-	-	-		• Rack .....	• Kuggstång .....		4	
	8a	1387866-5	1	1	-	-	-	-		• O-ring .....	• O-ring .....		4	
	9		1	1	-	-	-	-	NS	• Bushing .....	• Bussning .....			
	10		1	1	-	-	-	-	KN	• Bearing .....	• Lager .....			
	11		1	1	-	-	-	-	NS	• Seal .....	• Tätning .....			
	12		1	1	-	-	-	-	NS	• Dust cap .....	• Dammskydd .....			
	13		1	1	-	-	-	-	NS	• Retaining ring .....	• Spärring .....			
	14	1330256-7	1	1	-	-	-	-	IK	• Cover .....	• Lock .....			
	15		1	1	-	-	-	-	KN	• Seal .....	• Tätning .....			
	16	1277730-6	1	1	-	-	-	-	IK	• Bushing .....	• Bussning .....			
	17	1330257-5	1	1	-	-	-	-	IK	• Retaining ring .....	• Spärring .....			
	18	963921-2	1	1	-	-	-	-	IK	• Nut .....	• Mutter .....			
	19	1272926-5	1	1	-	-	-	-	IK	• Operating piston .....	• Ansättningskolv .....			
	20	1387644-6	1	1	-	-	-	-	IK	• Spring .....	• Fjäder .....			
☆	21	1359667-1	1	1	-	-	-	-		• Cover .....	• Lock .....	(1387435)		
	22	1273593-2	1	1	-	-	-	-	IK	• Support ring .....	• Stödtring .....			
	23	1272939-8	1	1	-	-	-	-	IK	• Seal .....	• Tätning .....			
	24	1359701-8	1	1	-	-	-	-	IK	• Piston ring .....	• Kolvring .....			
	25	1359700-0	1	1	-	-	-	-	IK	• O-ring .....	• O-ring .....			
	26	1359665-5	1	1	-	-	-	-	IK	• Bushing .....	• Bussning .....			
	27	1359663-0	1	1	-	-	-	-	IK	•• O-ring .....	•• O-ring .....			
	28	1272939-8	1	1	-	-	-	-	IK	• Seal .....	• Tätning .....			
	29	1272943-0	1	1	-	-	-	-	IK	• Locking wire .....	• Låstråd .....			
	30	1387450-8	1	-	-	-	-	-		• Oil pipe long .....	• Oljerör långt .....			
		1387443-3	-	1	-	-	-	-		• Oil pipe long .....	• Oljerör långt .....			
	31	1387449-0	1	-	-	-	-	-		• Oil pipe short .....	• Oljerör kort .....			
		1387442-5	-	1	-	-	-	-		• Oil pipe short .....	• Oljerör kort .....			
	31a	1387453-2	1	1	-	-	-	-		• O-ring .....	• O-ring .....			
☆	32	3516944-0	2	2	-	-	-	-		• Drag link end .....	• Styrstagsända .....	(1205658)		
☆	33	971073-2	2	2	-	-	-	-	IK	• Nut .....	• Mutter .....	(961977)		
	34		2	2	-	-	-	-	KN	• Protecting bellows .....	• Skyddsbälg .....			
	35	1387840-0	2	2	-	-	-	-	IK	• Clamp .....	• Klamma .....	(1387434)		
	36	1387437-5	2	2	-	-	-	-	IK	• Clamp outer .....	• Klamma yttre .....			
		270597-8	2	2	-	-	-	-		Repair kit replacement of bellows	Reparationssats byte av skyddsbälg .....	SEE 64 • 869		
		271570-4	1	1	-	-	-	-		Repair kit .....	Reparationssats .....	SEE 64 • 869		