

ABBREVIATIONS (GB)

Group

02

Page

35

<p> A = ampere ABS = anti-skid brake system A.C = air conditioning A.C.C = automatic climate control Ah = amperehours ALTER = alternative AUTO.TRANS = automatic gearbox BODY -XXXX = up to body NO BODY XXXX- = from body NO CARB = carburettor engine C.C = cruise control CH -XXXXX = up to chassis NO CH XXXX- = from chassis NO CH -APP XXXX = up to approx chassi NO CH APP XXXX- = from approx chassi NO CH TYPE = chassis type CODE = code (trim code, paint code) COMBU = heater combinable with air conditioning COMPL = complete DSL = diesel E.G.R = exhaust gas recirculation ENG -XXXX = up to engine NO ENG XXXX- = from engine NO EXC = excluding ETC = electronic traction control FOR = for F.STAB = front stabilizer F.S.B = fixed seat belt F.I = injection engine (petrol) H.L.WIPER = headlamp wiper I.DIA = inner diameter IN.BELT = inertia belt INCL = inclusive INTERCOOLER = charge air cooler km = kilometre l = litre LG = length L.H. = left L.H.D = left hand drive L.H.T = traffic driving on the left MAN.TRANS = manual gearbox MARKED = marked mm = millimetre M.W = manual windows NO = number O.DIA = outer diameter O.S = oversize PCS = piece(s) P.S = power steering P.W = power windows R.AX = rear axle RATIO = gear ratio REPL = replaced by R.H. = right R.H.D = right hand drive </p>	<p> R.H.T = traffic driving on the right R.R = raised roof R.STAB = rear stabilizer SEE = see SEE FIG = see fig SPCL = special version S.R = sun roof STD = standard STD.DIM = standard dimension S.W = station wagon THK = thickness TRANS = gearbox TYPE = type U.S = undersize V = volt VAN = van W = watt WI = width W/O = without X = order as required, state required length 4CYL = petrol engine, four cylinders 6CYL = petrol engine, six cylinders 4DRS = 4-door car 5DRS = 5-door car </p> <p> "Country code": e.g.(S)(F) = When the section is specific to a market or markets the nationality symbols for the market(s) concerned are utilized </p> <p> "PS"-kod: EU = exchange unit (see Exchange System Catalogue for further information) IK = included in parts kit KL = included in parts kit + LS KN = included in parts kit + NS LS = stocked only in countries of assembly, not stocked by Volvo Central Warehouses C1, C2 NS = not stocked as spare part OP = no longer stocked by Volvo Central Warehouses C1, C2 SP = superseded part </p> <p> "SR"-kod: 1-6 = denote the stocking grade </p>
--	--