



VOLVO
 Genuine Parts
 PV 640 52117

A	L.H.D W/O P.S					STEERING STEERING GEAR STEERING		STYRNING STYRVÄXEL RATTAXEL		Group	
	B	R.H.D W/O P.S								Grupp	
C		L.H.D P.S					SHAFT				64
D	R.H.D P.S					Page					
E										Sida	
											723
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
1	1229321-3	-	1	-	-	-	Steering gear	Styrväxel	1) CAM	5	
	(1229324)	1	-	-	-	-	•SEE 64-739	•SEE 64-739			
						SP	Steering gear	Styrväxel	2) ZF	5	
	3516943-2	1	-	-	-	-	Steering gear	Styrväxel	240 4DRS CH-APP 374516, 240 5DRS CH -838212. REPL 1 PCS 3516943-2.		
									2) ZF	5	
							•SEE 64-741	•SEE 64-741	240 4DRS, CH APP 374517- 240 5DRS CH 838213-.		
2		-	-	-	-	-	Steering gear	Styrväxel	B200, B230		
				1	1	-			SEE 64-729		
							Servo equipment	Servoutrustning			
				1	1	-	Steering gear	Styrväxel	D24		
									SEE 64-735		
3	1229388-2	2	2	2	2	-	Servo equipment	Servoutrustning			
4	1272597-4	2	2	-	-	-	Locating pin plastics	Styrpinne plast		4	
	1272597-4	-	-	2	2	-	Clamp	Krampa		4	
	1272597-4	-	-	1	1	-	Clamp	Krampa	CAM	4	
5	955894-1	4	4	-	-	-	Clamp	Krampa	ZF	4	
6	948645-7	4	4	-	-	-	Washer	Bricka		2	
7	1205667-7	2	2	-	-	-	Flange lock nut	Flänslåsmutter	(946036)	2	
8	1228508-6	2	2	-	-	-	Spacer	Mellanlägg		4	
	1272678-2	-	-	1	1	-	Brace	Bygel		3	
9	1272679-0	-	-	1	1	-	IK Brace	Bygel		3	
10	955894-1	-	-	4	4	-	IK Intermediate section	Mellanstycke		4	
11	949039-2	-	-	4	4	-	IK Washer	Bricka		2	
12	948645-7	-	-	2	2	-	IK Lock screw	Låsskruv	ZF	2	
	948645-7	-	-	4	4	-	IK Flange lock nut	Flänslåsmutter	(946036) CAM	2	
13	946109-6	2	2	-	-	-	Flange lock nut	Flänslåsmutter	(946036) ZF	2	
	971099-7	-	-	2	2	-	Lock nut	Låsmutter		2	
14	3516354-2	1	1	1	1	-	Flange lock nut	Flänslåsmutter		2	
15		1	1	1	1	-	Steering column	Styrkolonn		4	
16		1	1	1	1	-	•Steering shaft	•Rattaxel			
17	85612-0	1	1	1	1	-	•Steering tube	•Rattrör			
18	85613-8	2	2	2	2	-	•Spring	•Fjäder		3	
19	85611-2	2	2	2	2	-	•Seat	•Säte		3	
20	914456-9	1	1	1	1	-	•Ball bearing	•Kullager		2	
21	973995-4	1	1	1	1	-	•Retaining ring	•Spärring		2	
21a	943582-7	1	-	-	-	-	•Nut	•Mutter		2	
22	85612-0	1	1	1	1	-	Plug	Plugg		3	
23	1221417-7	1	1	1	1	-	Spring	Fjäder		3	
24	1221677-6	1	1	1	1	-	Clamp	Klamma		3	
25	946440-5	2	2	2	2	-	Bushing	Bussning		3	
	946440-5	2	2	2	2	-	Flange screw	Flänsskruv	-1989	2	
	946440-5	1	1	1	1	-	Flange screw	Flänsskruv	1990- W/O C.C	2	
26	3540027-4	1	1	1	1	-	Flange screw	Flänsskruv	1990- C.C	2	
27	1229208-2	1	1	-	-	-	Seal	Tätning		3	
	1229209-0	-	-	1	1	-	Steering shaft lower	Rattstång nedre		4	
28	1229212-4	1	1	-	-	-	Steering shaft lower	Rattstång nedre		4	
	1359404-9	-	-	1	1	-	Joint lower	Knut nedre		4	
	6819550-2	-	-	1	1	-	Joint lower	Knut nedre	240 4DRS CH -475693, 240 5DRS CH -935393. 240 4DRS CH 475694- 240 5DRS CH 935394-.	4	
29	1359403-1	1	1	1	1	-	Joint upper	Knut övre		4	

1) Service plate marked 2. / Serviceskytten märkt 2.
 2) Service plate marked 3. / Serviceskytten märkt 3.

A	L.H.D W/O P.S	STEERING STEERING GEAR STEERING SHAFT					STYRNING STYRVÄXEL RATTAXEL		Group		
	B								R.H.D W/O P.S	Grupp	
C	L.H.D P.S								64		
D	R.H.D P.S								Page		
E									Sida		
									725		
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
30	977294-8	2	2	2	2	-	Flange screw	Flänsskruv	3) (1229343)	2	
31	907819-7	-	-	1	1	-	Split pin	Saxpinne		2	
32	664822-4	2	2	1	1	-	Lock spring	Låsfjäder		1	
33	977107-2	-	-	2	2	-	Flange screw	Flänsskruv	4) (1272992)	3	
34	948645-7	-	-	2	2	-	Flange lock nut	Flänslåsmutter	4)	2	
35	1229260-3	1	1	-	-	-	Protecting sleeve	Skyddshylsa		3	
36		-	-	-	-	-	Steering wheel	Ratt	SEE 64-727		
37		-	-	-	-	-	Column lock	Rattlås	SEE 36-389		
38	3516353-4	1	-	-	-	-	Contact unit	Kontaktenhet	AIR BAG	3	
39		1	-	-	-	-	Anchorage	Fäste	AIR BAG		
40	969403-5	3	-	-	-	-	Screw	Skruv	SEE 36-391 AIR BAG	2	
	271387-3	-	-	1	1	-	Mounting kit	Monteringssats	SEE 64-755	4	

3) For joint 1229212. / För knut 1229212.

4) For joint 1359403, 1359404. / För knut 1359403, 1359404.