

A	360 LHD					P	Description	Benämning	Notes Anmärkning	S
	B	360 RHD								
C		Quantity / Antal			S	Description	Benämning	Notes Anmärkning	S	
D		A	B	C						D
E		P.S					Description	Benämning	Notes Anmärkning	S
1	3290968-1	1	1	-	-	-				
2	945494-3	2	2	-	-	-	Circlip.....	Låsring.....		
3	3290068-0	2	2	-	-	-	Spring.....	Fjäder.....		3
4	3266719-8	2	2	-	-	-	Washer.....	Bricka.....		3
5	3266718-0	2	2	-	-	-	Ball bearing.....	Kullager.....		3
6	3286292-2	1	1	-	-	-	Housing.....	Hus.....		3
7	3288612-9	1	-	-	-	-	Steering column.....	Styrkolonn.....		4
	3288613-7	-	1	-	-	-	Steering column.....	Styrkolonn.....		4
8	955294-4	6	6	-	-	-	Screw.....	Skruv.....		
9	946036-1	2	2	-	-	-	Lock nut.....	Låsmutter.....		
10	955271-2	4	4	-	-	-	Screw.....	Skruv.....		
11	941906-0	4	4	-	-	-	Resilient washer.....	Fjädrande bricka.....		
12	955892-5	4	4	-	-	-	Washer.....	Bricka.....		
13	963105-2	4	4	-	-	-	Nut.....	Mutter.....		
14		-	-	-	-	-	Column lock and.....	Rattlås med.....	SEE 36 • 369	
		-	-	-	-	-	Ignition switch.....	Startlås.....		
15	3271061-8	1	1	-	-	-	Bracket.....	Konsol.....		4
16	959222-1	2	2	-	-	-	Screw.....	Skruv.....		
17	3285869-8	1	-	-	-	-	Connection pipe.....	Anslutningsrör.....		3
	3285870-6	-	1	-	-	-	Connection pipe.....	Anslutningsrör.....		3
18	948645-7	2	2	-	-	-	Nut.....	Mutter.....		
19	3121637-7	2	2	-	-	-	Nut.....	Mutter.....		2
20	3297198-8	1	-	-	-	-	Steering shaft.....	Rattaxel.....		4
	3297199-6	-	1	-	-	-	Steering shaft.....	Rattaxel.....		4
21	3120254-2	1	1	-	-	-	Skrevet.....	Nit.....		3
22	3244205-5	1	-	-	-	-	Axle.....	Axel.....		4
	3212929-8	-	1	-	-	-	Axle.....	Axel.....		4
23	3244210-5	1	-	-	-	-	Bracket.....	Konsol.....		4
	3244211-3	-	1	-	-	-	Bracket.....	Konsol.....		4
24	3244221-2	1	-	-	-	-	Heat shield.....	Värmesköld.....		4
	3244222-0	-	1	-	-	-	Heat shield.....	Värmesköld.....		4
25	3244285-7	1	1	-	-	-	Joint.....	Knut.....		3
26	948069-0	1	1	-	-	-	Screw.....	Skruv.....	(9552985)	
27	963106-0	1	1	-	-	-	Nut.....	Mutter.....	(32702177)	
28	3121638-5	2	2	-	-	-	Screw.....	Skruv.....		2
29	3291748-6	4	4	-	-	-	Washer.....	Bricka.....		2
30	955138-3	5	5	-	-	-	Screw.....	Skruv.....		
31	3290157-1	1	1	-	-	-	Washer.....	Bricka.....		3
32	3205986-7	1	1	-	-	-	Dust cover.....	Dammskydd.....		3
33	3205960-2	1	1	-	-	-	Bushing.....	Bussning.....		3
34	959222-1	2	2	-	-	-	Screw.....	Skruv.....		
35	3283363-4	1	-	-	-	-	Support.....	Stöd.....		3
	3284931-7	-	1	-	-	-	Support.....	Stöd.....		3
36		-	-	-	-	-	Steering gear.....	Styrapparat.....	SEE 64 • 547	2
37	3270132-8	5	5	-	-	-	Spring washer.....	Fjäderbricka.....		2
38	3290053-2	2	2	-	-	-	Screw.....	Skruv.....		2
39	3209055-7	2	2	-	-	-	Plate.....	Platta.....		6
40	3213036-1	-	1	-	-	-	Heat shield.....	Värmesköld.....	(32442311)	3
41	3270034-6	1	1	-	-	-	Screw.....	Skruv.....		3
42	3212778-9	-	1	-	-	-	Bracket.....	Konsol.....		3
43	946440-5	-	1	-	-	-	Screw.....	Skruv.....		
44	3282963-2	-	1	-	-	-	Clip.....	Clips.....		3
45	3298799-2	-	2	-	-	-	Clip.....	Clips.....		3
46	3121482-8	-	2	-	-	-	Clip.....	Clips.....		2
47	3244212-1	1	1	-	-	-	Bracket.....	Konsol.....		4