



| Sida Page | Grupp Group | Radio | Radio | Illustration | 0500 | | | | | | |
|--------------|----------------|-------|-------|--------------|-----------------------|--|---------------------------------------|-------------|------------------|---------------------|------|
| 40 | 9 | | | 16493 | | | | | | | |
| | | | | 1983-03 | | | | | | | |
| Pos. Fig. | Antal/Quantity | | | | Artikel nr Part No | Benämning | Description | Sats Kit | B P S R | Anmärkning Notes | |
| | | | | | | | | | | | |
| 1 | - | - | - | - | | Radio | Radio | | | | |
| | 1 | - | - | - | 1128312-4 | .MW/LW | .MW/LW | 6 | | MONO | 0020 |
| | 1 | - | - | - | 283755-7 | .LM/MW/SW/FM/MPX | .LW/MW/FM | 6 | | MONO | 0040 |
| | 1 | - | - | - | 283745-8 | .LW/MW/SW/FM/MPX | .LW/MW/SW/FM/MPX | 6 | | | 0060 |
| 2 | 1 | - | - | - | 600571-4 | ..Panel | ..Panel | 6 | | FOR 1128312 | 0080 |
| | 1 | - | - | - | 600625-8 | ..Panel | ..Panel | 6 | | FOR 283755 | 0100 |
| | 1 | - | - | - | 600813-0 | ..Panel | ..Panel | 6 | | FOR 283745 | 0120 |
| 3 | 2 | - | - | - | 600441-0 | ..Ytterratt | ..Outer knob | 6 | | | 0140 |
| 4 | 1 | - | - | - | 600448-5 | ..Innerratt, V | ..Inner knob, L | 6 | | | 0160 |
| | 1 | - | - | - | 600448-5 | ..Innerratt, H | ..Inner knob, R | 6 | | STEREO | 0180 |
| | 1 | - | - | - | 600449-3 | ..Innerratt, H | ..Inner knob, R | 6 | | MONO | 0200 |
| 5 | 2 | - | - | - | 600901-3 | ..Rattaxelbricka | ..Washer | 6 | | | 0 |
| 6 | 2 | - | - | - | 600767-8 | ..Rattaxelmutter | ..Nut | 6 | | | 0240 |
| 7 | - | - | - | - | | Kasettradio | Cassette radio | 4 | | | 0260 |
| | 1 | - | - | - | 283764-9 | .LW/MW/FM/MPX | .LW/MW/FM/MPX | 6 | | 4-STEREO EXECUTIVE | 0280 |
| | 1 | - | - | - | 283777-1 | .LW/MW/FM/MPX | .LW/MW/FM/MPX | 6 | | 4-STEREO | 0300 |
| | 1 | - | - | - | 1128318-1 | .MW/LW | .MW/LW | 6 | | 4-STEREO | 0320 |
| 8 | 1 | - | - | - | 601077-1 | ..Panel | ..Panel | 6 | | FOR 283764 | 0 |
| | 1 | - | - | - | 600796-7 | ..Panel | ..Panel | 6 | | FOR 283777 | 0300 |
| 9 | 2 | - | - | - | 600441-0 | ..Ytterratt | ..Outer knob | 6 | | | 0380 |
| 10 | 2 | - | - | - | 600448-5 | ..Innerratt | ..Inner knob | 6 | | | 0400 |
| 11 | 2 | - | - | - | 600901-3 | ..Rattaxelbricka | ..Washer | 6 | | | 0420 |
| 12 | 2 | - | - | - | 600767-8 | ..Rattaxelmutter | ..Nut | 6 | | | 0440 |
| 13 | 1 | - | - | - | 284447-0 | Högtalaresats, svart | Loudspeaker kit, black | 4 | | 5 WATT | 0460 |
| | 1 | - | - | - | 284445-4 | Högtalaresats, brun | Loudspeaker kit, brown | 4 | | 5 WATT | 0480 |
| 14 | 1 | - | - | - | 284508-9 | .Högtalargaller, svart | .Loudspeaker, grille, black | 6 | | | 0500 |
| 15 | 1 | - | - | - | | .Högtalare | .Loudspeaker | 8 | | 5 WATT | 0520 |
| 16 | 1 | - | - | - | | .Hus, svart, brunt | .Housing, black, brown | 8 | | | 0540 |
| 17 | 4 | - | - | - | 955141-7 | .Skruv | .Screw | 2 | | | 0560 |
| 18 | 4 | - | - | - | 946214-4 | .Clips | .Clip | 2 | | | 0600 |
| 19 | 1 | - | - | - | 284458-7 | .Kabel | .Wire | 6 | | | 0620 |
| 20 | 1 | - | - | - | 284491-8 | Distansram, bakre högtalare, svart | Spacer, rear loudspeaker, black | 6 | | | 0640 |
| | 1 | - | - | - | 284455-3 | Distansram, bakre högtalare, brun | Spacer, rear loudspeaker, brown | 6 | | | 0660 |
| 21 | 1 | - | - | - | 283541-1 | Balanskontroll för radio | Potentiometer for radio | 6 | | MONO | 0680 |
| | 1 | - | - | - | 283395-2 | Balanskontroll för radio | Potentiometer for radio | 6 | | STEREO | 0700 |
| 22 | 1 | - | - | - | 284492-6 | Takantenn | Roof antenna | 6 | | | 0720 |