


PARTS CATALOGUE
RESERVDELSKATALOG

440-460 series

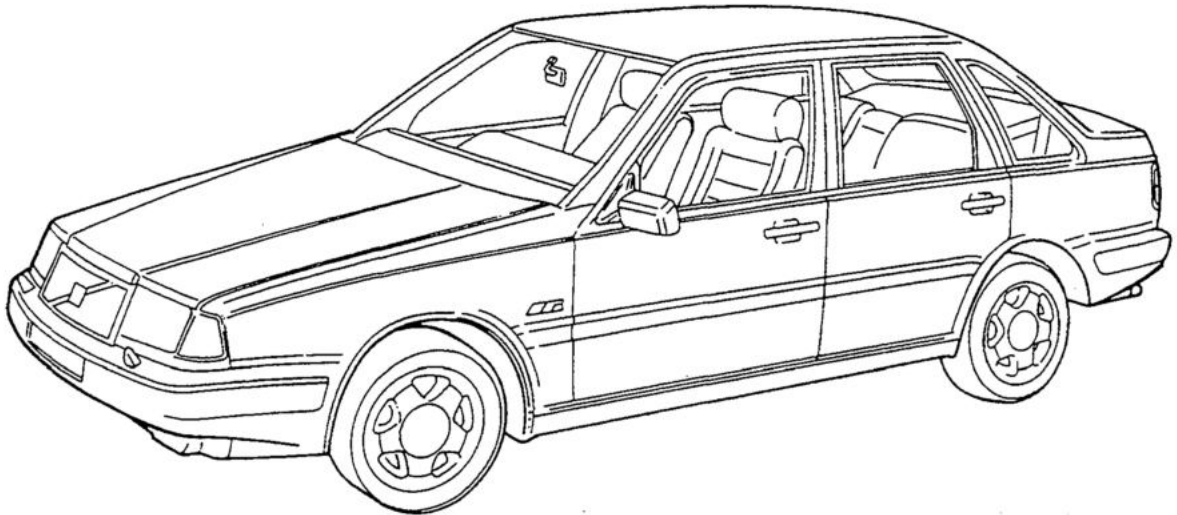

MD 196010(GB /S)

VOLVO

EDITION 08-1995

CATALOGUE AMENDMENT
INFÖRDA ÄNDRINGAR

No. Nr	Inserted on Införd den	No. Nr	Inserted on Införd den	No. Nr	Inserted on Införd den
0	08-1988	7	04-1992	14	03-1995
1	08-1989	8	08-1992	15	08-1995
2	08-1990	9	12-1992		
3	11-1990	10	04-1993		
4	03-1991	11	08-1993		
5	08-1991	12	12-1993		
6	12-1991	13	08-1994		

ABBREVIATIONS (GB)

A	= ampere	R.STAB	= rear stabilizer
ABS	= anti-skid brake system	SEE	= see
A.C	= air conditioning	SEE FIG	= see fig
Ah	= amperehours	SPCL	= special version
ALTER	= alternative	S.R	= sun roof
AUTO.TRANS	= automatic gearbox	S.R.S	= supplemental restraint system
BODY -XXXX	= up to body NO	STD	= standard
BODY XXXX-	= from body NO	STD.DIM	= standard dimension
CARB	= carburettor engine	S.W	= station wagon
CH -XXXXX	= up to chassis NO	THK	= thickness
CH XXXX-	= from chassis NO	TYPE	= type
CH -APP XXXX	= up to approx chassi NO	U.S	= undersize
CH APP XXXX-	= from approx chassi NO	V	= volt
CHMSL	= central high mounted stop light	VAN	= van
CLS	= central locking system	W	= watt
CH TYPE	= chassis type	WI	= width
CODE	= code (trim code, paint code)	W/O	= without
COMBU	= heater combinable with air conditioning	X	= order as required, state required length
COMPL	= complete	4CYL	= petrol engine, four cylinders
CVT	= continuous, shifting transmisson	6CYL	= petrol engine, six cylinders
DSL	= diesel	4DRS	= 4-door car
E.G.R	= exhaust gas recirculation	5DRS	= 5-door car
ENG -XXXX	= up to engine NO		
ENG XXXX-	= from engine NO	"Country code":	
EXC	= excluding	e.g.(S)(F)	= When the section is specific to a market or markets the nationality symbols for the market(s) concerned are utilized
ETC	= electronic traction control		
FOR	= for	"PS"-kod:	
F.STAB	= front stabilizer	EU	= exchange unit (see Exchange System Catalogue for further information)
F.S.B	= fixed seat belt	IK	= included in parts kit
F.I	= injection engine (petrol)	KL	= included in parts kit + LS
H.L.WIPER	= headlamp wiper	KN	= included in parts kit + NS
I.DIA	= inner diameter	LS	= stocked only in countries of assembly, not stocked by Volvo Central Warehouses C1, C2
IN.BELT	= inertia belt	NS	= not stocked as spare part
INCL	= inclusive	OP	= no longer stocked by Volvo Central Warehouses C1, C2
km	= kilometre	SP	= superseded part
l	= litre		
LG	= length	"SR"-kod:	
L.H.	= left	1-6	= denote the stocking grade
L.H.D	= left hand drive		
L.H.T	= traffic driving on the left		
MAN.TRANS	= manual gearbox		
MARKED	= marked		
mm	= millimetre		
M.W	= manual windows		
NO	= number		
O.DIA	= outer diameter		
O.S	= oversize		
PCS	= piece(s)		
P.S	= power steering		
P.W	= power windows		
R.AX	= rear axle		
RATIO	= gear ratio		
REPL	= replaced by		
R.H.	= right		
R.H.D	= right hand drive		
R.H.T	= traffic driving on the right		
R.R	= raised roof		