



VOLVO PARTS  
1064 18648

						STEERING GEAR STEERING SHAFT ADJUSTABLE		STYRVÄXEL RATTAXEL JUSTERBAR		Group Grupp <b>64</b>	
										Page Sida <b>477</b>	
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
1	(3433176)	1	-	-	-	-	SP	Column lock .....	Rattlås .....	(3414438) CH -549567 REPL 1 PCS 3454260-5, 1 PCS 3457197-6. CH 549568-	2
	3454260-5	1	-	-	-	-		Column lock .....	Rattlås .....		2
2	3343569-4	1	-	-	-	-		• Starter switch .....	• Startkontakt .....		2
3	(3416991)	1	-	-	-	-	SP	Lock cylinder .....	Låscylinder .....	CH -503622 REPL 1 PCS 3343232-9, 1 PCS 3454321-5. (3430988) CH 503623-	2
	3454321-5	1	-	-	-	-		Lock cylinder illuminated .....	Låscylinder belyst .....		2
4	3342022-5	2	-	-	-	-		• Key pass key .....	• Nyckel huvudnyckel .....		2
	3342023-3	2	-	-	-	-		• Key door and starting locks ..	• Nyckel dörr och startlås .....		2
5	3290968-1	1	-	-	-	-		Nut .....	Mutter .....		3
6	948069-0	2	-	-	-	-		Hexagon screw .....	Sexkantsskruv .....	(955298)	2
7	963106-0	2	-	-	-	-		Lock nut .....	Låsmutter .....	(3270217)	2
8	3417407-8	1	-	-	-	-		Bearing .....	Lager .....		3
9	3411944-6	1	-	-	-	-		Washer .....	Bricka .....		2
10	3419788-9	1	-	-	-	-		Housing .....	Hus .....	CH -509328 (3434398)	4
	3448142-4	1	-	-	-	-		Housing .....	Hus .....		4
11	3453716-7	1	-	-	-	-		Steering shaft .....	Rattaxel .....	(3449929) EXC SRS	4
	3456969-9	1	-	-	-	-		Steering shaft .....	Rattaxel .....	SRS	4
12	3411604-6	1	-	-	-	-		Bracket .....	Konsol .....	CH -509328	4
	3434659-3	1	-	-	-	-		Bracket .....	Konsol .....	CH -529941	4
	3441681-8	1	-	-	-	-		Bracket .....	Konsol .....	CH 529942-	4
13	946440-5	4	-	-	-	-		Flange screw .....	Flänsskruv .....	CH -509328	2
	945444-8	4	-	-	-	-		Flange screw .....	Flänsskruv .....	CH 509329-	2
14	3411947-9	1	-	-	-	-		Handle .....	Handgrepp .....	CH -509328	3
15	3411948-7	1	-	-	-	-		Stud .....	Pinnskruv .....	CH -509328	2
16	955897-4	1	-	-	-	-		Washer .....	Bricka .....	(906829) CH -509328	2
17	971098-9	1	-	-	-	-		Flange lock nut .....	Flänslåsmutter .....	(944979) CH -509328	2
18	3412015-4	1	-	-	-	-		Bushing .....	Bussning .....		3
	3447137-5	1	-	-	-	-		Bushing .....	Bussning .....	SRS	4
19	3120258-3	1	-	-	-	-		Lock washer .....	Låsbricka .....		3
20	3412281-2	2	-	-	-	-		Screw .....	Skruv .....		2
21	3433809-5	1	-	-	-	-		Bearing .....	Lager .....		3
22	3449059-9	1	-	-	-	-		Buffer .....	Buffert .....	(3413955)	3
23		-	-	-	-	-	NS	Spring .....	Fjäder .....		
24		-	-	-	-	-	NS	Support .....	Stöd .....		
25	3468941-4	1	-	-	-	-		Shaft .....	Axel .....	(3461658)	3
26	(3417161)	1	-	-	-	-	SP	Dust cap .....	Dammkåpa .....	L.H.D REPL 4 PCS 3270186-4, 1 PCS 3450642-8. (3430419) R.H.D REPL 1 PCS 3452172-4, 4 PCS 3270186-4.	4
	(3447937)	1	-	-	-	-	SP	Dust cap .....	Dammkåpa .....		4
27	3417160-3	1	-	-	-	-		Ring .....	Ring .....		4
28		-	-	-	-	-		Steering gear .....	Styrväxel .....	SEE 64-481	
29	3430810-6	1	-	-	-	-		Heat shield .....	Värmesköld .....	L.H.D. EXC TURBO, CH -587960	4
☆	3465289-1	1	-	-	-	-		Heat shield .....	Värmesköld .....	L.H.D. EXC TURBO, CH 587961-	3
	3448036-8	1	-	-	-	-		Heat shield .....	Värmesköld .....	L.H.D. TURBO, CH -587960	4
☆	3473509-2	1	-	-	-	-		Heat shield .....	Värmesköld .....	L.H.D. TURBO, CH 587961-	3
	3432863-3	1	-	-	-	-		Heat shield .....	Värmesköld .....	R.H.D. CH -587960	4
☆	3465291-7	1	-	-	-	-		Heat shield .....	Värmesköld .....	R.H.D. CH 587961-	3
30	948663-0	3	-	-	-	-		Flange screw .....	Flänsskruv .....		2
31	946173-2	1	-	-	-	-		Flange screw .....	Flänsskruv .....		2
32	3122538-6	1	-	-	-	-		Screw .....	Skruv .....		4
33	946470-2	1	-	-	-	-		Flange screw .....	Flänsskruv .....		2
34	3122539-4	1	-	-	-	-		Screw .....	Skruv .....		4
35	948645-7	4	-	-	-	-		Flange lock nut .....	Flänslåsmutter .....		2

A							STEERING GEAR		STYRVÄXEL		Group			
	B							STEERING SHAFT		RATTAXEL		Grupp		
		C							ADJUSTABLE		JUSTERBAR		64	
			D											Page
				E										
										479				
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R			
		A	B	C	D	E								
36	907847-8	2	-	-	-	-	Split pin .....	Saxpinne .....	CH -551432	2				
37	3291524-1	2	-	-	-	-	Castle nut .....	Kronmutter .....	CH -551432	2				
	963119-3	2	-	-	-	-	Lock nut .....	Låsmutter .....	CH 551433-	2				
38	3435303-7	2	-	-	-	-	Bearing .....	Lager .....	CH 511209-	4				
39	3121077-6	1	-	-	-	-	Bolt .....	Bult .....	CH 509329-	2				
40	955897-4	1	-	-	-	-	Washer .....	Bricka .....	CH 509329-	2				
41	948645-7	1	-	-	-	-	Flange lock nut .....	Flänslåsmutter .....	CH 509329-	2				
42	3448022-8	1	-	-	-	-	Handle .....	Handgrepp .....	(3434881)	3				
43	3434837-5	1	-	-	-	-	Spring .....	Fjäder .....	CH 509329-	3				
44	3450024-9	1	-	-	-	-	Spring .....	Fjäder .....	(3434939) CH 509329-	3				
45	3411803-4	1	-	-	-	-	Housing .....	Hus .....		3				
	3447134-2	1	-	-	-	-	Housing .....	Hus .....	SRS	4				
46	3457197-6	1	-	-	-	-	Bushing .....	Bussning .....		3				
47	3450642-8	1	-	-	-	-	Dust cap .....	Dammkåpa .....	L.H.D	4				
	3452172-4	1	-	-	-	-	Dust cap .....	Dammkåpa .....	R.H.D	4				
48	3270186-4	4	-	-	-	-	Rivet .....	Nit .....		2				
49	3446953-6	1	-	-	-	-	Cap .....	Överfall .....		3				
50	942327-8	1	-	-	-	-	Bulb .....	Glödlampa .....		1				