


1. Flasher and parking light, left
2. Headlight, left
3. Spot light
4. Horn
5. Fog light
6. Headlight, right
7. Flasher and parking light, right
8. Connector
9. Relay for fog light
10. Junction block
11. Relay for fog light
12. Relay for headlight signal
13. Switch, on gearbox for reversing light
14. Distributor
15. Relay for signal
16. Relay for reversing light
17. Fusebox
18. Relay for overdrive
19. Switch, on gearbox, for overdrive
20. Ignition coil
21. Oil pressure warning indicator
22. Alternator
23. Charging control
24. Dipper switch
25. Solenoid for overdrive
26. Engine compartment light
27. Starter motor
28. Windscreen washer
29. Battery
30. Revolution counter
31. Brake contact
32. Door contact, left
33. Light signal device, direction indicator lever switch
34. Horn
35. Overdrive switch
36. Roof light
37. Roof light switch
38. Flasher unit, direction indicators
39. Door contact, right
40. Warning lamp for battery charging
41. Control lamp for headlights
42. Control lamp for direction indicators
43. Control lamp for oil pressure
44. Fuel gauge
45. Instrument lighting
46. Windscreen wipers
47. Car heater
48. Control lamp for overdrive
49. Switch for fog light
50. Switch for windscreen wipers and washer
51. Switch for headlights and parking lights
52. Ignition switch
53. Cigarette lighter
54. Switch for car heater
55. Glove locker light
56. Switch for glove locker light
57. Fuel gauge impulse unit
58. Rear lamp, left
59. Luggage compartment light
60. Number plate light
61. Rear lamp, right

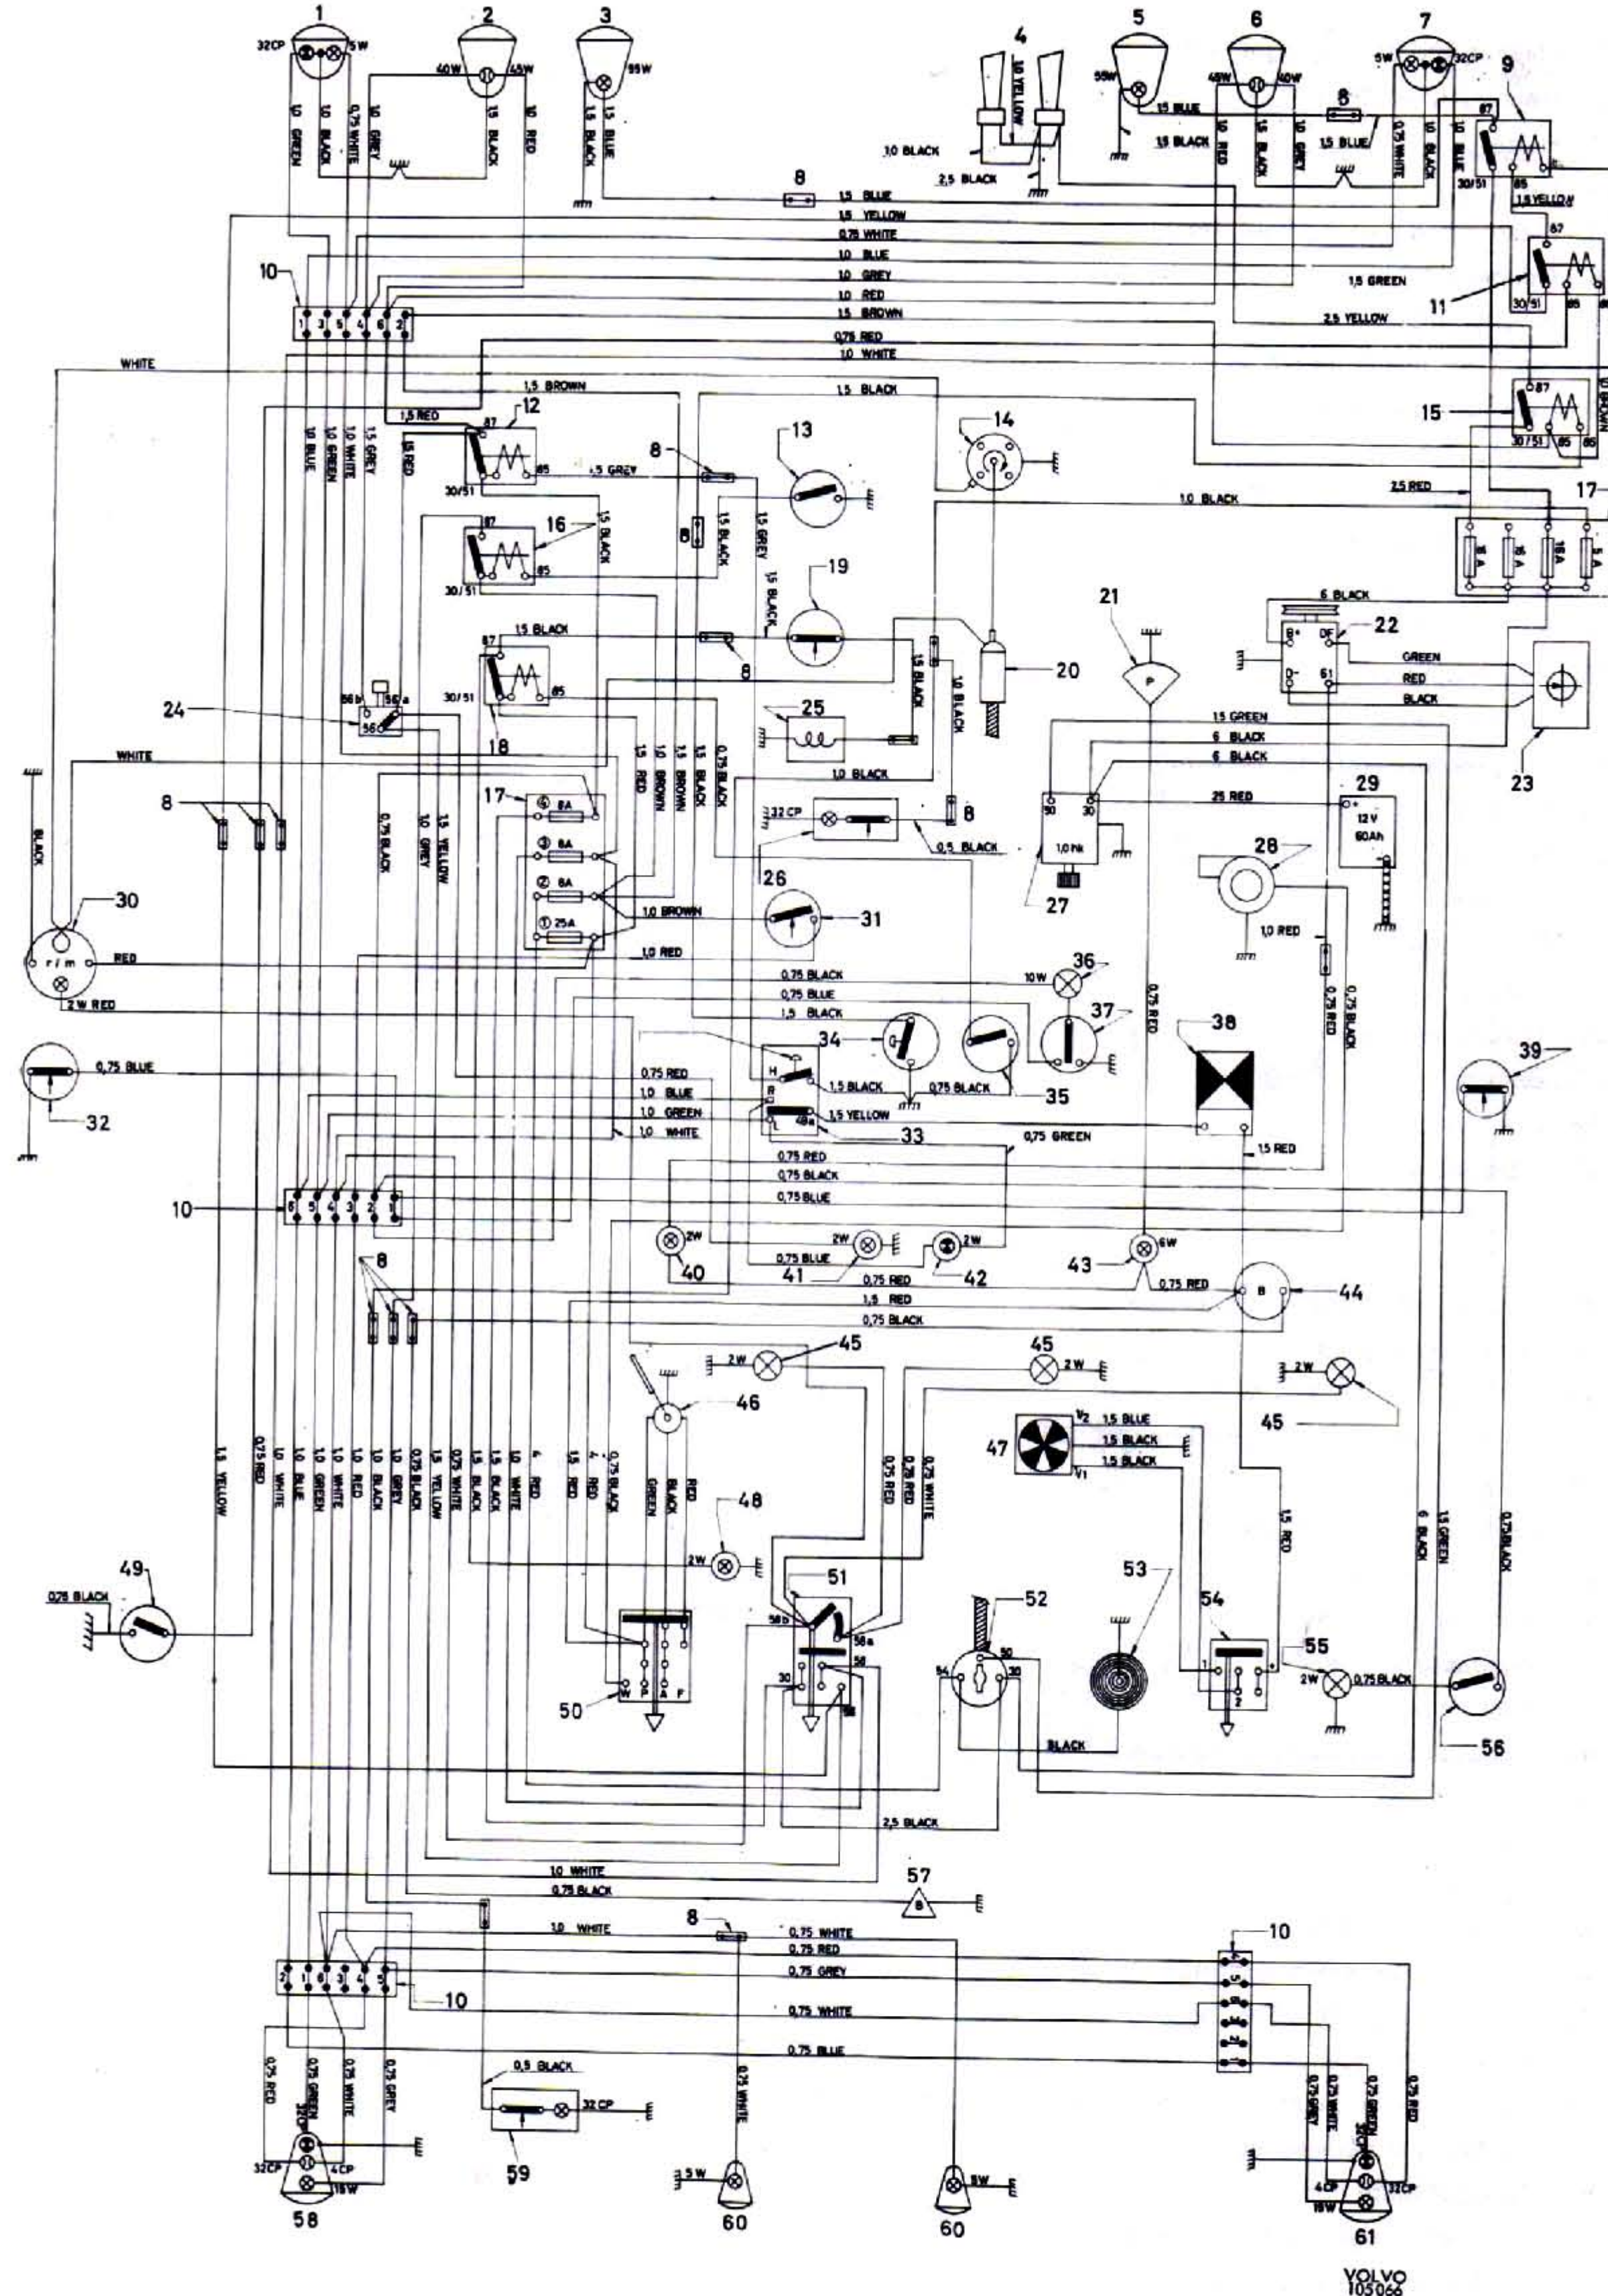

[www.ClassicKabelboomCompany.com](http://www.ClassicKabelboomCompany.com)

# WIRING DIAGRAM

from ch. No. 216950 to ch. No. 312499, GT-model