



- 88. Butterfly nut
- 89. Clamp ring
- 90. Valve adjuster screw
- 91. Lock nut
- 92. Rocker arm
- 93. Leak-off line
- 94. Injector
- 95. Nut
- 96. Stud for injector
- 97. Seal ring
- 98. Copper sleeve
- 99. Delivery pipe
- 100. Clamp for delivery pipe
- 101. Cylinder head nut
- 102. Stud for cylinder head
- 103. Fuel injection pump
- 104. Cold starting device
- 105. Fuel feed pump
- 106. Hand primer pump lever
- 107. Pump coupling
- 108. Bracket for fuel injection pump
- 109. Oil relief valve
- 110. Pre-filter
- 111. Oil filter
- 112. Drain plug
- 113. Gasket
- 114. Main bearing stud
- 115. Pressure line from oil pump
- 116. Lock washer
- 117. Nut
- 118. Oil pressure valve
- 119. Clamp
- 120. Starter motor
- 121. Guide sleeve for main bearing cap
- 122. Drive gear for oil pump
- 123. Valve lifter
- 124. O-rings
- 125. Cylinder liner
- 126. Evacuating pipe
- 127. Lower oil control ring
- 128. Push rod
- 129. Gasket for inspection cover
- 130. Upper oil control ring
- 131. Lower compression rings
- 132. Upper compression ring
- 133. Gasket for induction manifold
- 134. Induction manifold
- 135. Throttle housing
- 136. Lever for throttle flap
- 137. Adjuster screw for idling speed
- 138. Adjuster screw for maximum engine speed

VOLVO
21890

Illustration 1-B. D 67 A Diesel engine, transverse section