



Fig. 11. Clutch control
The unnumbered parts concern the foot brake control.
See the illustration and text in question.

Fig.

<u>No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Qty.</u>
<u>CLUTCH CONTROL</u>			
<u>Clutch pedal, consisting of:</u>			
11- 1	. Clutch pedal, upper section	87111	1
11- 2	. Clutch pedal, lower section, complete	87110	1
11- 3	. . Bushing	83154	2
11- 4	. Clamp screw	902280	1
11- 5	Rubber pad	83079	1
11- 6	Rubber seal at toe-plate	87130	1
11- 7	. Washer	87487	1
11- 8	<u>Shaft</u> for brake and clutch pedals	87404	1
11- 9	. Lubricator	180224	1
11-10	. Plug	180740	1
11-11	Rubber seal between pedals	87491	2
11-12	Rubber seal ring at clutch pedal	87490	1
11-13	. Washer	87489	1
11-14	Lock ring on shaft	914451	2
11-15	Support plate, pedal shaft - master cylinder	87115	1
11-16	. Bolt, support plate - master cylinder, length = 14 mm	101924	1
11-17	. Bolt, support plate - master cylinder, length = 75 mm	902291	1
11-18	. . Nut	906576	1
11-19	. . Spring washer	906990	2
11-20	Thrust link, clutch pedal - intermediary shaft	87120	1
11-21	. Cotter pin	907844	2
11-22	<u>Intermediary shaft</u> with welded levers	87116	1
11-23	. Felt ring	19238	1
11-24	. Washer	120135	1
11-25	. . Cotter pin	907844	1
11-26	Anchorage for intermediary shaft (also for return spring)	87800	1
11-27	. Bolt	902279	2
11-28	. . Spring washer	906990	2
11-29	. Lubricator in anchorage	914169	1
11-30	Rubber seal for intermediary shaft (at anchorage)	87795	1
11-31	Thrust link, lever on intermediary shaft - release yoke	87122	1
11-32	. Adjuster nut	87123	1
11-33	. . Lock nut	951209	1
11-34	. Cotter pin at lever	907844	1
11-35	. Cotter pin at release yoke	907821	1