

Electrical equipment

<u>Description</u>	<u>Part No.</u>	<u>Qty.</u>
<u>Relay</u> for dynamo, Auto-Lite, VRP-6003	72942 ¹⁾	1
. Screw	115478	3
. . Spring washer	906987	3
<u>Relay</u> for dynamo, Bosch: RS/UA 160/6/30	77882 ²⁾	1
. Screw	14193	4
. . Spring washer	906985	4
<u>Relay</u> for dynamo, Bosch: RS/UA 160/6/16	76811 ³⁾	1
. Screw, self-tapping	107430	3
<u>Pulley</u> for dynamo (included in complete dynamo)	72967 ⁴⁾	1
. Nut	72567	1
. . Spring washer	906998	1
. Woodruff key	910113	1
<u>Pulley</u> for dynamo	403443 ⁵⁾	1
<u>Bracket</u> for dynamo	403268 ⁴⁾	1
<u>Bracket</u> for dynamo	403442 ^{6,8)}	1
<u>Bracket</u> for dynamo	403572 ^{7,8)}	1
. Bolt	902278	3
. . Lock washer	15278	1
<u>Bracket</u> for dynamo	403880 ⁹⁾	1
. Rubber bushing	403877 ⁹⁾	6
. . Washer	403878 ⁹⁾	6
. . Spacer sleeve	403879 ⁹⁾	3
. Screw	902282 ⁹⁾	3
. . Lock washer	15278	1

1. Up to chassis No. 37723.
2. For chassis Nos. 37724-62621.
3. From chassis No. 62622 onwards.
4. Up to engine No. 43099.
5. From engine No. 43100 onwards.
6. For engines Nos. 43100-73048, 74630-75219.
7. For engines Nos. 73049-74629, 75220-139165.
8. Replaced by all components marked "9".
9. From engine No. 139166 onwards.

Electrical equipment

<u>Description</u>	<u>Part No.</u>	<u>Qty.</u>
Bolt, bracket - dynamo	104505 ¹⁾	2
. Nut	903470	2
. . Cotter pin	907823	2
Bolt, bracket-dynamo	902307 ²⁾	2
. Nut	10593	2
. . Spring washer	906993	2
<u>Tensioner arm for dynamo</u>	403381	1
. Screw at dynamo	101925	1
. . Base washer	11962	1
. . Spring washer	906990	1
. Screw in cylinder block (also for water pump)	902283	1
. . Copper washer	11992	1
<u>Drive belt for dynamo and fan</u>	403109	1

1. Up to engine No. 75219 except Nos. 73049-74629.

2. From engine No. 75220 onwards as well as Nos. 73049-74629.