

Electrical equipment

<u>Fig. No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Qty.</u>
	Rubber gasket for directional indicator	88898	1
	Screw for directional indicator, length = 16 mm	115478	1
	Screw for directional indicator, length = 22 mm	115090	1
	. Lock washer	11944	2
	. Base washer	94761	1
	<u>Side directional indicator and associated parts</u>		
	Directional indicator, complete, black	88743 <sup>1)</sup>	2
	. Bulb	11496	2
	Directional indicator, complete, black	651780 <sup>2,3)</sup>	2
	Directional indicator, left, complete, pearl-grey	89713 <sup>2)</sup>	1
	Directional indicator, right, complete, pearl-grey	89714 <sup>2)</sup>	1
	Directional indicator, complete, pearl-grey	651783 <sup>3)</sup>	2
	Directional indicator, left, complete, red	89711 <sup>2)</sup>	1
	Directional indicator, right, complete, red	89712 <sup>2)</sup>	1
	Directional indicator, complete, red	651782 <sup>3)</sup>	2
	Directional indicator, left, complete, dark-blue	651765 <sup>2)</sup>	1
	Directional indicator, right, complete, dark-blue	651766 <sup>2)</sup>	1
	Directional indicator, complete, dark-blue	651785 <sup>3)</sup>	2
	. Bulb for directional indicator	182047	2
	. Bulb for parking light	11497 <sup>2)</sup>	2
	Rubber gasket for directional indicator	88744 <sup>1)</sup>	2
	Rubber gasket for directional indicator	89728 <sup>2)</sup>	2
	Screw, self-tapping, for directional indicator	106933	4
	. Spring washer	906985	4
	Switch for directional indicator parking light	77593 <sup>2)</sup>	1
	<u>Control switch for directional indicators from chassis No. 26904 onwards</u>		
	<u>Control switch, complete, consisting of:</u>		
22a-70	. Housing for switch (on jacket tube)	88455	1
22a-71	. . Clamp screw	105181	1
22a-72	. <u>Switch</u>	88316	1
22a-73	. . Screw	14065	2
22a-74	. Lever	88761	1

1. Up to chassis No. 68955.
2. For chassis Nos. 68956-108313.
3. From chassis No. 108314 onwards.

Fig.

<u>No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Qty.</u>
22a-75	. . Companion	88762	1
22a-76	. . Rubber cushion	88469	1
22a-77	. . Adjuster washer	11960	1
22a-78	. . . Cotter pin	907821	1
22a-79	. Companion sleeve on steering wheel	88763	1
22a-80	. . Screw	14284	2
22a-81	. <u>Lever</u> for switch	117109	1
22a-82	. . Button	88321	1
22a-83	. <u>Automatic blinker unit</u>	89111	1
22a-84	. . Spring clamp	88769	1
22a-85	. Cable harness, switch-automatic blinker unit	88803	1
<u>Control switch for directional indicators</u> <u>from chassis Nos. 26905 onwards.</u>			
<u>Control switch, complete, consisting of:</u>			
22a-70	. Housing for switch (on jacket tube)	88833	1
22a-71	. . Clamp screw	105181	1
22a-72	. <u>Switch</u> with cables	88835 <sup>1)</sup>	1
	. Switch with cables	89473 <sup>2)</sup>	1
22a-73	. . Screw	115493	4
	. . . Lock washer	951692	4
	. Slotted pin in steering wheel, for cancellation	951126	1
22a-81	. <u>Lever</u> for switch	88836 <sup>3)</sup>	1
	. . Flange ring, lever-switch	88837 <sup>3,5)</sup>	1
	. Lever with flange ring for switch	89480 <sup>4)</sup>	1
	. . Nut	151229	1
22a-83	. <u>Automatic blinker unit</u>	89111	1
22a-84	. . Spring clamp	88769	1

1. For chassis Nos 26905-56220.
2. From chassis No. 56221 onwards.
3. For chassis Nos. 26905-65061.
4. From chassis No. 65062 onwards.
5. Replaced by 1 lever No. 89480.

Electrical equipment

<u>Description</u>	<u>Part No.</u>	<u>Qty.</u>
<u>ELECTRICAL CABLES</u>		
<u>Ignition cable</u> , complete, for 1st and 2nd cylinders	17535	2
Ignition cable, complete, for 3rd cylinder	17533	1
Ignition cable, complete, for 4th cylinder	17534	1
. Clamp cable terminal at distributor cap	11569	4
. Tubular cable terminal at sparking plug	48715	4
Rubber protector for ignition cables	20366	4
<u>High tension cable</u> , complete, distributor - ignition coil	655986	1
. Cable	11925	x)
. Clamp cable terminal	11569	2
Rubber protector for high tension cable	20366	2
<u>Low tension cable</u> , complete, distributor - ignition coil	88613	1
. Cable terminal	11423	2
. Rubber protector	83403	2
Earthing cable for engine	11525	1
. Screw	902302	1
. . Base washer	11964	1
. . Spring washer	906993	1
Earthing cable, complete, for battery	11524	1
. Screw for cable terminal	105154	1
. . Nut	151205	1
<u>Starter motor cable</u> , complete	11830	1
. Cable, red	11580	x)
. Cable terminal at battery	13748	1
. . Screw	105154	1
. . . Nut	151205	1
. Cable terminal at starter motor	11403	1
. . Protector sleeve	140127	1

x. State required length.