



Fig. 16

Fuel pump

Fig. No.	Description	Part No.	Qty.
	<u>Fuel pump, cpl., AC: 1524489</u>	403269	1
16- 1	. Lower section, cpl.	61943	1
16- 2	. . Hand lever, shaft and spring, packed as set	73526	1
16- 3	. . Spring	73527	1
16- 4	. . Stop screw	115263	1
16- 5	. . Copper washer	18806	1
16- 6	. Rocker arm	73542	1
16- 7	. Shaft	73529	1
16- 8	. Spacer washer	61947	2
16- 9	. Lock ring	70498	2
16-10	. Spring	61949	1
16-11	. Link arm	61945	1
16-12	. <u>Diaphragm</u>	61942	1
16-13	. Return spring	73530	1
16-14	. Seal washer, rubber, for pull rod	234002	1
16-15	. Retainer	234003	1
16-16	. <u>Upper section</u>	73533	1
16-17	. Valve	73580	2
16-18	. Gasket	73582	1
16-19	. Retainer	73536	1
16-20	. Screw	950003	2
16-21	. Strainer	73537	1
16-22	. Glass bowl	73575	1
16-23	. Cork gasket	18780	1
16-24	. Brace	73539	1
16-25	. Screw	115265	6
16-26	. Spring washer	906985	6
16-27	<u>Spacer</u>	301002	1
16-28	Gasket	61830	2
16-29	Bolt	902282	2
16-30	Spring washer	906990	2
	<u>Hose, fuel pump - carburetor</u>	652137 ¹⁾	1
	Elbow screw connection at fuel pump	16218 ¹⁾	1
	Fuel line (steel piping), 5/16", fuel pump - carburetor	954315 ²⁾	*
	Elbow union	954343 ²⁾	2
	Union nut	954322 ²⁾	2
	Clamp for fuel line	18351 ²⁾	1
	Bolt	902276 ²⁾	1

1. In conjunction with B 16 B engines.

2. In conjunction with B 16 A and B 16 D engines.

* State required length.