

Fig. No.	Description	Part No.	G
	<u>Stop and rear light, see rear directional indicator</u>		
	<u>Housing, for rear number plate lighting</u>	655361 <sup>1)</sup>	
	Rubber casing	655947	
	Bulb	11480	
	Lens	655362	
	Frame	655363	
	Screw	190287	
	<u>Interior lamp, cpl.</u>	96635	
	. Anchorage plate with switch	96890	
	. Lens	96981	
	. Bulb	182057	
	Screw	106986	
	Door switch	95084	
	<u>Instrument lighting</u>		
	<b>Bulb for instrument lighting</b>	19901	
	Bulb for headlamp warning lamp	19901	
	Bulb for directional indicator warning lamp	19901	
	Socket	82159	
	Spring	82385	
	Bushing	82386	
	Washer	82387	
	Rheostat switch	88281	
	Screw	950008	
	Lock washer	658184	
	<u>Directional indicator, forward, cpl.</u>	651801	
	. Housing (rubber cover)	651958	
	. Lens	651962	
	. Frame for lens	651960	
	. Socket	651963	
	Bulb	19897	
	Rubber cover, L	655872 <sup>2)</sup>	
	Rubber cover, R	655873 <sup>2)</sup>	
	Screw	955123 <sup>2)</sup>	
	Screw	955119 <sup>3)</sup>	

1. Replaced by 1 pc. 660054 and 1 pc. 660569.
2. P 44408.
3. P 44403-04 and P 44409.

Fig. No.	Description	Part No.	Qty.
	<u>Directional indicator, rear, and stop and rear lights, cpl.</u>	654916	2
	. Housing (rubber cover)	651958	2
	. Lens	651959	2
	. Frame	651960	2
	. Socket	651963	2
	Bulb	19897	2
	Screw	106908 <sup>1)</sup>	6
	Rubber cover, early prod.	655358 <sup>1)</sup>	2
	Screw, long	655359 <sup>1)</sup>	2
	Screw, short	655360 <sup>1)</sup>	4
	Metal cover, L, late prod.	655605	1
	Metal cover, R, late prod.	655606	1
	Seal strip (rubber)	13319	*
	Screw	14925	4
	<u>Switch for directional indicators; see page 76:1</u>		

1. P 44408.

\* State required length.