


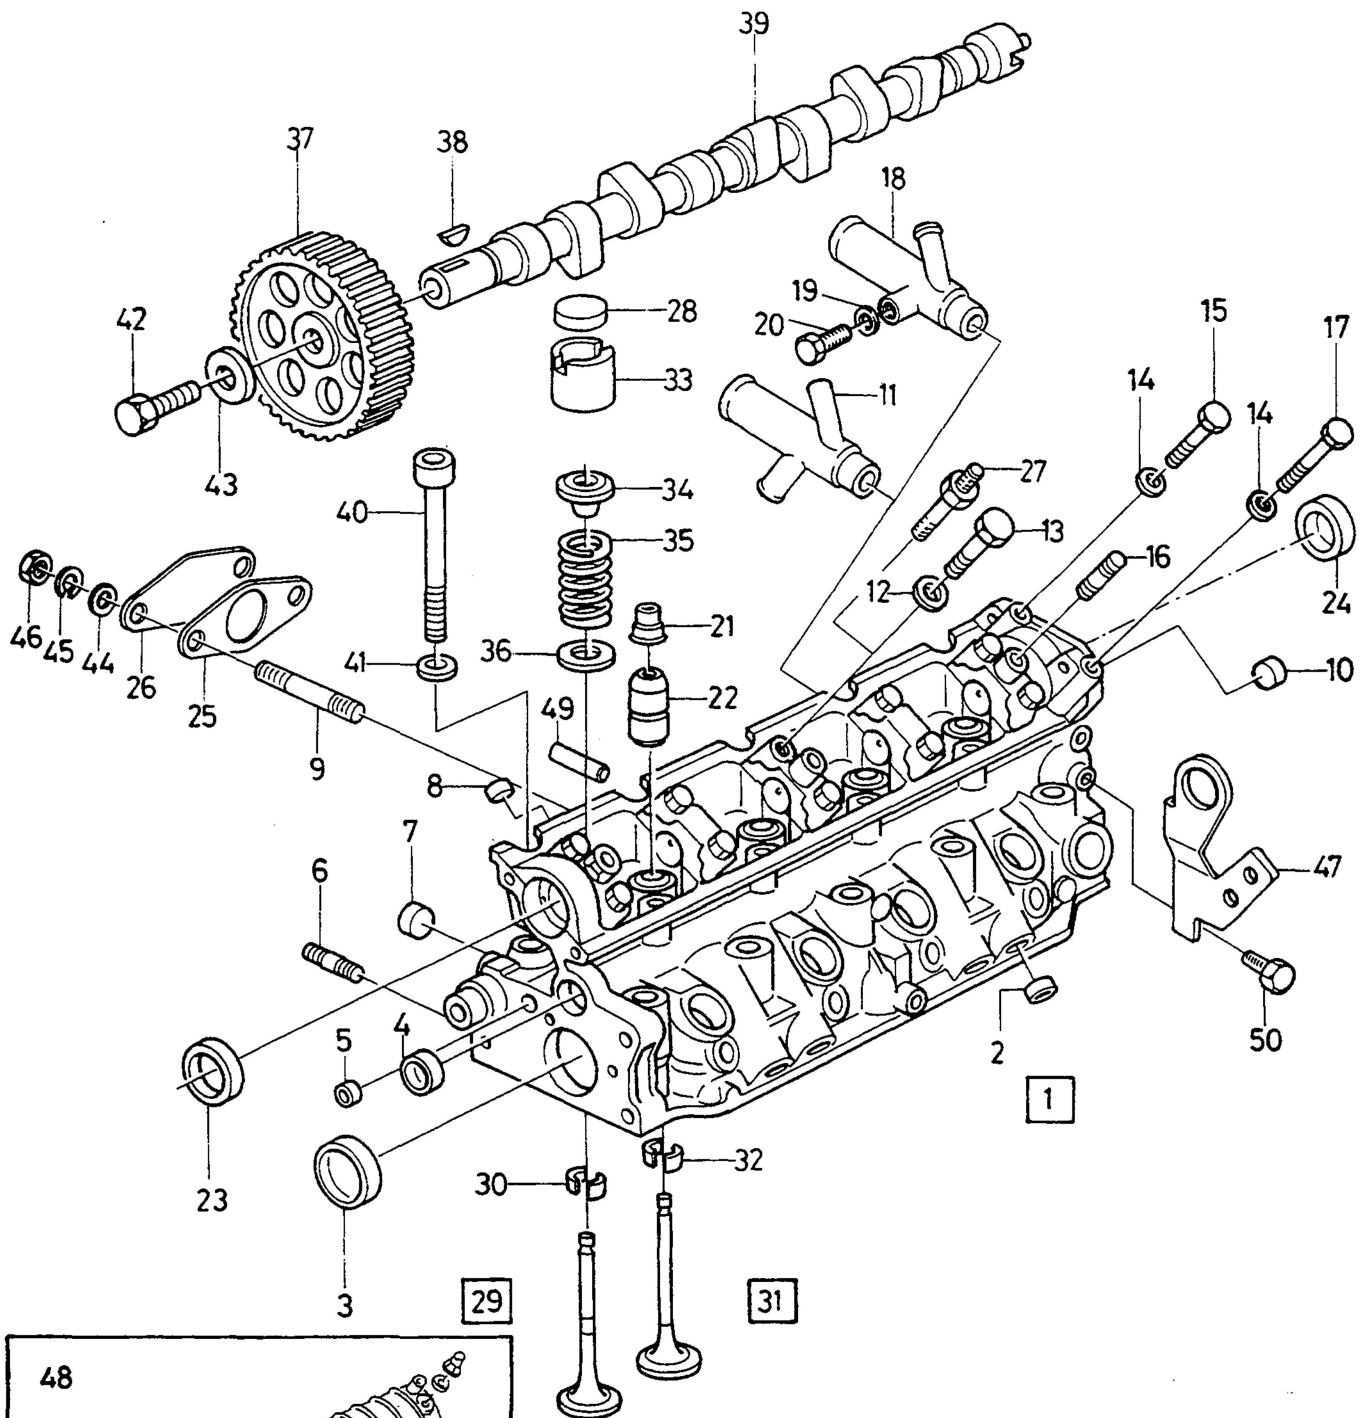

VOLVO PARTS
1021 18753

A		B18E,ED,ES					CYLINDER HEAD		CYLINDERHUVUD		Group Grupp	
B		B18F									21	
C		B18EP,FP									Page Sida	
D		TURBO									93	
E		B20F										
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R	
		A	B	C	D	E						
1	(3342392)	1	-	-	-	-	SP	Cylinder head	Cylinderhuvud	ENG -15423 REPL 1 PCS 3343717-9, 1 PCS 3345100-6, 1 PCS 3343793-0, 6 PCS 3343730-2, 6 PCS 3923332-5, 6 PCS 3923330-9.	3	
	3343717-9 (3343052)	1	-	1	-	-	SP	Cylinder head	Cylinderhuvud	ENG 15424- ENG -01386 REPL 1 PCS 3343719-5, 6 PCS 3923332-5, 1 PCS 3343793-0, 6 PCS 3343730-2, 1 PCS 3345100-6, 6 PCS 3923330-9.	3	
		-	1	-	-	-					3	
	3343717-9 (3343053)	-	1	-	-	-	SP	Cylinder head	Cylinderhuvud	ENG 01387- CH 540658- ENG -01059 REPL 1 PCS 3343719-5, 1 PCS 3345100-6, 1 PCS 3343793-0, 6 PCS 3343730-2, 6 PCS 3923332-5, 6 PCS 3923330-9.	3	
		-	-	-	1	-					3	
	3343719-5	-	1	-	1	-		Cylinder head	Cylinderhuvud	(3343718) ENG 01060-	3	
	3345033-9	-	-	-	-	1		Cylinder head	Cylinderhuvud		3	
2	3345189-9	4	4	4	4	4		• Plug	• Propp		5	
3	3345287-1	1	1	1	1	1		• Plug	• Propp	(8421211) O.DIA 45mm	5	
	3345191-5	1	1	1	1	1		• Plug	• Propp	O.DIA 38mm	3	
4	3287553-6	1	1	1	1	1		• Cover	• Huv		3	
5	3345188-1	1	1	1	1	1		• Plug	• Propp		3	
6	3287760-7	10	-	10	-	1		• Stud	• Pinnskruv		2	
	3287760-7	-	10	-	10	-		• Stud	• Pinnskruv	(3343036)	2	
7	3345189-9	1	1	1	1	1		• Plug	• Propp		5	
8	3345237-6	4	4	4	4	4		• Plug	• Propp		3	
9	3103872-2	2	2	2	2	2		• Stud	• Pinnskruv		2	
10	3345237-6	1	1	1	1	1		• Plug	• Propp		3	
11	3342394-8	1	-	-	-	-		• Pipe	• Fäströr	CH -519426	4	
	3343056-2	-	1	1	1	-		• Pipe	• Rör	CH 519427-550672	4	
	3344776-4	-	-	-	-	1		• Pipe	• Rör	CH -584393	4	
	3343728-6	-	-	-	-	1		• Pipe	• Rör	CH 584394-	4	
12	120265-4	8	8	8	8	8		• Washer	• Bricka		2	
13	963222-5	8	8	8	8	8		• Screw	• Skruv		5	
14	8422112-6	2	2	2	2	2		• Washer	• Bricka		5	
15	940101-9	1	1	1	1	1		• Screw	• Skruv		2	
16	3267243-8	3	3	3	3	3		• Stud	• Pinnskruv	(3287761)	2	
17	948081-5	1	1	1	1	1		• Lock screw	• Låsskruv	(955279)	2	
	3344776-4	-	-	1	1	1		• Pipe	• Rör	(3344449)	4	
19	3457467-3	-	-	1	1	1		• Gasket	• Packning	CH 550673-	2	
20	3104031-4	-	-	1	1	-		• Screw	• Skruv	CH 550673-569752	2	
	3104031-4	-	-	1	1	1		• Screw	• Skruv	(3462810) CH 569753-	2	
21	3344260-9	1	-	-	-	-		• Valve seal kit	• Ventilättningsats	CH -518499	2	
	3344261-7	1	1	1	1	1		• Valve seal kit	• Ventilättningsats	CH 518500-	2	
22	(3343771)	8	-	-	-	-	SP	• Valve guide	• Ventilstyrning	STD. CH -518499 REPL 1 PCS 3343624-7, 1 PCS 3344261-7.	2	
	3343624-7	8	8	8	8	8		• Valve guide	• Ventilstyrning	STD. CH 518500-	2	
	(3342395)	8	-	-	-	-	SP	• Valve guide	• Ventilstyrning	O.S 1 13.36mm	2	
	3343772-4	8	8	8	8	8		• Valve guide	• Ventilstyrning	CH -518499 REPL 1 PCS 3343772-4, 1 PCS 3344261-7.	2	
										O.S 1 13.36mm		
										CH 518500-		

A		B18E,ED,ES					CYLINDER HEAD		CYLINDERHUVUD		Group Grupp	
B		B18F									21	
C		B18EP,FP									Page Sida	
D		TURBO									95	
E		B20F										
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R	
		A	B	C	D	E						
23	3287556-9	1	1	1	1	1		• Sealing ring	• Tätningsring	(3342090)	2	
24	3344397-9	1	1	1	1	1		• Sealing ring	• Tätningsring		2	
25	3462131-8	1	1	1	1	1		• Gasket	• Packning		5	
26	8420352-0	1	1	1	1	1		• Plug	• Plugg		5	
27	(3343727)	6	6	6	6	-	SP	• Bolt	• Bult		5	
28	3923330-9	6	6	6	6	6		• Stop screw	• Anslagsskruv	CH -569701 REPL 1 PCS 3923330-9, 1 PCS 3923332-5. CH 569702-	5	
	3287965-2	1	1	1	1	1		• Adjusting washer kit	• Justerbricksats		3	
	3287535-3	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287534-6	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287533-8	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287532-0	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287531-2	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287530-4	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287529-6	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287528-8	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287527-0	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287526-2	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287525-4	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287524-7	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287523-9	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287522-1	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287539-5	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287538-7	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287537-9	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287536-1	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287521-3	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287520-5	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287519-7	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287518-9	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287517-1	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
	3287516-3	X	X	X	X	X		• Adjusting washer	• Justerbricka		2	
29	3342278-3	4	4	4	-	-		• Inlet valve	• Inloppsventil		2	
	3343753-4	-	-	-	4	-		• Inlet valve	• Inloppsventil		2	
	3344841-6	-	-	-	-	4		• Inlet valve	• Inloppsventil		2	
	3343739-3	4	4	4	4	4		• Lock	• Lås		5	
30	3343738-5	4	4	4	-	-		• Exhaust valve	• Avgasventil	(3342108) (3342399)	2	
31	3343754-2	-	-	-	4	-		• Exhaust valve	• Avgasventil		2	
32	3344842-4	-	-	-	-	4		• Exhaust valve	• Avgasventil	(8420816)	2	
	3343739-3	4	4	4	4	4		• Lock	• Lås		5	
33	3342107-4	8	8	8	8	8		• Tappet	• Ventillyftare	2		
34	3287782-1	8	8	8	8	-		• Washer	• Bricka	2		
	3463757-9	-	-	-	-	8		• Washer	• Bricka	2		
35	3342398-9	8	8	8	8	-		• Valve spring	• Ventilfjäder	2		
	3467750-0	-	-	-	-	8		• Valve spring	• Ventilfjäder	2		
36	3459483-8	8	8	8	8	8		• Washer	• Bricka	2		
37	3342101-7	1	1	1	1	1		Pulley	Remskiva	3		
38	8416766-7	1	1	1	1	8		Wedge	Kil	5		
39	3342397-1	1	-	-	-	-		Camshaft	Kamaxel	CH-540196 CH 540197-	2	
	3343058-8	-	1	-	-	-		Camshaft	Kamaxel		2	
	3344305-2	-	-	1	-	1		Camshaft	Kamaxel		2	
	3343059-6	-	-	-	1	-		Camshaft	Kamaxel		2	
	3448743-9	-	-	-	1	-		Camshaft	Kamaxel		2	
40	3287762-3	10	10	10	10	10		Screw	Skruv	2		
41	3287763-1	10	10	10	10	10		Washer	Bricka	2		
42	3287963-7	1	1	1	1	1		Screw	Skruv	5		
43	8416584-4	1	1	1	1	1		Washer	Bricka	5		
44	955894-1	2	2	2	2	2		Washer	Bricka	2		
45	955921-2	2	2	2	2	2		Spring washer	Fjäderbricka	2		
46	961991	2	2	2	2	2	OP	Nut	Mutter	2		
47	3343467-1	1	1	-	1	-		Lifting eye	Lyftögla	ENG-4519	4	

A		B18E,ED,ES					CYLINDER HEAD		CYLINDERHUVUD		Group Grupp	
B		B18F									21	
C		B18EP,FP									Page Sida	
D		TURBO									97	
E		B20F										
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R	
		A	B	C	D	E						
48	3343468-9	1	1	1	1	-		Lifting eye	Lyftögla	ENG 4520-	4	
								Cylinder head exchange unit	Cylinderhuvud utbytesenhet			
	9031220-8	1	-	-	-	-	EU	Cylinder head	Cylinderhuvud		6	
	9031221-6	-	1	-	-	-	EU	Cylinder head	Cylinderhuvud	CH-540657	6	
	9031218-2	-	1	-	-	-	EU	Cylinder head	Cylinderhuvud	CH 540658-	4	
	9031216-6	-	-	1	-	-	EU	Cylinder head	Cylinderhuvud		4	
	9031222-4	-	-	-	1	-	EU	Cylinder head	Cylinderhuvud	CH-540196	6	
	9031217-4	-	-	-	1	-	EU	Cylinder head	Cylinderhuvud	CH 540197-	4	
	9031226-5	-	-	-	-	1	EU	Cylinder head	Cylinderhuvud	CH -518499	3	
49	9031227-3	-	-	-	-	1	EU	Cylinder head	Cylinderhuvud	CH 518500-	3	
	3418821-9	4	4	4	4	4		Locating pin	Styrpinne		3	
50	946515-4	2	2	2	2	2		Screw	Skruv		2	