
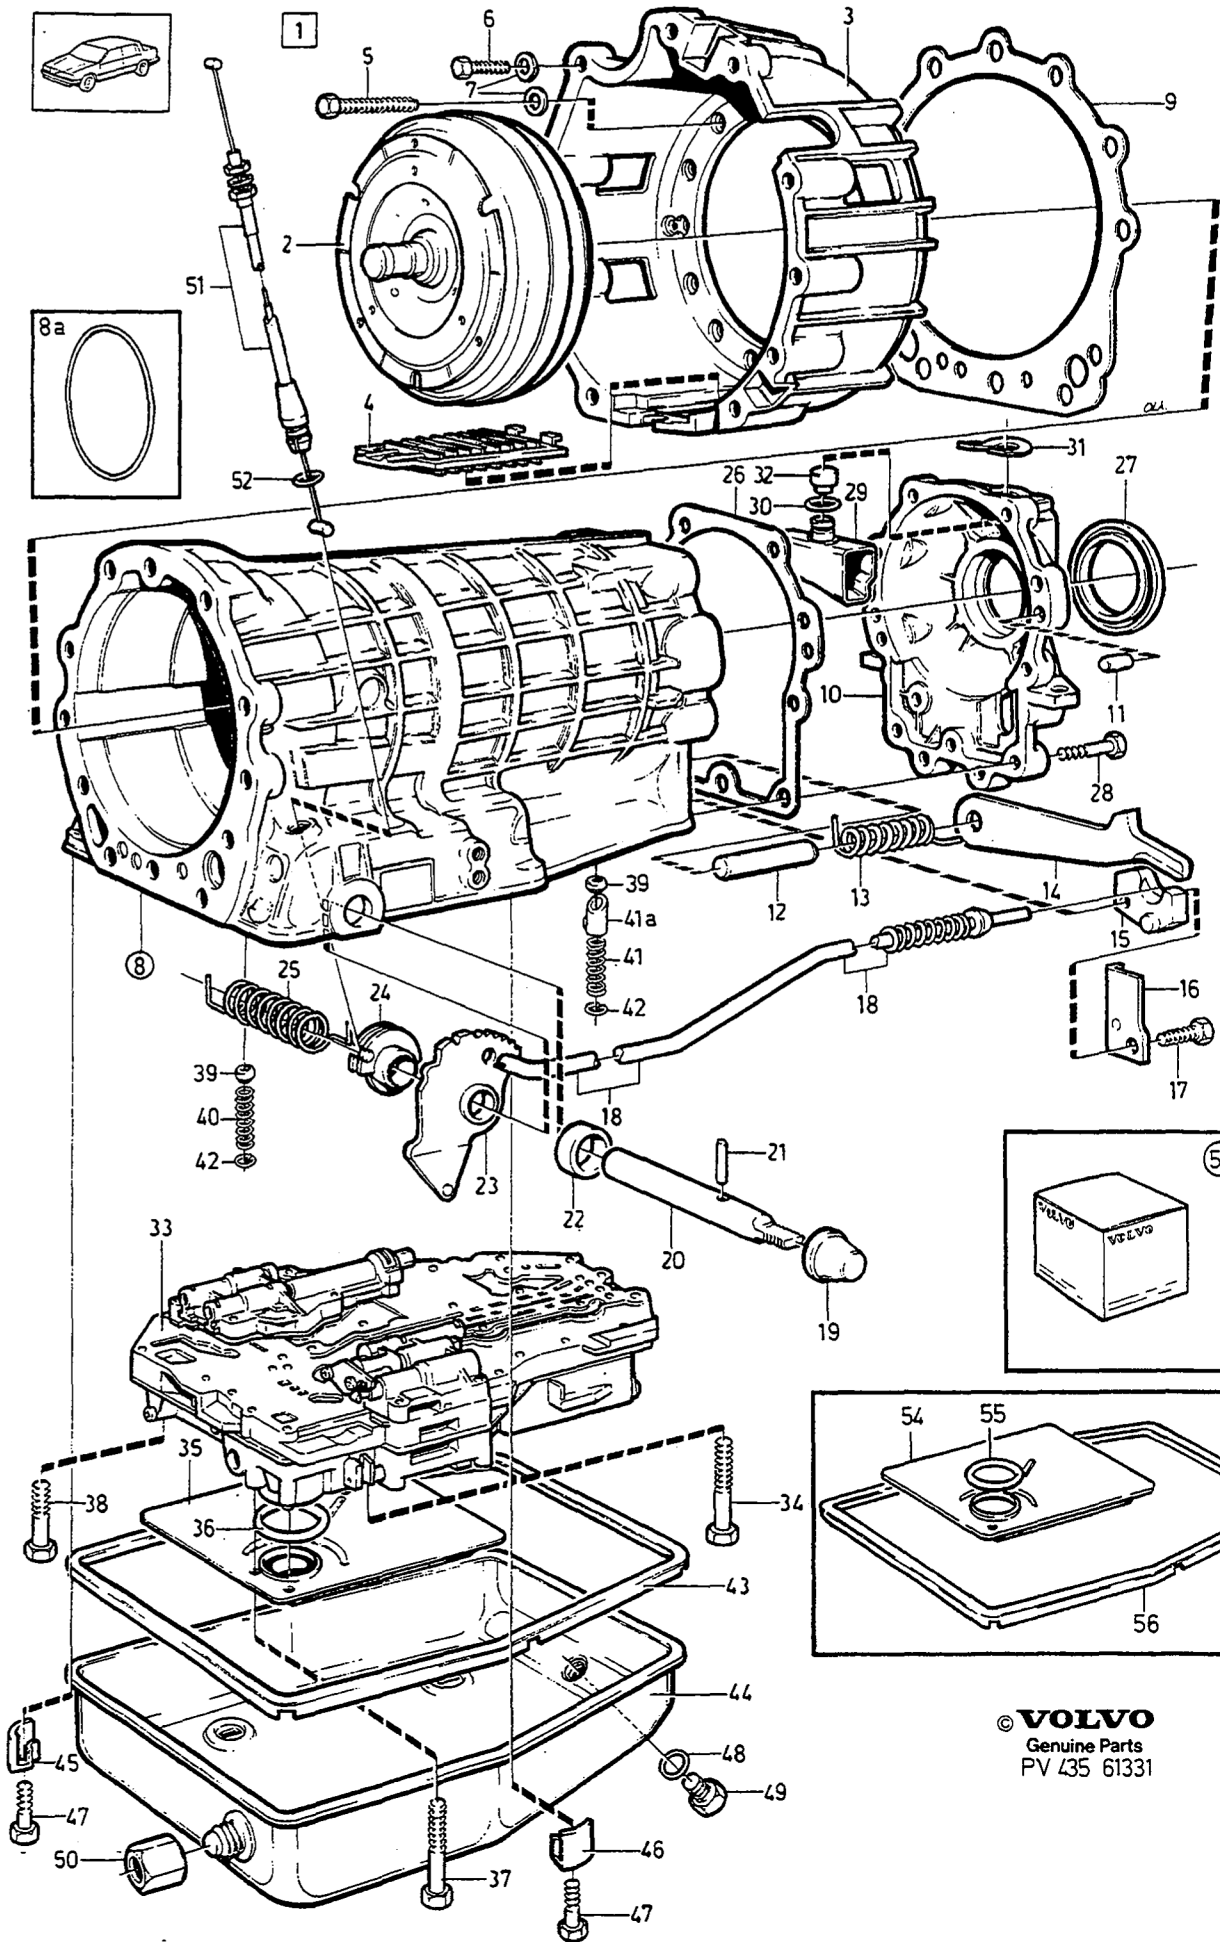
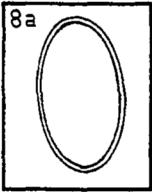




© **VOLVO**
Genuine Parts
PV 435 61331

A		1208502					AUTOMATVÄXELLÅDA		AUTOMATISCHES GETRIEBE		Grupp Gruppe	
B		1208501									43	
C		1208503									Sida	
D		1208518									Seite	
E									ZF22		1003	
Pos	Artikel nr Artikelnr.	Antal / Anzahl					P S	Benämning	Bezeichnung	Anmärkning Anmerkung	S R	
		A	B	C	D	E						
1	(1208502)	1	-	-	-	-	SP	Automatväxellåda	Automatisches getriebe	REPL 1 PCS 1208662-5.	5	
	1208501-5	-	1	-	-	-		Automatväxellåda	Automatisches getriebe		5	
	1208503-1	-	-	1	-	-		Automatväxellåda	Automatisches getriebe		5	
	(1208518)	-	-	-	1	-	SP	Automatväxellåda	Automatisches getriebe	REPL 1 PCS 1208601-3, 1 PCS 1339681-7, 1 PCS 1339683-3.	5	
		-	-	-	-	-						
2	1339819-3	1	1	-	1	-		• Momentomvandlare	• Drehmomentwandler		4	
	1385022-7	-	-	1	-	-		• Momentomvandlare	• Drehmomentwandler	(1339654)	4	
3	1339500-9	1	1	-	1	-		• Momentomvandlarkåpa	• Wandlerglocke		5	
	1339746-8	-	-	1	-	-		• Momentomvandlarkåpa	• Wandlerglocke		5	
4	1339507-4	1	1	1	1	-		• Skyddsgaller	• Schutzgitter		3	
5	973246-2	12	12	12	12	-		• Skruv	• Schraube	(955326)(949366)	2	
6	970948-6	6	6	6	6	-		• Skruv	• Schraube	(955318)	2	
7	941908-6	18	18	18	18	-		• Fjäderbricka	• Federscheibe		2	
8		1	1	1	1	-	NS	• Växellådshus	• Getriebegehäuse			
		-	-	-	-	-		• Pumphaus- kopplingshus	• Pumpengehäuse- Kuppl.-Gehäuse	SEE 43 • 1015		
		-	-	-	-	-		• Kopplingshus-, planetväxel- utgående axel	• Kupplungsgehäuse-, Planetengetriebe Abtriebwelle .	SEE 43 • 1019		
		-	-	-	-	-		• Överväxel, frihjul- koppling- broms	• Overdrive, Freilauf- Kupplung- Bremse	SEE 43 • 1025		
8a	1339717-9	1	1	1	1	-		• Gummiring	• Gummiring		3	
9	1339516-5	1	1	1	1	-		• Packning	• Dichtung		3	
10	1339502-5	1	1	1	1	-		• Hus, bakre	• Gehäuse, h		4	
11	950543-9	2	2	2	2	-		• Styrpinne	• Führungsstift		2	
12	1339696-5	1	1	1	1	-		• Bult	• Bolzen		4	
13	1339698-1	1	1	1	1	-		• Fjäder	• Feder		3	
14	1339697-3	1	1	1	1	-		• Spärrhake	• Sperrhaken		4	
15	1339703-9	1	1	1	1	-		• Styrplatta	• Führungsplatte		4	
16	1339704-7	1	1	1	1	-		• Styrplåt	• Führungsblech		4	
17	1339705-4	1	1	1	1	-		• Skruv	• Schraube		3	
18	1339699-9	1	1	1	1	-		• Tryckstäng	• Druckstange		3	
19		1	1	1	1	-	NS	• Plugg	• Stopfen			
20	1339706-2	1	1	1	1	-		• Axel	• Welle		4	
21	1339716-1	1	1	1	1	-		• Rörpinne	• Spannstift		2	
22	1339707-0	1	1	1	1	-		• Tätningsring	• Dichtring		3	
23	1339708-8	1	1	1	1	-		• Växelväljarkam	• Umsteuernocken		3	
24	1385047-4	1	1	1	1	-		• Kam	• Nocken	(1339712)	4	
25	1339715-3	1	1	1	1	-		• Fjäder	• Feder		4	
26	1339671-8	1	1	1	1	-		• Packning	• Dichtung		3	
27	1339676-7	1	1	1	1	-		• Tätningsring	• Dichtring		3	
28	1339677-5	1	1	1	1	-		• Skruv	• Schraube		2	
29	1339672-6	1	1	1	1	-		• Luftnippel	• Luftnippel		3	
30	1339674-2	1	1	1	1	-		• O-ring	• O-ring		3	
31	1339675-9	1	1	1	1	-		• Låsbricka	• Sicherungsscheibe		3	
32	1339673-4	1	1	1	1	-		• Lock	• Deckel		4	
33	1339971-2	1	-	-	-	-		• Kontrollsystem	• Kontrollsystem	SEE 43 • 1035	4	
	1339972-0	-	1	-	-	-		• Kontrollsystem	• Kontrollsystem	SEE 43 • 1035	4	
	(1339973)	-	-	1	-	-	SP	• Kontrollsystem	• Kontrollsystem	R.AX RATIO 3.91:1		
										SEE 43 • 1047	4	
	(1385000)	-	-	1	-	-	SP	• Kontrollsystem	• Kontrollsystem	REPL 1 PCS 1385050-8. R.AX RATIO 3.73:1		
										SEE 43 • 1047	4	
	1385050-8	-	-	1	-	-		• Kontrollsystem	• Kontrollsystem	REPL 1PCS 1385050-8	4	
	1385002-9	-	-	-	1	-		• Kontrollsystem	• Kontrollsystem	SEE 43 • 1047	4	
34	1339721-1	3	3	3	3	-		• Skruv	• Schraube	SEE 43 • 1035	2	
35	1339725-2	1	1	1	1	-		• Oljesil	• Ölsieb		3	
36	1339724-5	1	1	1	1	-		• O-ring	• O-ring		2	
37	1339750-0	5	5	5	5	-		• Skruv	• Schraube		2	

61331/1475-4