
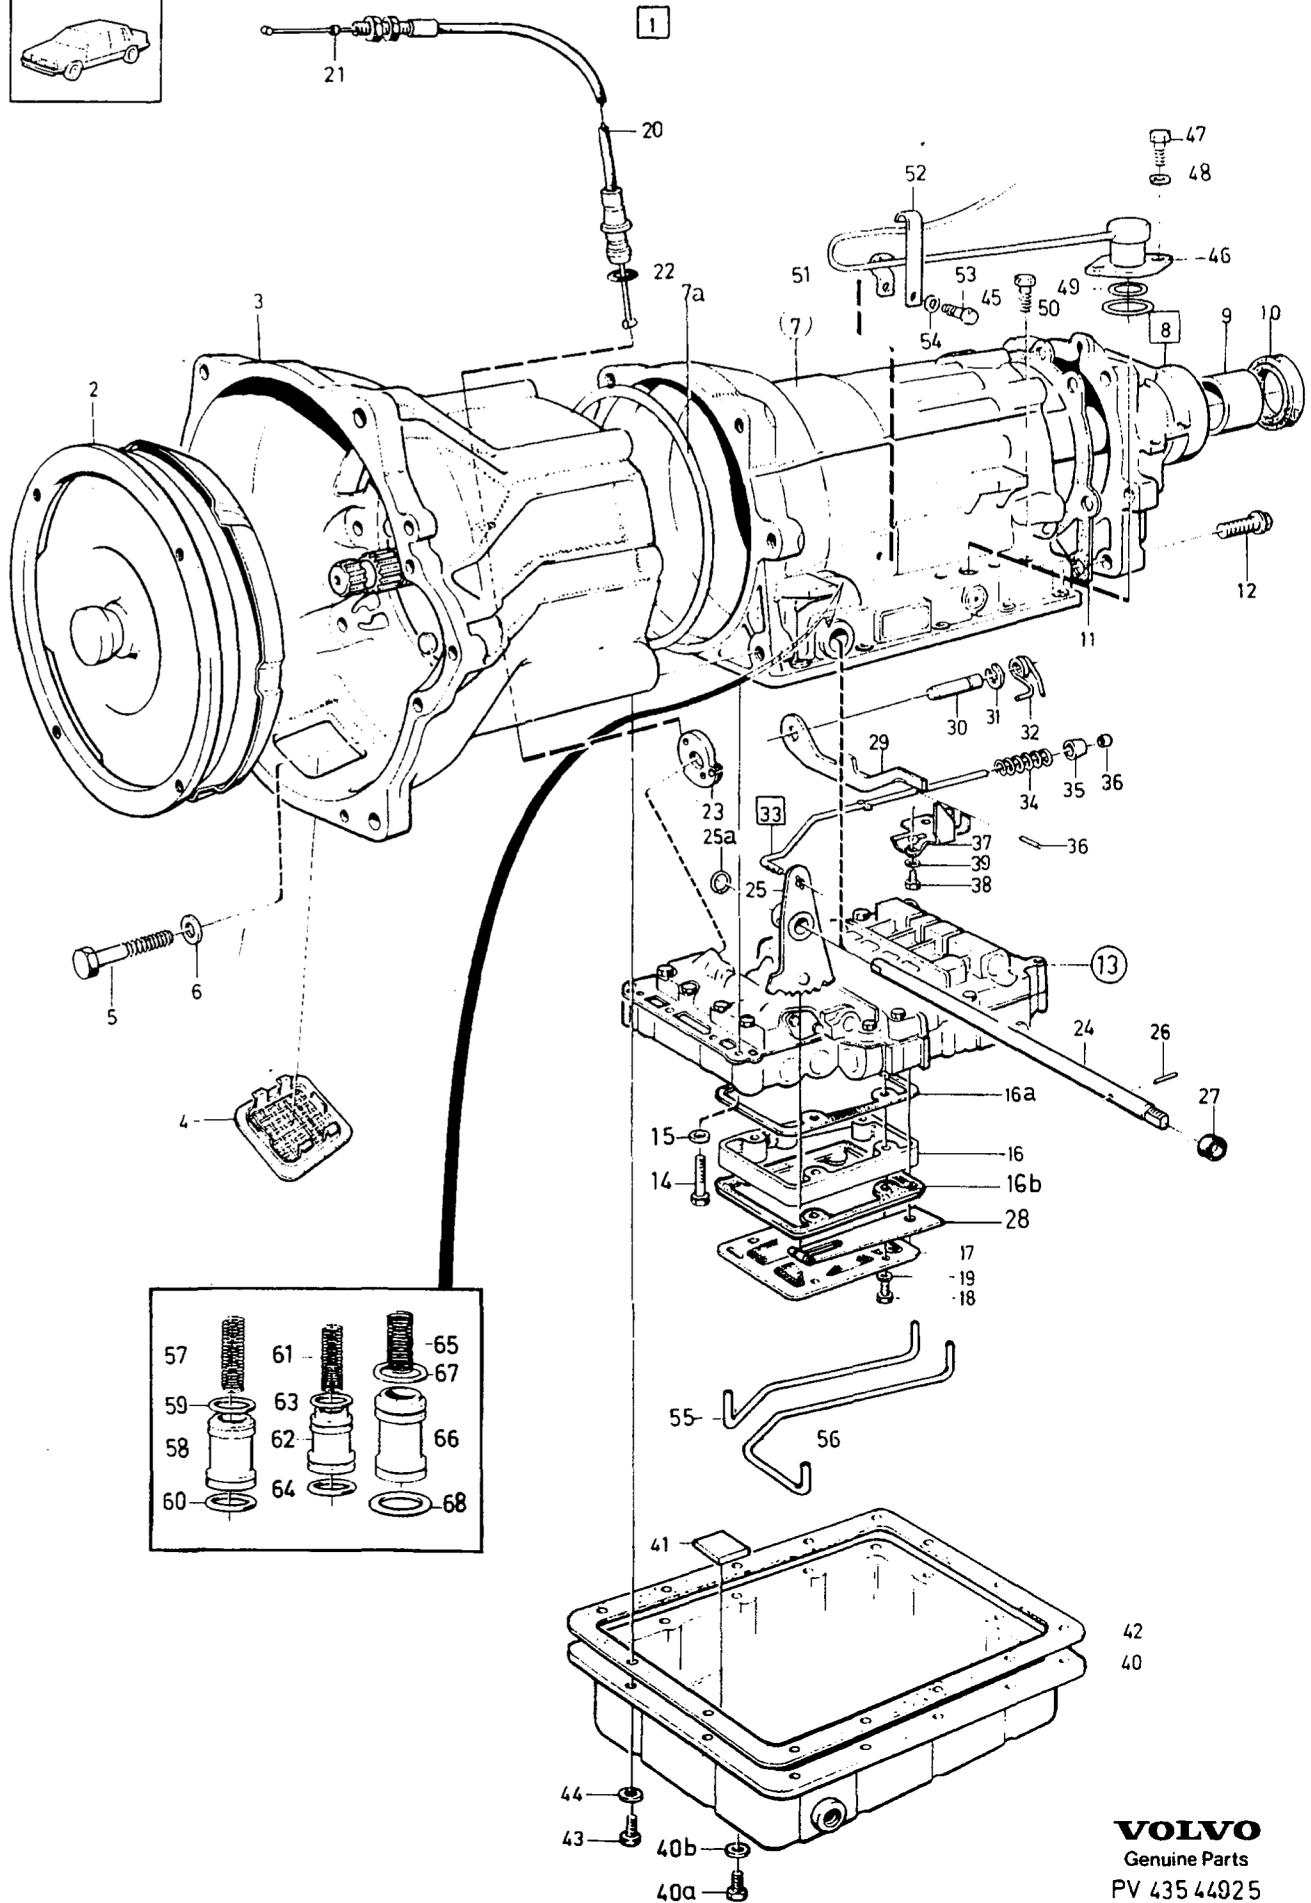




VOLVO
Genuine Parts
PV 435 44925

A	1208334, 1208661					AUTOMATIC GEARBOX		AUTOMATVÄXELLÅDA		Group Grupp	
										43	
										Page Sida	
										861	
						AW71					
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
1	(1208334)	1	-	-	-	-	SP	Automatic gearbox	Automatväxellåda		3
	(1208661)	1	-	-	-	-	SP	Automatic gearbox	Automatväxellåda		5
2	1239686-7	1	-	-	-	-		• Torque converter	• Momentomvandlare		4
3	3502072-6	1	-	-	-	-		• Converter housing	• Momentomvandlarkåpa	(1239977)	5
4	1233328-2	2	-	-	-	-		• Safety net	• Skyddsnät		5
5	1239691-7	4	-	-	-	-		• Screw	• Skruv	LG 118 mm	3
	1239690-9	2	-	-	-	-		• Screw	• Skruv	LG 98 mm	3
6	941908-6	4	-	-	-	-		• Spring washer	• Fjäderbricka	D1 10.5 mm	2
	940280-1	2	-	-	-	-		• Spring washer	• Fjäderbricka	D1 13.5 mm	2
7		-	-	-	-	-	NS	• Gearbox housing	• Växellådshus		
		-	-	-	-	-		• Pump housing - clutch housing overdrive	• Pumphus- kopplingshus överväxel	SEE 43 • 873	
		-	-	-	-	-		• Centre wall - planet gear - output shaft	• Mellangavel- planetväxel- utgående axel	SEE 43 • 881	
7a	6814812-1	1	-	-	-	-		• Sealing ring	• Tätningsring	(1239689)	3
8	1239682-6	1	-	-	-	-		• Housing, rear	• Hus, bakre		5
9	235878-6	1	-	-	-	-		• Bushing	• Bussning		3
10	235728-3	1	-	-	-	-	IK	• Sealing ring	• Tätningsring		3
11	3520331-4	1	-	-	-	-	IK	• Gasket	• Packning	(1233137)	3
12	1239883-0	4	-	-	-	-		• Screw	• Skruv	M10x45mm. ALTER 1	4
	1239883-0	3	-	-	-	-		• Screw	• Skruv	M10x45mm. ALTER 2	4
	6814808-9	1	-	-	-	-		• Screw with seal	• Skruv med tätning	M10x45mm. ALTER 2	4
	1239884-8	2	-	-	-	-		• Screw	• Skruv	M10x35mm	4
13	(1340103)	1	-	-	-	-	SP	• Control system	• Kontrollsystem	NO 84HF81193- REPL 1PCS 3520339-7.	4
		-	-	-	-	-		• SEE 43 • 899	• SEE 43 • 899		
	3520339-7	1	-	-	-	-		• Control system	• Kontrollsystem		4
		-	-	-	-	-		• SEE 43 • 899	• SEE 43 • 899		
14	955272-0	2	-	-	-	-		• Screw	• Skruv	LG 20 mm	2
	955274-6	2	-	-	-	-		• Screw	• Skruv	LG 25 mm	2
	955275-3	5	-	-	-	-		• Screw	• Skruv	LG 30 mm	2
	955276-1	3	-	-	-	-		• Screw	• Skruv	LG 35 mm	2
	940101-9	1	-	-	-	-		• Screw	• Skruv	LG 40 mm	2
	1239826-9	1	-	-	-	-		• Screw	• Skruv	LG 47 mm	3
☆	948081-5	3	-	-	-	-		• Lock screw	• Låsskruv	LG 55mm,(955279)	2
15	941906-0	17	-	-	-	-		• Spring washer	• Fjäderbricka		2
	1340136-9	1	-	-	-	-		• Intermediate section	• Mellanstycke		5
☆	16a 3520329-8	1	-	-	-	-	IK	• Gasket	• Packning	(1239828)	2
☆	16b 3520329-8	1	-	-	-	-	IK	• Gasket	• Packning	(1239828)	2
17	1239829-3	1	-	-	-	-		• Oil strainer	• Oljesil		5
18	955249-8	5	-	-	-	-		• Screw	• Skruv	LG 25 mm	2
19	940090-4	5	-	-	-	-		• Washer	• Bricka		2
20	1239932-5	1	-	-	-	-		• Control cable	• Reglagewire		4
21	1220513-4	1	-	-	-	-		• Cable stop	• Wirestop		4
22	1233141-9	1	-	-	-	-	IK	• O-ring	• O-ring		3
23		1	-	-	-	-		• Cam	• Kam	SEE 43 • 899	
24	1239744-4	1	-	-	-	-		• Shaft	• Axel		4
25	1239936-6	1	-	-	-	-		• Gear selector cam	• Växelväljarkam		3
☆	25a 3549669-4	2	-	-	-	-	IK	• Sealing ring	• Tätningsring	(1233064)	3
26	1239832-7	1	-	-	-	-		• Lock pin	• Låspinne		3
27	1239658-6	1	-	-	-	-		• Sleeve	• Hylsa		4
28		1	-	-	-	-		• Locking spring	• Spärrfjäder	SEE 43 • 899	
29	1239880-6	1	-	-	-	-		• Parking pawl	• Parkeringsspärr		3
30	1233116-1	1	-	-	-	-		• Bearing bolt	• Lagerbult		3
31	1233117-9	1	-	-	-	-		• Retaining ring	• Spärring		3
32	1239750-1	1	-	-	-	-		• Torsion spring	• Vridfjäder		3
33	1239662-8	1	-	-	-	-		• Push rod	• Tryckstång		4
		1	-	-	-	-	NS	• Push rod	• Tryckstång		
34	1233121-1	1	-	-	-	-		• Spring	• Fjäder		4
35		1	-	-	-	-	NS	• Thrust sleeve	• Tryckhylsa		
36		1	-	-	-	-	NS	• Stop ring	• Anslagsring		

A		1208334, 1208661					AUTOMATIC GEARBOX		AUTOMATVÄXELLÅDA		Group Grupp	
B											43	
C											Page Sida	
D											863	
E							AW71					
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R	
		A	B	C	D	E						
37	1239885-5	1	-	-	-	-		• Lock plate	• Låsplatta		4	
38	955271-2	2	-	-	-	-		• Screw	• Skruv		2	
39	941906-0	2	-	-	-	-		• Spring washer	• Fjäderbricka		2	
40	1233415-7	1	-	-	-	-		• Sump	• Oljesump		4	
40a	1239961-4	1	-	-	-	-		• Plug	• Plugg		2	
40b	1239960-6	1	-	-	-	-		• Sealing ring	• Tätningsring		2	
41	235739-0	1	-	-	-	-		• Magnet	• Magnet		4	
42	1239683-4	1	-	-	-	-	IK	• Gasket	• Packning		5	
43	955271-2	14	-	-	-	-		• Screw	• Skruv	(955270)	2	
44	941906-0	14	-	-	-	-		• Spring washer	• Fjäderbricka		2	
45		1	-	-	-	-	NS	• Plug	• Propp			
46	1239928-3	1	-	-	-	-		• Solenoid	• Solenoid		3	
47	949734-8	2	-	-	-	-		• Screw	• Skruv	(955294)	2	
48	941907-8	2	-	-	-	-		• Spring washer	• Fjäderbricka		2	
49	1239834-3	1	-	-	-	-	IK	• O-ring	• O-ring		3	
50	1239835-0	1	-	-	-	-	IK	• O-ring	• O-ring		3	
51	1239699-0	1	-	-	-	-		• Clamp	• Klamma		4	
52	1239697-4	1	-	-	-	-		• Clamp	• Klamma		4	
53	955268-8	1	-	-	-	-		• Screw	• Skruv	LG 10 mm	2	
54	941906-0	1	-	-	-	-		• Spring washer	• Fjäderbricka		2	
55	1340038-7	1	-	-	-	-		• Pipe C1	• Rör C1		3	
56	1239821-0	1	-	-	-	-		• Tube B0	• Rör B0		3	
57	1340035	1	-	-	-	-	OP	• Spring 2nd, B2	• Fjäder 2:an, B2		4	
58	1239823-6	1	-	-	-	-		• Piston 2nd	• Kolv 2:an		4	
59	1239577-8	1	-	-	-	-	IK	• O-ring	• O-ring		3	
60	1239578-6	1	-	-	-	-	IK	• O-ring	• O-ring		3	
61	1340041	1	-	-	-	-	OP	• Spring 3rd, C2	• Fjäder 3:an, C2		4	
62	1239825-1	1	-	-	-	-		• Piston 3rd	• Kolv 3:an		4	
63	1239581-0	1	-	-	-	-	IK	• O-ring	• O-ring		3	
64	1239582-8	1	-	-	-	-	IK	• O-ring	• O-ring		3	
65	1340060-1	1	-	-	-	-		• Spring 1st, C1	• Fjäder 1:an, C1		4	
66	1239584-4	1	-	-	-	-		• Piston 1st	• Kolv 1:an		4	
67	1239585-1	1	-	-	-	-	IK	• O-ring	• O-ring		3	
68	1239582-8	1	-	-	-	-	IK	• O-ring	• O-ring		3	
	273494-5	1	-	-	-	-		Sealing ring kit	Tätningssats		3	
	271693-4	1	-	-	-	-		Repair kit	Reparationssats		3	
		1	-	-	-	-		Oil strainer	Oljesil			
		1	-	-	-	-		Sealing kit	Tätningssats	SEE 43-881		
		1	-	-	-	-		Gasket kit	Packningsats	SEE 43-881		