


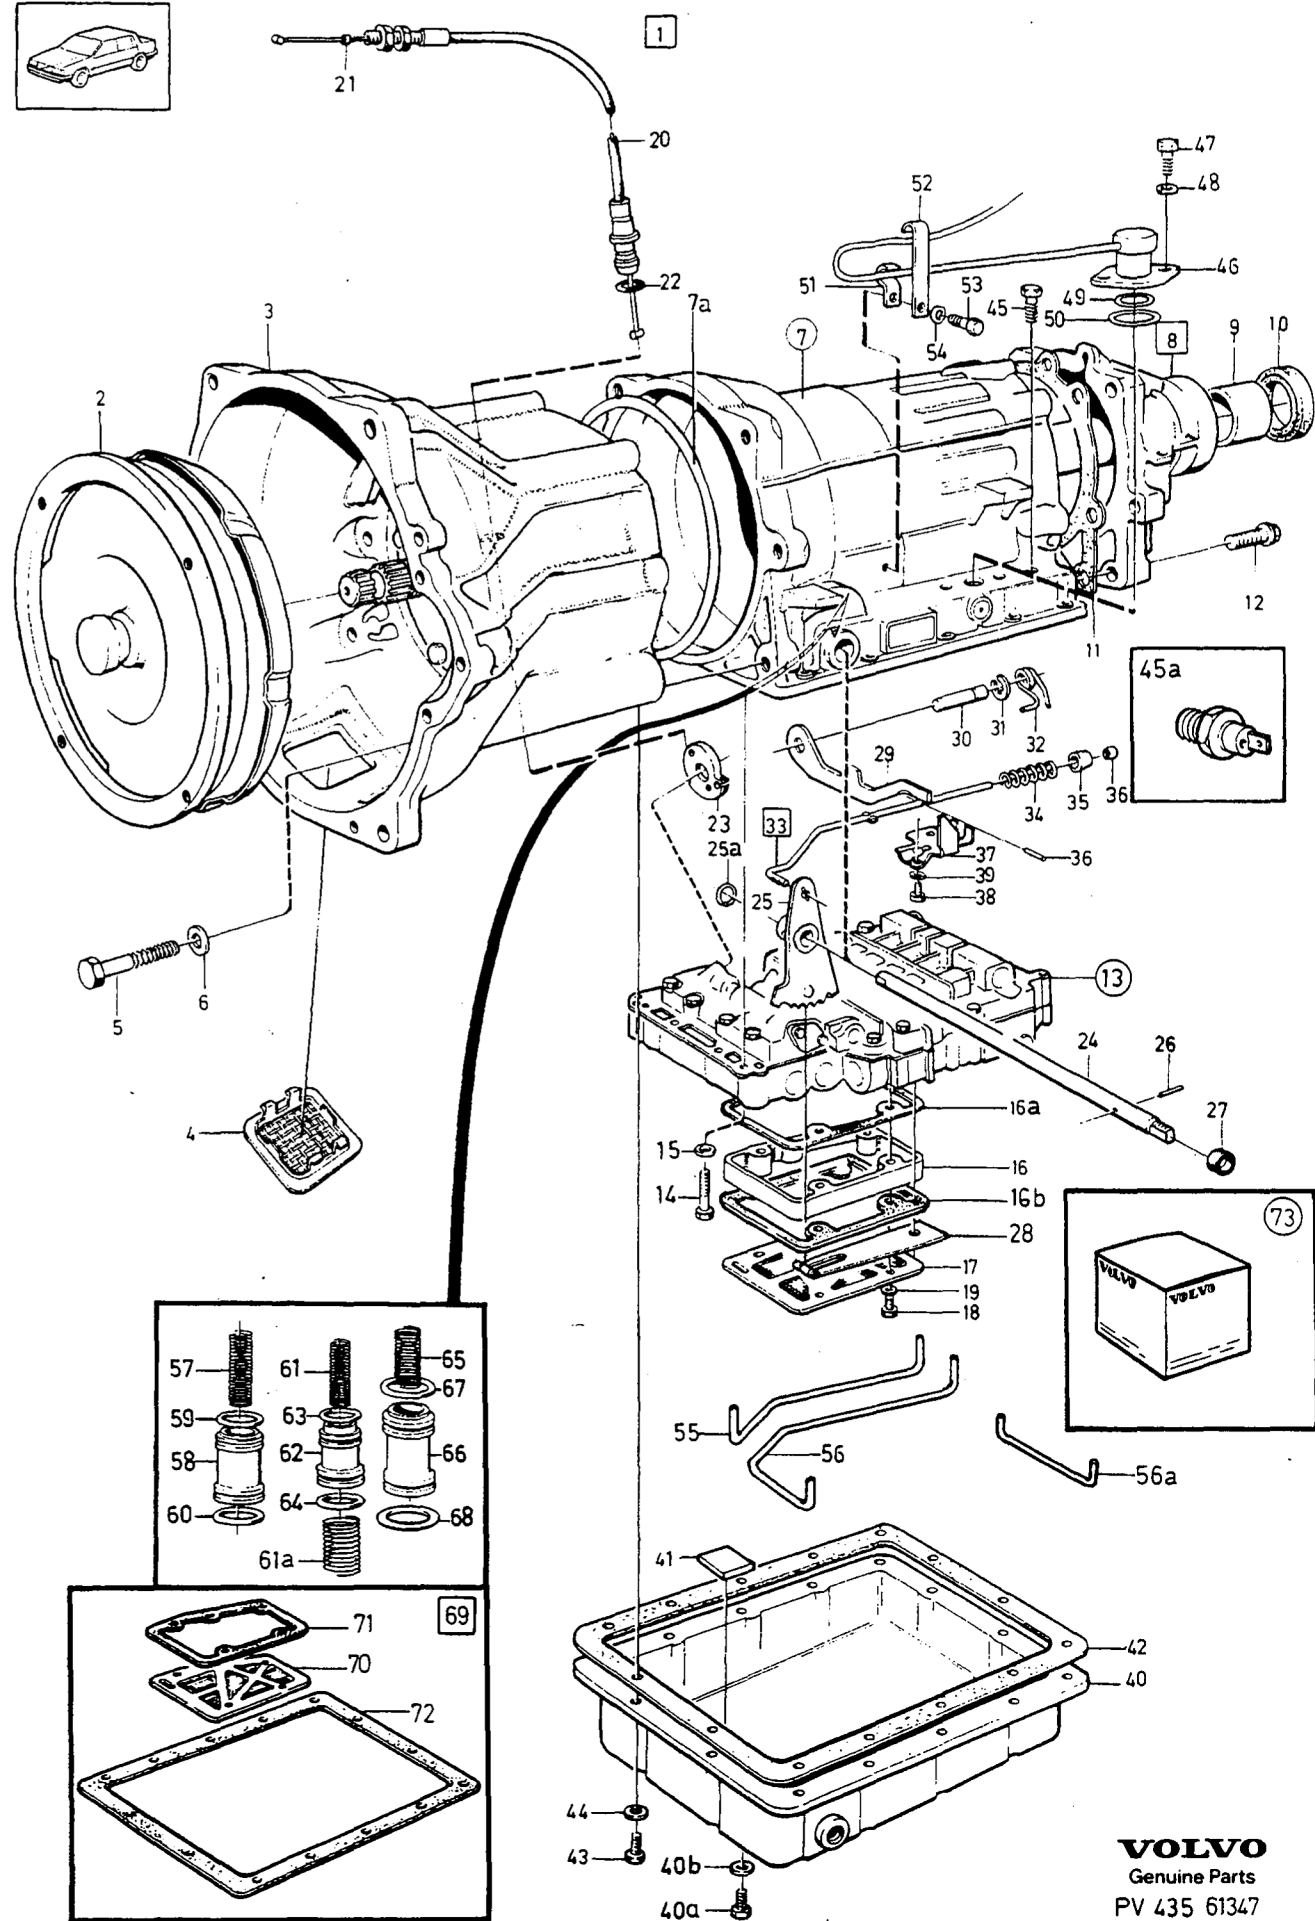

VOLVO
Genuine Parts
PV 435 61347

A	1208638, 1208667					AUTOMATIC GEARBOX		AUTOMATVÄXELLÅDA		Group Grupp	
										43	
										Page Sida	
										869	
								AW72			
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
1	(1208638)	1	-	-	-	-	SP	Automatic gearbox	Automatväxellåda		5
	1208667-4	1	-	-	-	-		Automatic gearbox	Automatväxellåda		5
2	6814907-9	1	-	-	-	-		• Torque converter	• Momentomvandlare		4
3	3502072-6	1	-	-	-	-		• Converter housing	• Momentomvandlarkåpa		5
4	1233328-2	2	-	-	-	-		• Safety net	• Skyddsnet		5
5	1239691-7	4	-	-	-	-		• Screw	• Skruv	LG 118 mm	3
	1239690-9	2	-	-	-	-		• Screw	• Skruv	LG 98 mm	3
6	941908-6	4	-	-	-	-		• Spring washer	• Fjäderbricka	D1 10.5 mm	2
	940280-1	2	-	-	-	-		• Spring washer	• Fjäderbricka	D1 13.5 mm	2
7		-	-	-	-	-	NS	• Gearbox housing	• Växellådshus		
		-	-	-	-	-		• Pump housing - clutch housing overdrive	• Pumphus- kopplingshus överväxel	SEE 43 • 873	
		-	-	-	-	-		• Centre wall - planet gear - output shaft	• Mellangavel- planetväxel- utgående axel	SEE 43 • 881	
7a	6814812-1	1	-	-	-	-		• Sealing ring	• Tätningsring	(1239689)	3
8	1239682-6	1	-	-	-	-		• Housing, rear	• Hus, bakre		5
9	235878-6	1	-	-	-	-		• Bushing	• Bussning		3
10	235728-3	1	-	-	-	-	IK	• Sealing ring	• Tätningsring		3
11	3520331-4	1	-	-	-	-	IK	• Gasket	• Packning	(1233137)	3
12	1239883-0	4	-	-	-	-		• Screw	• Skruv	LG 45 mm	4
	1239884-8	2	-	-	-	-		• Screw	• Skruv	LG 35 mm	4
13	(6814909)	1	-	-	-	-	SP	• Control system	• Kontrollsystem	NO 84HF81193-	4
								• SEE 43 • 911	• SEE 43 • 911	REPL 1PCS 3520344-7.	
	3520344-7	1	-	-	-	-		• Control system	• Kontrollsystem		4
								• SEE 43 • 911	• SEE 43 • 911		
14	955272-0	2	-	-	-	-		• Screw	• Skruv	LG 20 mm	2
	955274-6	2	-	-	-	-		• Screw	• Skruv	LG 25 mm	2
	955275-3	4	-	-	-	-		• Screw	• Skruv	LG 30 mm	2
	955276-1	2	-	-	-	-		• Screw	• Skruv	LG 35 mm	2
	940101-9	1	-	-	-	-		• Screw	• Skruv	LG 40 mm	2
	955281-1	1	-	-	-	-		• Screw	• Skruv	LG 65 mm	2
☆	948081-5	5	-	-	-	-		• Lock screw	• Låsskruv	LG 55mm,(955279)	2
15	941906-0	17	-	-	-	-		• Spring washer	• Fjäderbricka		2
16	1340019-7	1	-	-	-	-		• Spacer flange	• Mellanfläns		5
16a	3520330-6	1	-	-	-	-	IK	• Gasket	• Packning	(1340020)	2
16b	3520330-6	1	-	-	-	-	IK	• Gasket	• Packning	(1340020)	2
17	1340021-3	1	-	-	-	-		• Oil strainer	• Oljesil		3
18	955248-0	6	-	-	-	-		• Screw	• Skruv	LG 25 mm	2
19	941905-2	6	-	-	-	-		• Spring washer	• Fjäderbricka		2
20	3502073-4	1	-	-	-	-		• Control cable	• Reglagewire	TRANS MARKED 1208638	3
☆	3520189-6	1	-	-	-	-		• Control cable	• Reglagewire	TRANS MARKED 1208667	3
21	1220513-4	1	-	-	-	-		• Cable stop	• Wirestopp		4
22	1233141-9	1	-	-	-	-	IK	• O-ring	• O-ring		3
23		1	-	-	-	-		• Cam	• Kam		
24	1239744-4	1	-	-	-	-		• Shaft	• Axel		4
25	1239936-6	1	-	-	-	-		• Gear selector cam	• Växelväljarkam		3
☆	25a 3549669-4	2	-	-	-	-	IK	• Sealing ring	• Tätningsring	(1233064)	3
26	1239832-7	1	-	-	-	-		• Lock pin	• Låspinne		3
27	1239658-6	1	-	-	-	-		• Sleeve	• Hylsa		4
28		1	-	-	-	-		• Locking spring	• Spärrfjäder		
29	1239880-6	1	-	-	-	-		• Parking pawl	• Parkeringsspärr		3
30	1233116-1	1	-	-	-	-		• Bearing bolt	• Lagerbult		3
31	1233117-9	1	-	-	-	-		• Retaining ring	• Spärring		3
32	1239750-1	1	-	-	-	-		• Torsion spring	• Vridfjäder		3
33	1239662-8	1	-	-	-	-		• Push rod	• Tryckstång		4
		1	-	-	-	-	NS	• Push rod	• Tryckstång		
34	1233121-1	1	-	-	-	-		• Spring	• Fjäder		4
35		1	-	-	-	-	NS	• Thrust sleeve	• Tryckhylsa		
36		1	-	-	-	-	NS	• Stop ring	• Anslagsring		
37	1239885-5	1	-	-	-	-		• Lock plate	• Låsplatta		4

A	1208638, 1208667					AUTOMATIC GEARBOX		AUTOMATVÄXELLÅDA		Group	
										Grupp	
										43	
										Page	
						AW72		Sida		871	
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
38	955271-2	2	-	-	-	-		•Screw	•Skruv		2
39	941906-0	2	-	-	-	-		•Spring washer	•Fjäderbricka		2
40	1233415-7	1	-	-	-	-		•Sump	•Oljesump		4
40a	1239961-4	1	-	-	-	-		•Plug	•Plugg		2
40b	1239960-6	1	-	-	-	-		•Sealing ring	•Tätningarring		2
41	235739-0	1	-	-	-	-		•Magnet	•Magnet		4
42	1239683-4	1	-	-	-	-	IK	•Gasket	•Packning		5
43	955271-2	14	-	-	-	-		•Screw	•Skruv	(955270)	2
44	941906-0	14	-	-	-	-		•Spring washer	•Fjäderbricka		2
45		1	-	-	-	-	NS	•Plug	•Propp		
45a	3502078-3	1	-	-	-	-		•Contact	•Kontakt		3
46	6814942-6	1	-	-	-	-		•Solenoid	•Solenoid		3
☆ 47	949734-8	2	-	-	-	-		•Screw	•Skruv	(955294)	2
48	941907-8	2	-	-	-	-		•Spring washer	•Fjäderbricka		2
49	1239834-3	1	-	-	-	-	IK	•O-ring	•O-ring		3
50	1239835-0	1	-	-	-	-	IK	•O-ring	•O-ring		3
51	1239699-0	1	-	-	-	-		•Clamp	•Klamma		4
52	1239697-4	1	-	-	-	-		•Clamp	•Klamma		4
53	955268-8	1	-	-	-	-		•Screw	•Skruv	LG 10 mm	2
54	941906-0	1	-	-	-	-		•Spring washer	•Fjäderbricka		2
55	1239942-4	1	-	-	-	-		•Pipe C1	•Rör C1		3
56	1239821-0	1	-	-	-	-		•Tube B0	•Rör B0		3
56a	3502173-2	1	-	-	-	-		•Pipe	•Rör		4
57	6814941-8	1	-	-	-	-		•Spring 2nd, B2	•Fjäder 2:an, B2		3
58	1239823-6	1	-	-	-	-		•Piston 2nd	•Kolv 2:an		4
59	1239577-8	1	-	-	-	-	IK	•O-ring	•O-ring		3
60	1239578-6	1	-	-	-	-	IK	•O-ring	•O-ring		3
61	3502176-5	1	-	-	-	-		•Spring 3rd, C2	•Fjäder 3:an, C2		4
61a	1340128-6	1	-	-	-	-		inner •Spring outer	inre •Fjäder yttre		4
62	1340064-3	1	-	-	-	-		•Piston 3rd	•Kolv 3:an		4
63	1239581-0	1	-	-	-	-	IK	•O-ring	•O-ring		3
64	1239582-8	1	-	-	-	-	IK	•O-ring	•O-ring		3
65	1340060-1	1	-	-	-	-		•Spring 1st, C1	•Fjäder 1:an, C1		4
66	1239584-4	1	-	-	-	-		•Piston 1st	•Kolv 1:an		4
67	1239585-1	1	-	-	-	-	IK	•O-ring	•O-ring		3
68	1239582-8	1	-	-	-	-	IK	•O-ring	•O-ring		3
☆ 69	271694-2	1	-	-	-	-		Repair kit	Reparationssats		3
								Oil strainer	Oljesil		
70	1340021-3	1	-	-	-	-		•Oil strainer	•Oljesil		3
☆ 71	3520329-8	2	-	-	-	-		•Gasket	•Packning		2
72	1239683-4	1	-	-	-	-		•Gasket	•Packning		5
73		-	-	-	-	-		Repair kit	Reparationssats	SEE 43-975	