
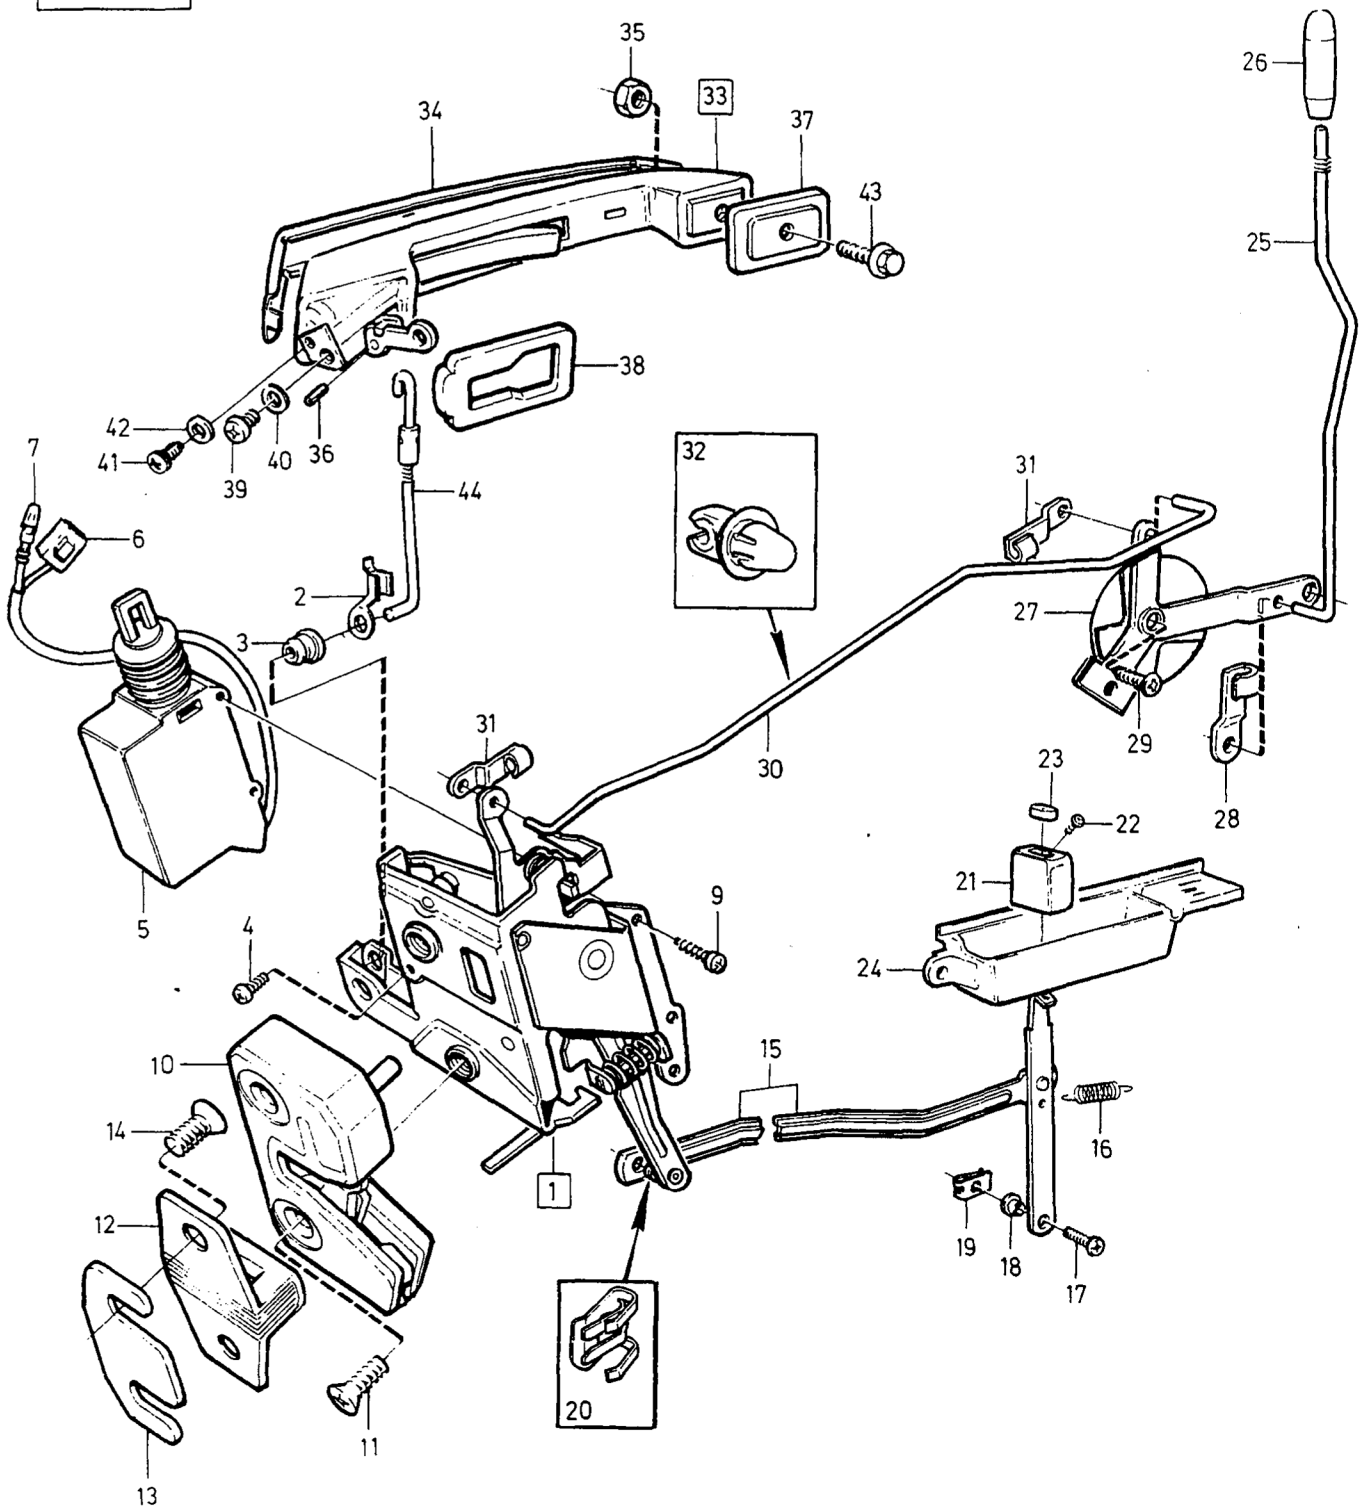




						REAR DOOR LOCKING SYSTEM		BAKDÖRR LÄSSYSTEM		Group Grupp 83 Page Sida 1243	
						1)					
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
1	(1380929)	1	-	-	-	-	SP	Lock, l.h.	Lås, v	2) REPL 1PCS 6846053-4.	3
	1380906-6	1	-	-	-	-		Lock, l.h.	Lås, v	3) EXC (AUS)	3
	(1380929)	1	-	-	-	-	SP	Lock, l.h.	Lås, v	3) (AUS) REPL 1PCS 6846053-4.	3
	(1380930)	1	-	-	-	-	SP	Lock, r.h.	Lås, h	2) REPL 1PCS 6846054-2.	3
	1380907-4	1	-	-	-	-		Lock, r.h.	Lås, h	3) EXC (AUS)	3
	(1380930)	1	-	-	-	-	SP	Lock, r.h.	Lås, h	3) (AUS) REPL 1PCS 6846054-2.	3
2	1320863-2	1	-	-	-	-		• Clip	• Clips		2
3	1320864-0	1	-	-	-	-		• Bushing	• Bussning		2
4	956057-4	2	-	-	-	-		Screw	Skruv		2
5	3503941-1	1	-	-	-	-		Motor	Motor	3)	3
6	968381-4	1	-	-	-	-		• Tab housing	• Stiftisolator	3)	3
7	968373-1	2	-	-	-	-		• Cable terminal	• Ledningssko	3)	3
9	949947-6	2	-	-	-	-		Screw	Skruv	3)	2
10	9126336-8	1	-	-	-	-		Lock, l.h.	Lås, v		3
	9126337-6	1	-	-	-	-		Lock, r.h.	Lås, h		3
11	1355226-0	4	-	-	-	-		Screw	Skruv		2
12	1380074-3	2	-	-	-	-		Lock brace	Låsbygel		3
13	6817942-3	X	-	-	-	-		Shim	Justerbleck	(1316087)	3
14	3503873-6	4	-	-	-	-		Screw	Skruv		2
15	1320314-6	1	-	-	-	-		Door opener, l.h.	Dörröppnare, v		3
	1320315-3	1	-	-	-	-		Door opener, r.h.	Dörröppnare, h		3
16	1320316-1	2	-	-	-	-		Return spring	Returfjäder		2
17	958246-1	2	-	-	-	-		Screw	Skruv		2
18	1203311-4	2	-	-	-	-		Washer	Bricka		3
19	1255989-4	2	-	-	-	-		Spring nut	Fjädermutter		2
20	1203658-8	2	-	-	-	-		Clip	Clips		2
21	1316145-0	2	-	-	-	-		Handle, black	Handtag, svart		3
	1316146-8	2	-	-	-	-		Handle, blue	Handtag, blå		3
	1316148-4	2	-	-	-	-		Handle, beige	Handtag, beige	-1989	3
	3503173-1	2	-	-	-	-		Handle, beige	Handtag, beige	1990-	3
	1316149-2	2	-	-	-	-		Handle, red	Handtag, röd	-1989	3
	3503174-9	2	-	-	-	-		Handle, red	Handtag, röd	1990-	3
	3503175-6	2	-	-	-	-		Handle, grey	Handtag, grå	1990-	3
22	969464-7	2	-	-	-	-		Six point socket screw	Sextandhålskruv	(955119)	2
23	1316150-0	2	-	-	-	-		Plug, black	Propp, svart		3
	1316151-8	2	-	-	-	-		Plug, blue	Propp, blå		3
	1316153-4	2	-	-	-	-		Plug, beige	Propp, beige	-1989	3
	3503176-4	2	-	-	-	-		Plug, beige	Propp, beige	1990-	3
	1316154-2	2	-	-	-	-		Plug, red	Propp, röd	-1989	3
	3503177-2	2	-	-	-	-		Plug, red	Propp, röd	1990-	3
	3503178-0	2	-	-	-	-		Plug, grey	Propp, grå		3
24		-	-	-	-	-		Guide	Styrning	SEE 85-1425	
25	1316934-7	2	-	-	-	-		Link	Länk	2)	3
	1334872-7	2	-	-	-	-		Link	Länk	3) EXC (AUS)	3
	1316934-7	2	-	-	-	-		Link	Länk	3) (AUS)	3
26	1203219-9	2	-	-	-	-		Lock button, black	Låsknapp, svart	2)	2
	1334830-5	2	-	-	-	-		Lock button, black	Låsknapp, svart	3) EXC (AUS)	2
	1203219-9	2	-	-	-	-		Lock button, black	Låsknapp, svart	3) (AUS)	2
	1316928-9	2	-	-	-	-		Lock button, blue	Låsknapp, blå	2)	2
	1334831-3	2	-	-	-	-		Lock button, blue	Låsknapp, blå	3) EXC (AUS)	2
	1316928-9	2	-	-	-	-		Lock button, blue	Låsknapp, blå	3) (AUS)	2
	1316930-5	2	-	-	-	-		Lock button, beige	Låsknapp, beige	2) -1989	2
	1334833-9	2	-	-	-	-		Lock button, beige	Låsknapp, beige	3) -1989 EXC (AUS)	2
	1316930-5	2	-	-	-	-		Lock button, beige	Låsknapp, beige	3) -1989 (AUS)	2

1) 740 4DRS CH 294100-. 740 5DRS CH 176800-.

2) Cars without central locking system. / Bilar med centrallåsning

3) Cars with central locking system. / Bilar med centrallåsning.

A							REAR DOOR LOCKING SYSTEM		BAKDÖRR LÅSSYSTEM		Group Grupp	
B											83	
C											Page Sida	
D												
E									1)		1245	
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R	
		A	B	C	D	E						
27	1380821-7	2	-	-	-	-		Lock button, beige	Låsknapp, beige	2) 1990-	2	
	1380824-1	2	-	-	-	-		Lock button, beige	Låsknapp, beige	3) 1990- EXC (AUS)	2	
	1380821-7	2	-	-	-	-		Lock button, beige	Låsknapp, beige	3) 1990- (AUS)	2	
	1316931-3	2	-	-	-	-		Lock button, red	Låsknapp, röd	2) -1989	2	
	1334834-7	2	-	-	-	-		Lock button, red	Låsknapp, röd	3) -1989 EXC (AUS)	2	
	1316931-3	2	-	-	-	-		Lock button, red	Låsknapp, röd	3) -1989 (AUS)	2	
	1380822-5	2	-	-	-	-		Lock button, red	Låsknapp, röd	2) 1990-	2	
	1380825-8	2	-	-	-	-		Lock button, red	Låsknapp, röd	3) 1990- EXC (AUS)	2	
	1380822-5	2	-	-	-	-		Lock button, red	Låsknapp, röd	3) 1990- (AUS)	2	
	1380823-3	2	-	-	-	-		Lock button, grey	Låsknapp, grå	2)	2	
	1380826-6	2	-	-	-	-		Lock button, grey	Låsknapp, grå	3) EXC (AUS)	2	
	1380823-3	2	-	-	-	-		Lock button, grey	Låsknapp, grå	3) (AUS)	2	
	1380009-9	1	-	-	-	-		Lever, l.h.	Hävarm, v		3	
	1380010-7	1	-	-	-	-		Lever, r.h.	Hävarm, h		3	
	6848358-5	2	-	-	-	-		Clamp	Klamma	(1304766)	3	
	969476-1	2	-	-	-	-		Six point socket screw	Sextandhålskruv	(955141)	2	
	1268198-7	1	-	-	-	-		Link, l.h.	Länk, v		3	
	1268199-5	1	-	-	-	-		Link, r.h.	Länk, h		3	
	6848358-5	4	-	-	-	-		Clamp	Klamma	(1304766)	3	
	1316220-1	4	-	-	-	-		Guide	Styrning		3	
	1380517-1	1	-	-	-	-		Handle, l.h. bright	Handtag, v blank		2	
	6846646-5	1	-	-	-	-		Handle, l.h. black	Handtag, v svart	(1380519)	2	
	1380518-9	1	-	-	-	-		Handle, r.h. bright	Handtag, h blank		2	
	6846647-3	1	-	-	-	-		Handle, r.h. black	Handtag, h svart	(1380520)	2	
	1268806-5	1	-	-	-	-		• Trim moulding bright	• Prydnadslist blank		3	
	1268805-7	1	-	-	-	-		• Trim moulding black	• Prydnadslist svart		3	
	955781-0	1	-	-	-	-		• Nut	• Mutter		2	
1380524-7	1	-	-	-	-		• Pin	• Pinne		2		
3503041-0	2	-	-	-	-		Gasket	Packning		2		
3503042-8	2	-	-	-	-		Gasket	Packning		2		
955269-6	2	-	-	-	-		Screw	Skruv		2		
955892-5	2	-	-	-	-		Washer	Bricka		2		
956060-8	2	-	-	-	-		Screw	Skruv		2		
955891-7	2	-	-	-	-		Washer	Bricka		2		
965175-3	2	-	-	-	-		Flange screw	Flänskskruv		2		
3526223-7	2	-	-	-	-		Link	Länk		3		

1) 740 4DRS CH 294100-. 740 5DRS CH 176800-.

2) Cars without central locking system. / Bilar med centrallåsning

3) Cars with central locking system. / Bilar med centrallåsning.