
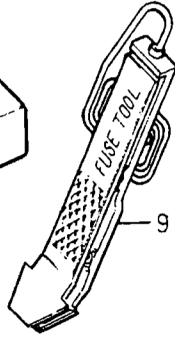
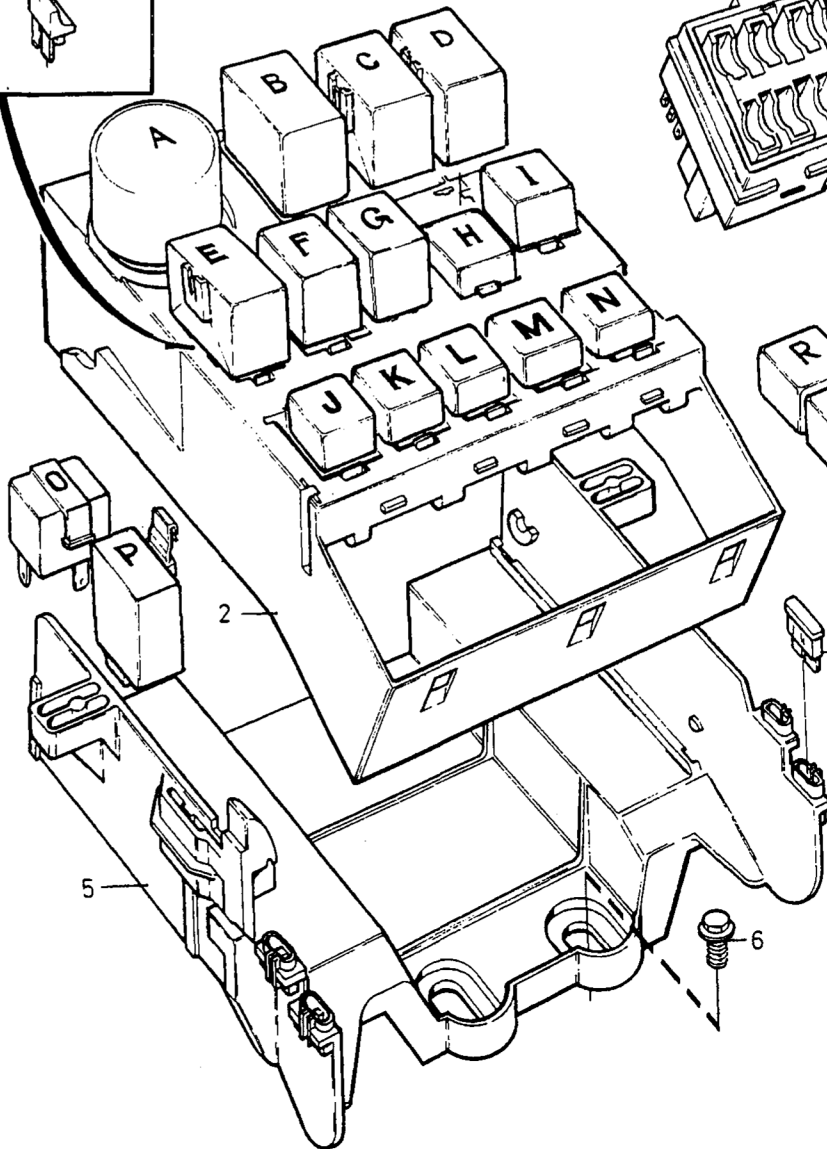


10

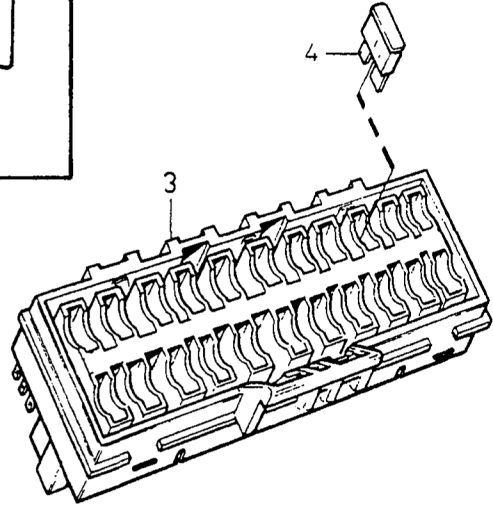

**VOLVO**  
 Genuine Parts  
 PV 371 64637

A	B	C	D	E	ELECTRICAL DISTRIBUTION CENTRE		ELCENTRAL		Group		
									Grupp		
									37		
									Page		
									Sida		
									701		
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
1		1	-	-	-	-	NS	Electrical distribut.unit .....	Elcentral .....		
1a	1323801-9	X	-	-	-	-		• Socket housing .....	• Hylsisolator .....	6-POLE	2
1b	1307160-0	X	-	-	-	-		• Socket housing .....	• Hylsisolator .....	9-POLE	2
☆ 2	3544224-3	1	-	-	-	-		• Frame .....	• Ram .....	(1258599)	3
3	1347425-9	1	-	-	-	-		• Fuse box .....	• Säkringsdosa .....	B200E, B200K, B230E, B230K, DSL	4
	1347424-2	1	-	-	-	-		• Fuse box .....	• Säkringsdosa .....	B200ET, B230ET, B200/230F, B230FT/GT, B204E, B234F, B204FT/GT.	4
4	969162-7	14	-	-	-	-		Blade fuse blue .....	Bladsäkring blå .....	15A	1
	969162-7	3	-	-	-	-	IK	Blade fuse blue .....	Bladsäkring blå .....	15A	1
	969163-5	4	-	-	-	-		Blade fuse uncoloured .....	Bladsäkring ofärgad .....	25A	1
	969163-5	2	-	-	-	-	IK	Blade fuse uncoloured .....	Bladsäkring ofärgad .....	25A	1
	969164-3	4	-	-	-	-		Blade fuse green .....	Bladsäkring grön .....	30A	1
	969164-3	1	-	-	-	-	IK	Blade fuse green .....	Bladsäkring grön .....	30A	1
	270927-7	X	-	-	-	-		Fuse kit .....	Säkringsats .....		1
5	(3544223)	1	-	-	-	-	SP	Bracket .....	Konsol .....	REPL 1PCS 944563-6, 1PCS 9130026-9.	4
6	965175-3	3	-	-	-	-		Flange screw .....	Flänsskruv .....	ALTER 1 (967552)	2
☆ 7	979781-2	3	-	-	-	-		Flange screw .....	Flänsskruv .....	ALTER 2 (975561)	2
8	1347480-4	2	-	-	-	-		Terminal block .....	Kopplingsplint .....		3
☆ 8	965175-3	2	-	-	-	-		Flange screw .....	Flänsskruv .....	ALTER 1 (967552)	2
☆ 9	979781-2	2	-	-	-	-		Flange screw .....	Flänsskruv .....	ALTER 2 (975561)	2
	1347584-3	1	-	-	-	-		Fuse tool .....	Säkringstång .....		5
		-	-	-	-	-		Other electrical equipment .....	Övrig elektrisk utrustning .....	SEE 36-599	
10		-	-	-	-	-		Relay .....	Relä .....		
	1362278-2	1	-	-	-	-		• Failure sensor yellow .....	• Glödtrådvakt gul .....	ALTER	2
								" A "	" A "		
	1362284-0	1	-	-	-	-		• Failure sensor white .....	• Glödtrådvakt vit .....	(A),(B),(D),(NL),(CH).	2
								" A "	" A "		
	1362923-3	1	-	-	-	-		• Failure sensor green .....	• Glödtrådvakt grön .....	(S),(N),(DK),(SF), (GB), (AUS)	2
								" A "	" A "		
	1362370-7	1	-	-	-	-		• Failure sensor red .....	• Glödtrådvakt röd .....	(J)	2
								" A "	" A "		
	3523610-8	1	-	-	-	-		• Intermittent relay .....	• Intervallrelä .....	(1235067)	2
								Windscreen wiper .....	Vindrutetorkare .....		
								" C "	" C "		
☆ 6849781-7		1	-	-	-	-		• Intermittent relay .....	• Intervallrelä .....	(3523611)(1363516)	2
								Rear window wiper .....	Bakrutetorkare .....		
								" D "	" D "		
	3523639-7	1	-	-	-	-		• Relay .....	• Relä .....	(1348600), B200/230E	2
								fuel injection .....	bränsleinsprutning .....		
								" E "	" E "		
	3523608-2	1	-	-	-	-		• Relay .....	• Relä .....	(1347603) EXC B200/230E	2
								fuel injection .....	bränsleinsprutning .....		
								" E "	" E "		
	1323163-4	1	-	-	-	-		• By-pass unit .....	• Överkoppling .....	1) B200K, B230K	4
								" E "	" E "		
☆ 9128846-4		1	-	-	-	-		• Relay .....	• Relä .....	(J)	3
								Temperature warning system .....	Temperaturvarningssystem .....		
								" F "	" F "		
	1363786-3	1	-	-	-	-		• Flasher relay .....	• Blinkrelä .....		1
								" G "	" G "		
☆ 1259926-2		1	-	-	-	-		• Relay .....	• Relä .....	-1989 (AUS) (1504952)	2
								Auxiliary headlights .....	Extraljus .....		
								" H "	" H "		

1) 740 4DRS CH -323511. 740 5DRS CH -195144.

## ELECTRICAL DISTRIBUTION CENTRE ELCENTRAL

 Group  
 Grupp  
**37**  
 Page  
 Sida  
**703**

Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
	3523613-2	1	-	-	-	-	• Light relay brown ..... Front fog lamp " H "	• Ljusrelä brun ..... Dimljus " H "	1990. (J),(T),(MAL)	2	
	3523615-7	1	-	-	-	-	• Light relay green ..... Front fog lamp " H "	• Ljusrelä grön ..... Dimljus " H "	1990.(I) (3523614)	2	
	3523615-7	1	-	-	-	-	• Light relay blue ..... Front fog lamp " H "	• Ljusrelä blå ..... Dimljus " H "	1990. (SF),(GB),(CH), (B),(E).	2	
☆	9130019-4	1	-	-	-	-	• Light relay grey ..... Front fog lamp " H "	• Ljusrelä grå ..... Dimljus " H "	1990. (F),(D),(A),(P)	2	
☆	9130020-2	1	-	-	-	-	• Light relay violet ..... Front fog lamp " H "	• Ljusrelä violett ..... Dimljus " H "	1990. (S),(DK),(IS)	2	
	3523615-7	1	-	-	-	-	• Light relay black ..... Front fog lamp " H "	• Ljusrelä svart ..... Dimljus " H "	1990. (N), (AUS) (3523618)	2	
	3523806-2	1	-	-	-	-	• Relay ..... Overdrive "   "	• Relä ..... Överväxel "   "	MAN.TRANS M46 (1398266)	2	
	3523804-7	1	-	-	-	-	• Relay ..... Overdrive "   "	• Relä ..... Överväxel "   "	2) AUTO.TRANS AW70/71/72 (1347764)	2	
	1398154-3	1	-	-	-	-	Relay ..... Overdrive "   "	Relä ..... Överväxel "   "	AUTO.TRANS AW71 3)	2	
	1259925-4	1	-	-	-	-	• Relay power windows ..... cooling fan " J "	• Relä elektrisk fönsterhiss ..... kylläkt " J "	-1989	2	
	1259925-4	1	-	-	-	-	• Relay relieve ..... " J "	• Relä avlastning ..... " J "	1990	2	
	1324749-9	1	-	-	-	-	• Relay ..... main light, automatic " K "	• Relä ..... huvudljus, automatiskt " K "		2	
☆	3523739-5	1	-	-	-	-	• Relay ..... central locking " L "	• Relä ..... centrallås " L "	(1348129)	2	
☆	1259926-2	1	-	-	-	-	• Relay rear foglamp ..... " M "	• Relä dimbakkyljus ..... " M "	(1504952)	2	
☆	1259926-2	1	-	-	-	-	• Relay ..... Auxiliary headlights " N "	• Relä ..... Extraljus " N "	-1989 (1504952)	2	
☆	1259926-2	1	-	-	-	-	• Relay relieve ..... high beam " N "	• Relä avlastning ..... helljus " N "	1990 (1504952)	2	

 2) Without kick-down lock. / Utan kick-down spärr.  
 3) With kick-downs lock. / Med kick-down spärr.