


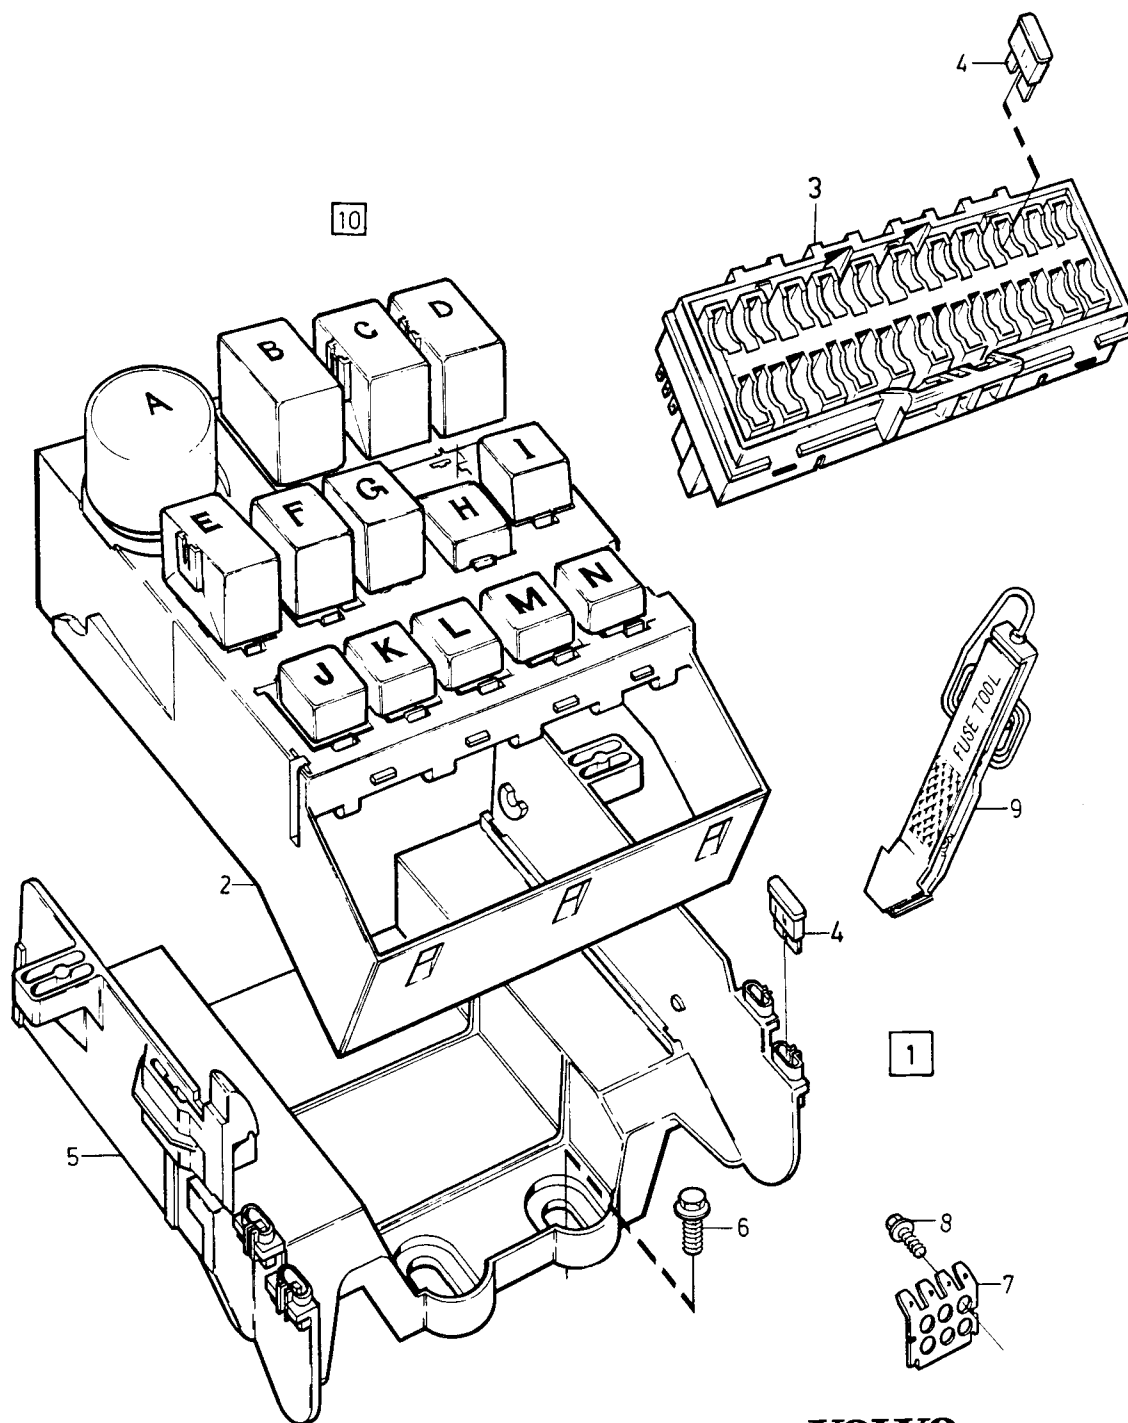


VOLVO
 Genuine Parts
 PV 371 54390

A							ELECTRICAL DISTRIBUTION CENTRE		ELCENTRAL		Group
B											Grupp
C											37
D											Page
E											Sida
											405
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
1	1323801-9	X	-	-	-	-	NS	Electrical distribut.unit	Elcentral	6-POLE	2
	1307160-0	X	-	-	-	-		• Socket housing	• Hylsisolator	9-POLE	
2	3544224-3	1	-	-	-	-		• Socket housing	• Hylsisolator		2
3	1347425-9	1	-	-	-	-		• Frame	• Ram		3
								• Fuse box	• Säkringsdosa	B200E, B230E	4
4	1347424-2	1	-	-	-	-		• Fuse box	• Säkringsdosa	D24, D24T, D24TIC	4
	969162-7	14	-	-	-	-		Blade fuse blue	Bladsäkring blå	B200F, B230F	
	969162-7	3	-	-	-	-	IK	Blade fuse blue	Bladsäkring blå	15A	1
	969163-5	4	-	-	-	-		Blade fuse uncoloured	Bladsäkring ofärgad	15A	
	969163-5	2	-	-	-	-	IK	Blade fuse uncoloured	Bladsäkring ofärgad	25A	1
	969164-3	4	-	-	-	-		Blade fuse green	Bladsäkring grön	25A	
	969164-3	1	-	-	-	-	IK	Blade fuse green	Bladsäkring grön	30A	1
	270927-7	X	-	-	-	-		Fuse kit	Säkringsats	30A	
5	3544223-5	1	-	-	-	-		Bracket	Konsol		4
6	973475-7	3	-	-	-	-		Screw	Skruv		1
7	1347480-4	2	-	-	-	-		Terminal block	Kopplingsplint		3
8	973475-7	2	-	-	-	-		Screw	Skruv		1
9	1347584-3	1	-	-	-	-		Fuse tool	Säkringstång		5
10		-	-	-	-	-		Other electrical equipment	Övrig elektrisk utrustning	SEE 36 • 333	
	1362278-2	1	-	-	-	-		Relay	Relä		
								• Failure sensor yellow	• Glödtrådvakt gul	ALTER	2
								" A "	" A "		
	1362284-0	1	-	-	-	-		• Failure sensor white	• Glödtrådvakt vit	(A),(B),(D),(NL),(CH).	2
								" A "	" A "		
	1362923-3	1	-	-	-	-		• Failure sensor green	• Glödtrådvakt grön	(S),(N),(DK),(SF).	2
								" A "	" A "	(GB). (AUS)	
	1362370-7	1	-	-	-	-		• Failure sensor red	• Glödtrådvakt röd	(J)	2
								" A "	" A "		
	3523610-8	1	-	-	-	-		• Intermittent relay	• Intervallrelä		2
								Windscreen wiper	Vindrutetorkare		
								" C "	" C "		
	3523611-6	1	-	-	-	-		• Intermittent relay	• Intervallrelä		2
								Rear window wiper	Bakrutetorkare		
								" D "	" D "		
	3523639-7	1	-	-	-	-		• Relay	• Relä	B200E, B230E	2
								fuel injection	bränsleinsprutning		
								" E "	" E "		
	3523608-2	1	-	-	-	-		• Relay	• Relä	B200F, B230F	2
							fuel injection	bränsleinsprutning			
								" E "	" E "		
	1367598-8	1	-	-	-	-		• Relay	• Relä	(J)	3
							Temperature warning system	Temperaturvarningssystem			
								" F "	" F "		
	1363786-3	1	-	-	-	-		• Flasher relay	• Blinkrelä		1
							" G "	" G "			
	3523613-2	1	-	-	-	-		• Light relay brown	• Ljusrelä brun	(J), (T), (MAL)	2
								Front fog lamp	Dimljus		
								" H "	" H "		
	3523614-0	1	-	-	-	-		• Light relay green	• Ljusrelä grön	(I)	2
							Front fog lamp	Dimljus			
								" H "	" H "		
	3523615-7	1	-	-	-	-		• Light relay blue	• Ljusrelä blå	(SF),(GB),(CH),(B),(E)	2
							Front fog lamp	Dimljus			
								" H "	" H "		
	3523616-5	1	-	-	-	-		• Light relay grey	• Ljusrelä grå	(F), (D), (A), (P)	2
							Front fog lamp	Dimljus			
								" H "	" H "		
	3523617-3	1	-	-	-	-		• Light relay violet	• Ljusrelä violett	(S), (DK), (IS)	2
							Front fog lamp	Dimljus			

A						ELECTRICAL DISTRIBUTION CENTRE		ELCENTRAL		Group Grupp	
B										37	
C										Page Sida	
D										407	
E											
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
	3523618-1	1	-	-	-	-		" H " • Light relay black Front fog lamp " H "	" H " • Ljusrelä svart Dimljus " H "	(N), (AUS)	2
	3523806-2	1	-	-	-	-		• Relay Overdrive " I "	• Relä Övertväxel " I "	MAN.TRANS M46	2
	3523804-7	1	-	-	-	-		• Relay Overdrive " I "	• Relä Övertväxel " I "	1) AUTO.TRANS AW70/71/72	2
	1398154-3	1	-	-	-	-		Relay Overdrive " I "	Relä Övertväxel " I "	AUTO.TRANS AW71 2)	2
	1259925-4	1	-	-	-	-		• Relay relieve " J "	• Relä avlastning " J "		2
	1324749-9	1	-	-	-	-		• Relay main light, automatic " K "	• Relä huvudljus, automatiskt " K "		2
	3523739-5	1	-	-	-	-		• Relay central locking " L "	• Relä centrallås " L "		2
	1504952-1	1	-	-	-	-		• Relay rear foglamp " M "	• Relä dimbakljus " M "		1
	1504952-1	1	-	-	-	-		• Relay relieve main beam " N "	• Relä avlastning helljus " N "		1

1) Without kick-down lock. / Utan kick-down spärr.

2) With kick-downs lock. / Med kick-down spärr.

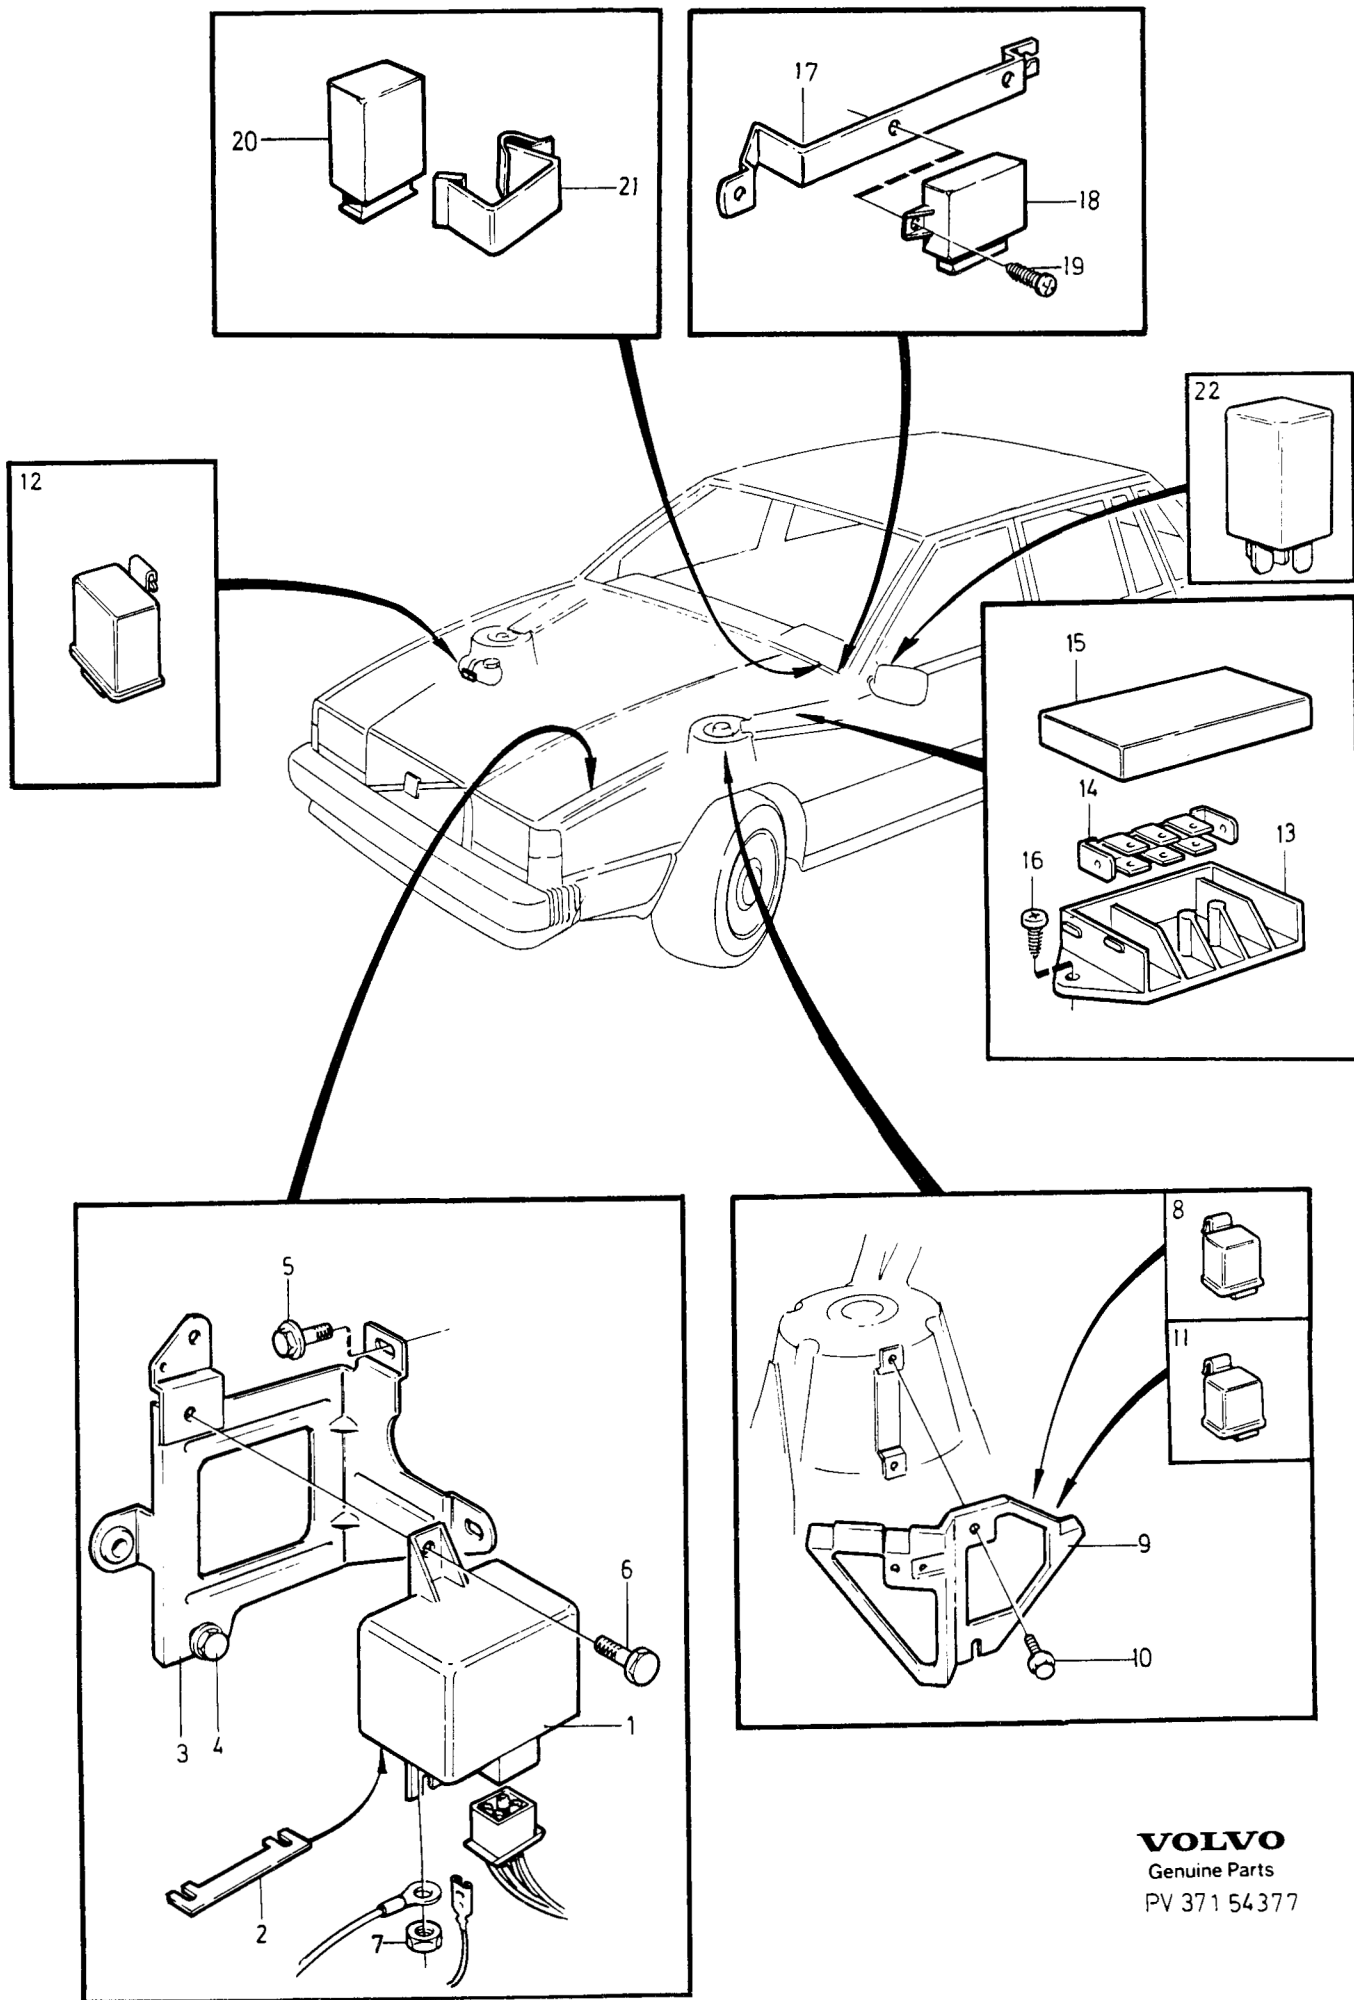

VOLVO
Genuine Parts
PV 371 54377

A							OTHER RELAYS		ÖVRIGA RELÄER		Group Grupp
B											37
C											Page Sida
D											409
E											
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
1	1363438-1	1	-	-	-	-		Relay glow	Relä glödning	DSL	2
2	1323122-0	1	-	-	-	-		Fuse	Säkring	80A	1
3	3501546-0	1	-	-	-	-		Bracket	Konsol		4
4	965175-3	1	-	-	-	-		• Flange screw	• Flänsskruv		2
5	966682-7	2	-	-	-	-		Screw	Skruv		2
6	965175-3	1	-	-	-	-		Flange screw	Flänsskruv		2
7	955781-0	2	-	-	-	-		Nut	Mutter		2
8	1348294-8	1	-	-	-	-		Relay	Relä	D24T, E.G.R MAN.TRANS	2
	1362422-6	1	-	-	-	-		Relay	Relä	D24T, E.G.R AUTO.TRANS	2
9	3517601-5	1	-	-	-	-		Bracket	Konsol	B200E, B230E	4
10	965175-3	2	-	-	-	-		Flange screw	Flänsskruv		2
11	1347741-9	1	-	-	-	-		Relay	Relä	B200E, B230E	2
								idle advance system	tomgångshöjning	AUTO.TRANS	
12	1323592-4	1	-	-	-	-		Relay	Relä	DSL A.C	2
								Pressure monitor	Tryckvakt		
	1323592-4	1	-	-	-	-		Relay	Relä	4CYL	2
								Suppression device	Avstörningsanordning		
								Radio	Radio		
	1323592-4	1	-	-	-	-		Relay	Relä	4CYL, A.C	2
								Fan electric	Kylfläkt elektrisk		
13	1234048-5	1	-	-	-	-		Junction box	Kopplingsdosa		3
								Lower section	Underdel		
14	1234263-0	1	-	-	-	-		Terminal	Anslutningsstift		3
15	1234264-8	1	-	-	-	-		Cover	Lock		3
16	958236-2	2	-	-	-	-		Screw	Skruv		2
17	1332203-7	1	-	-	-	-		Bracket	Konsol	(GB)	5
18	3523759-3	1	-	-	-	-		Regulator	Regulator	(GB)	3
								DIM-DIP	DIM-DIP		
19	972238-0	3	-	-	-	-		Screw "Torx"	Skruv "Torx"	(GB)	2
20	1362887-0	1	-	-	-	-		Relay gear change inhibitor ...	Relä växelspärr	AUTO.TRANS	2
21	1212957-3	1	-	-	-	-		Clip	Clips		2
22		-	-	-	-	-		Control unit	Styrenhet	SEE 85-795	
								seat heating unit	stolsuppvärmning		