



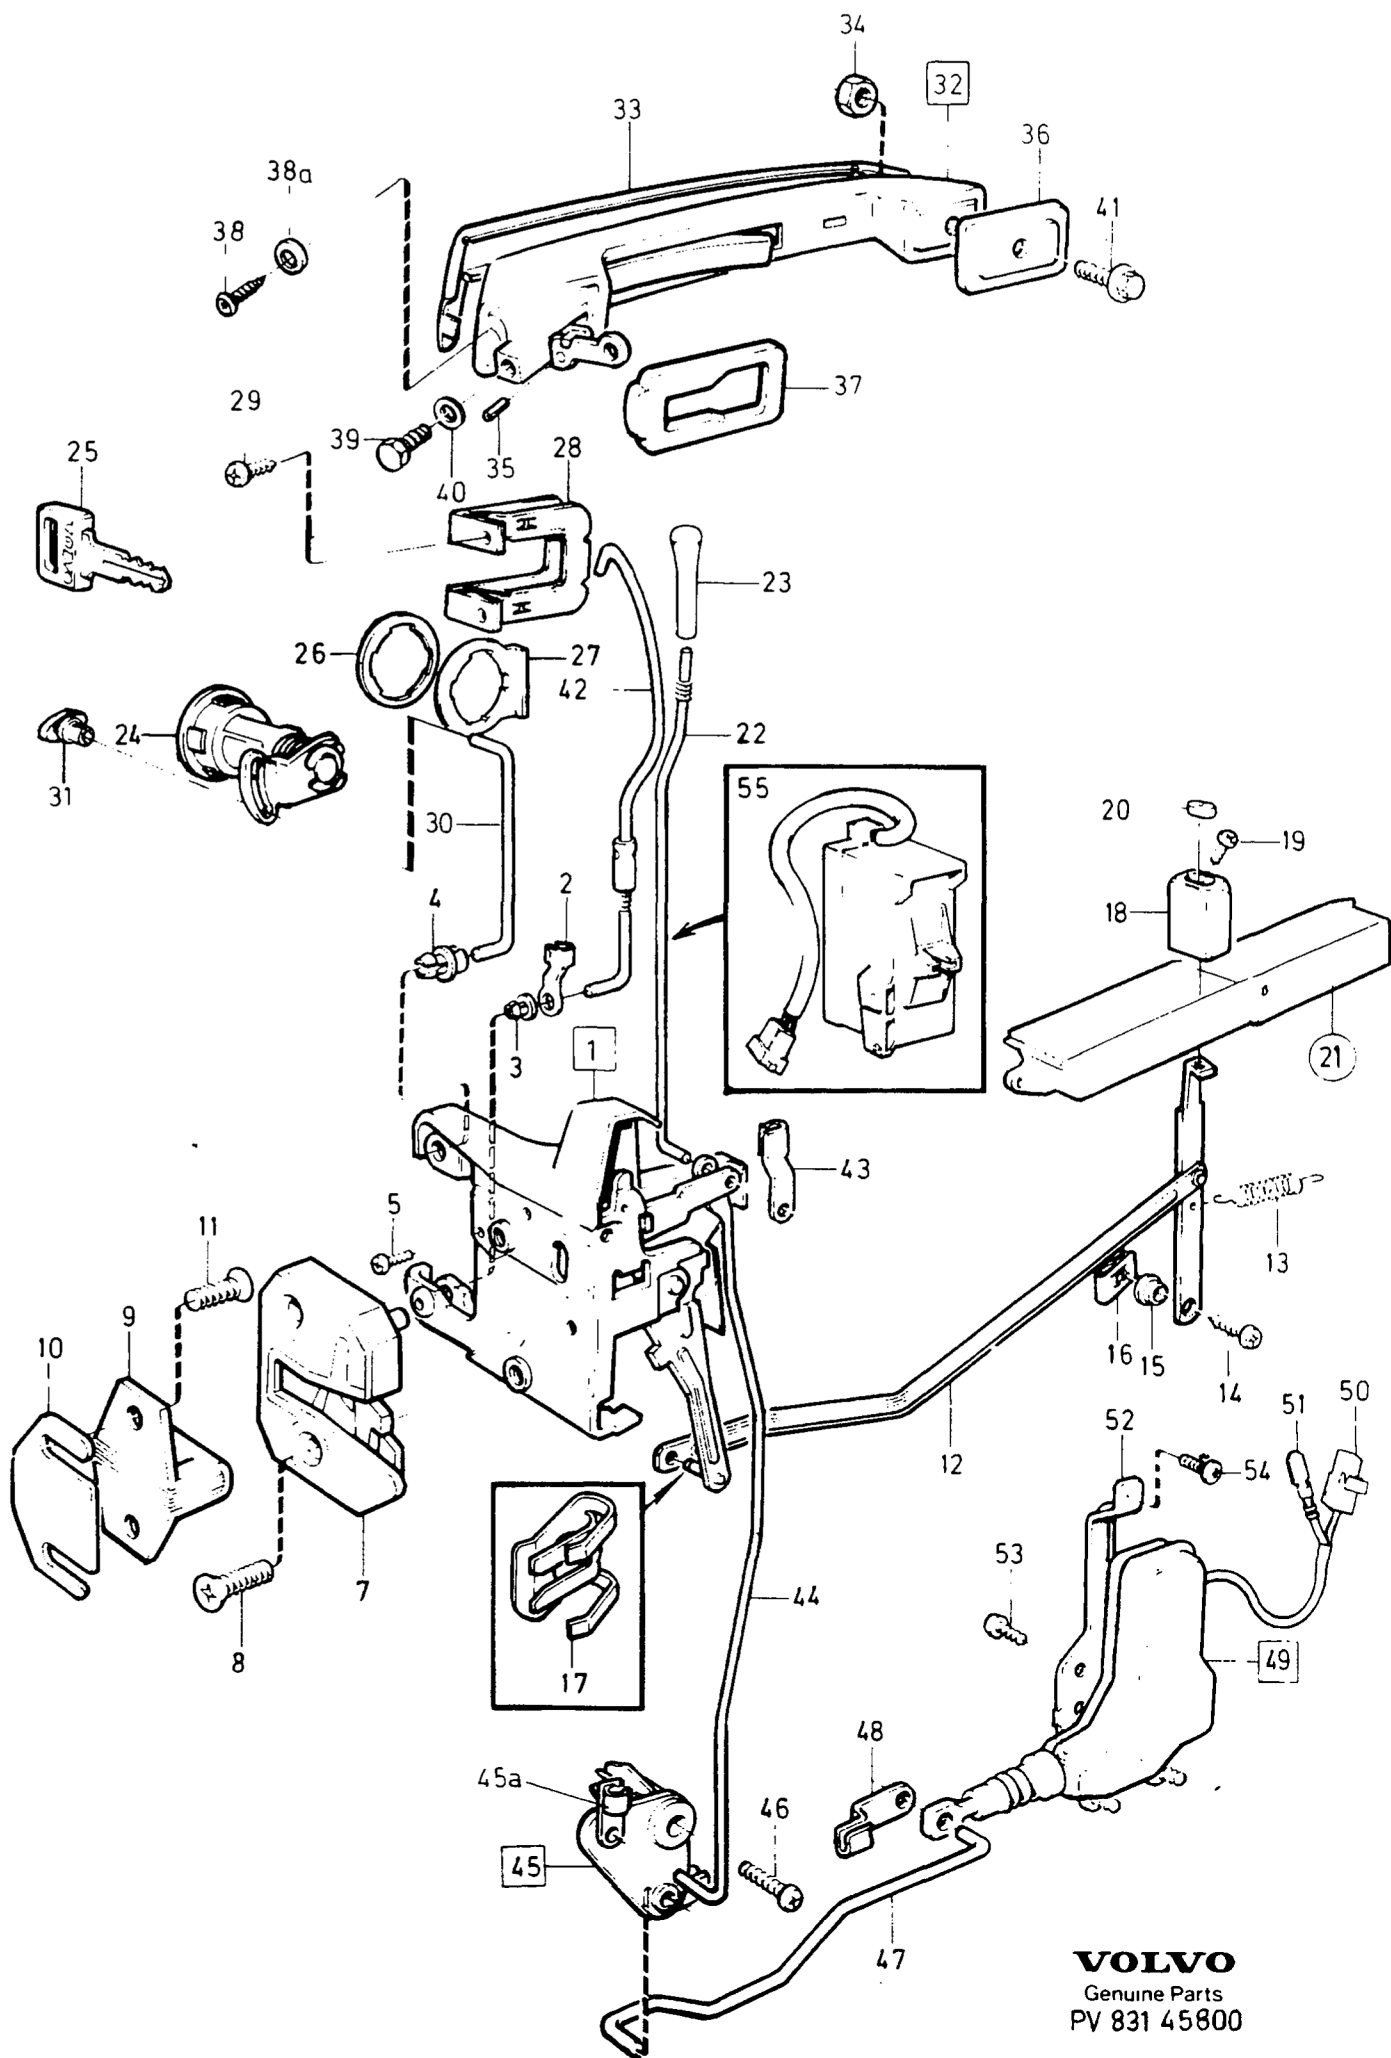

VOLVO
Genuine Parts
PV 831 45800

A							FRONT DOOR LOCKING SYSTEM		FRAMDÖRR LÅSSYSTEM		Group Grupp	
B											83	
C											Page Sida	
D												
E							1)				907	
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R	
		A	B	C	D	E						
☆	1	6846049-2	1	-	-	-	-	SP	Lock, l.h.	Lås, v	L.H.D	3
☆		6846051-8	1	-	-	-	-		Lock, l.h.	Lås, v	R.H.D	3
		(1334533)	1	-	-	-	-		Lock, r.h.	Lås, h	L.H.D	3
☆		6846050-0	1	-	-	-	-		Lock, r.h.	Lås, h	REPL 1PCS 6846052-6. R.H.D	3
2		1320863-2	1	-	-	-	-		•Clip	•Clips		2
3		1320864-0	1	-	-	-	-		•Bushing	•Bussning		2
4		1321511-6	1	-	-	-	-		•Clip	•Clips		2
5		956057-4	1	-	-	-	-		Screw	Skruv		2
☆	7	9126336-8	1	-	-	-	-		Lock, l.h.	Lås, v		3
☆		9126337-6	1	-	-	-	-		Lock, r.h.	Lås, h		3
8		1355226-0	4	-	-	-	-		Screw	Skruv		2
9		1380074-3	2	-	-	-	-		Lock brace	Låsbygel		3
☆	10	6817942-3	X	-	-	-	-		Shim	Justerbleck	(1316087)	3
11		3503873-6	4	-	-	-	-		Screw	Skruv		2
12		1320310-4	1	-	-	-	-		Door opener, l.h.	Dörröppnare, v		3
		1320311-2	1	-	-	-	-		Door opener, r.h.	Dörröppnare, h		3
13		1320316-1	2	-	-	-	-		Return spring	Returfjäder		2
14		958246-1	2	-	-	-	-		Screw	Skruv		2
15		1203311-4	2	-	-	-	-		Washer	Bricka		3
16		1255989-4	2	-	-	-	-		Spring nut	Fjädermutter		2
17		1203658-8	2	-	-	-	-		Clip	Clips		2
18		1316145-0	2	-	-	-	-		Handle, black	Handtag, svart		3
		1316146-8	2	-	-	-	-		Handle, blue	Handtag, blå		3
		3503173-1	2	-	-	-	-		Handle, beige	Handtag, beige		3
		3503174-9	2	-	-	-	-		Handle, red	Handtag, röd		3
		3503175-6	2	-	-	-	-		Handle, grey	Handtag, grå		3
☆	19	969464-7	2	-	-	-	-		Six point socket screw	Sextandhålskruv	(955119)	2
20		1316150-0	2	-	-	-	-		Plug, black	Propp, svart		3
		1316151-8	2	-	-	-	-		Plug, blue	Propp, blå		3
		3503176-4	2	-	-	-	-		Plug, beige	Propp, beige		3
		3503177-2	2	-	-	-	-		Plug, red	Propp, röd		3
		3503178-0	2	-	-	-	-		Plug, grey	Propp, grå		3
21			-	-	-	-	-		Guide	Styrning	SEE 85 • 991	
☆	22	3536891-9	2	-	-	-	-		Link	Länk	EXC (AUS) (1334757)	3
		1334558-2	2	-	-	-	-		Link	Länk	(AUS)	3
23		1334830-5	2	-	-	-	-		Lock button, black	Låsknapp, svart	EXC (AUS)	2
		1203219-9	2	-	-	-	-		Lock button, black	Låsknapp, svart	(AUS)	2
		1334831-3	2	-	-	-	-		Lock button, blue	Låsknapp, blå	EXC (AUS)	2
		1316928-9	2	-	-	-	-		Lock button, blue	Låsknapp, blå	(AUS)	2
		1380824-1	2	-	-	-	-		Lock button, beige	Låsknapp, beige	EXC (AUS)	2
		1380821-7	2	-	-	-	-		Lock button, beige	Låsknapp, beige	(AUS)	2
		1380825-8	2	-	-	-	-		Lock button, red	Låsknapp, röd	EXC (AUS)	2
		1380822-5	2	-	-	-	-		Lock button, red	Låsknapp, röd	(AUS)	2
		1380826-6	2	-	-	-	-		Lock button, grey	Låsknapp, grå	EXC (AUS)	2
		1380823-3	2	-	-	-	-		Lock button, grey	Låsknapp, grå	(AUS)	2
24			1	-	-	-	-		Lock kit	Låssats	SEE 83 • 935	
☆	25	6817957-1	X	-	-	-	-		Key blank pass key	Nyckelämne huvudnyckel		2
☆		6817958-9	X	-	-	-	-		Key blank purse key	Nyckelämne plånboksnyckel ...		2
☆	26	3536509-7	2	-	-	-	-		Gasket	Packning	(1355535)	2
27		1334865-1	2	-	-	-	-		Lock washer	Låsbricka		2
☆	28	3536825-7	2	-	-	-	-		Clip	Clips	(3528949)	3
29		972079-8	4	-	-	-	-		Six point socket screw	Sextandhålskruv	(968464)	2
30		1268605-1	1	-	-	-	-		Link, l.h.	Länk, v		3
		1268606-9	1	-	-	-	-		Link, r.h.	Länk, h		3
31		1334720-8	2	-	-	-	-		Clip	Clips		3
32		1380517-1	1	-	-	-	-		Handle, l.h. bright	Handtag, v blank		2
		1380518-9	1	-	-	-	-		Handle, r.h. bright	Handtag, h blank		2
33		1268806-5	1	-	-	-	-		• Trim moulding bright	• Prydnadslist blank		3
34		955781-0	1	-	-	-	-		• Nut	• Mutter		2



1) 760 4DRS CH -58499. 760 5DRS CH -23499.

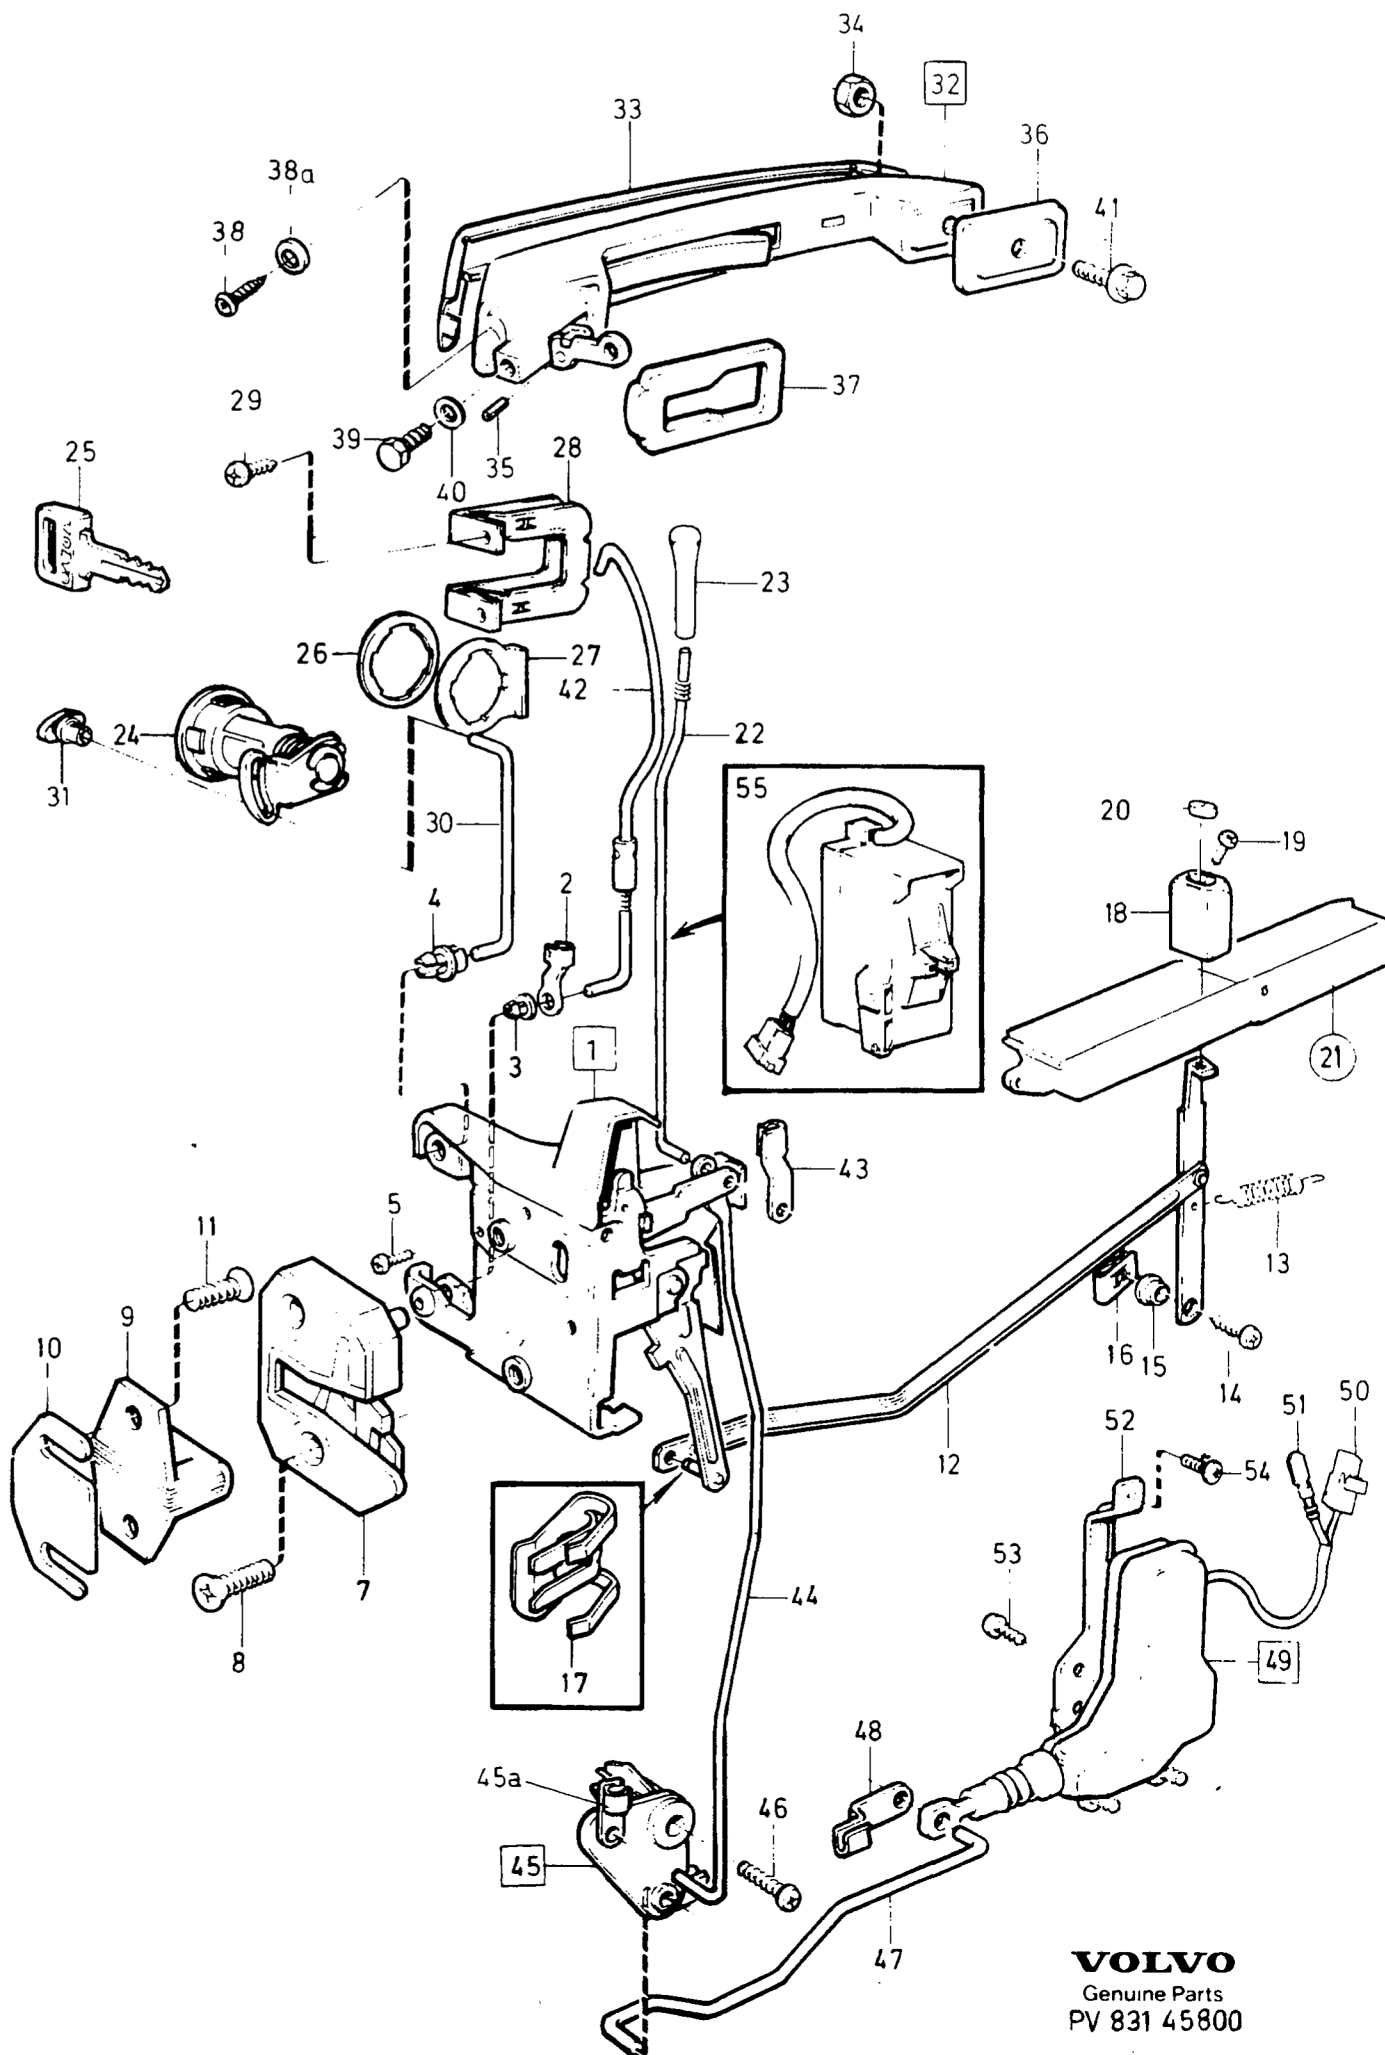

VOLVO
Genuine Parts
PV 831 45800

A							FRONT DOOR LOCKING SYSTEM		FRAMDÖRR LÄSSYSTEM		Group Grupp
B											83
C											Page Sida
D											909
E											
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
35	1380524-7	1	-	-	-	-		• Pin	• Pinne		2
36	3503041-0	2	-	-	-	-		Gasket	Packning	(1268603)	2
37	3503042-8	2	-	-	-	-		Gasket	Packning	(1334593)	2
38	956060-8	2	-	-	-	-		Screw	Skruv		2
38a	955891-7	2	-	-	-	-		Washer	Bricka		2
39	955269-6	2	-	-	-	-		Screw	Skruv		2
40	955892-5	2	-	-	-	-		Washer	Bricka		2
41	965175-3	2	-	-	-	-		Flange screw	Flänsskruv		2
42	1268724-0	1	-	-	-	-		Link, l.h.	Länk, v		3
	1268725-7	1	-	-	-	-		Link, r.h.	Länk, h		3
43	6848358-5	2	-	-	-	-		Clamp	Klamma	(1304766)	3
44	1321507-4	1	-	-	-	-		Link, l.h.	Länk, v		3
	1321508-2	1	-	-	-	-		Link, r.h.	Länk, h		3
45	1321515-7	1	-	-	-	-		Lever, l.h.	Hävarm, v		3
	1321516-5	1	-	-	-	-		Lever, r.h.	Hävarm, h		3
45a	9152025-4	2	-	-	-	-		• Clip	• Clips	(1246096)	3
46	972079-8	1	-	-	-	-		Six point socket screw	Sextandhålskruv	(965395)	2
47	1334318-1	1	-	-	-	-		Link	Länk		3
48	6848358-5	1	-	-	-	-		Clamp	Klamma	(1304766)	3
49	1380298-8	1	-	-	-	-		Motor	Motor		2
50	968381-4	1	-	-	-	-		• Tab housing	• Stiftisolator		3
51	968373-1	2	-	-	-	-		• Cable terminal	• Ledningssko		3
52	1316772-1	1	-	-	-	-		Bracket	Konsol		3
53	955129-2	2	-	-	-	-		Screw	Skruv		2
54	958236-2	3	-	-	-	-		Screw	Skruv		2
55		1	-	-	-	-		Switch	Omkopplare	SEE 36 • 453	



1) 760 4DRS CH -58499. 760 5DRS CH -23499.

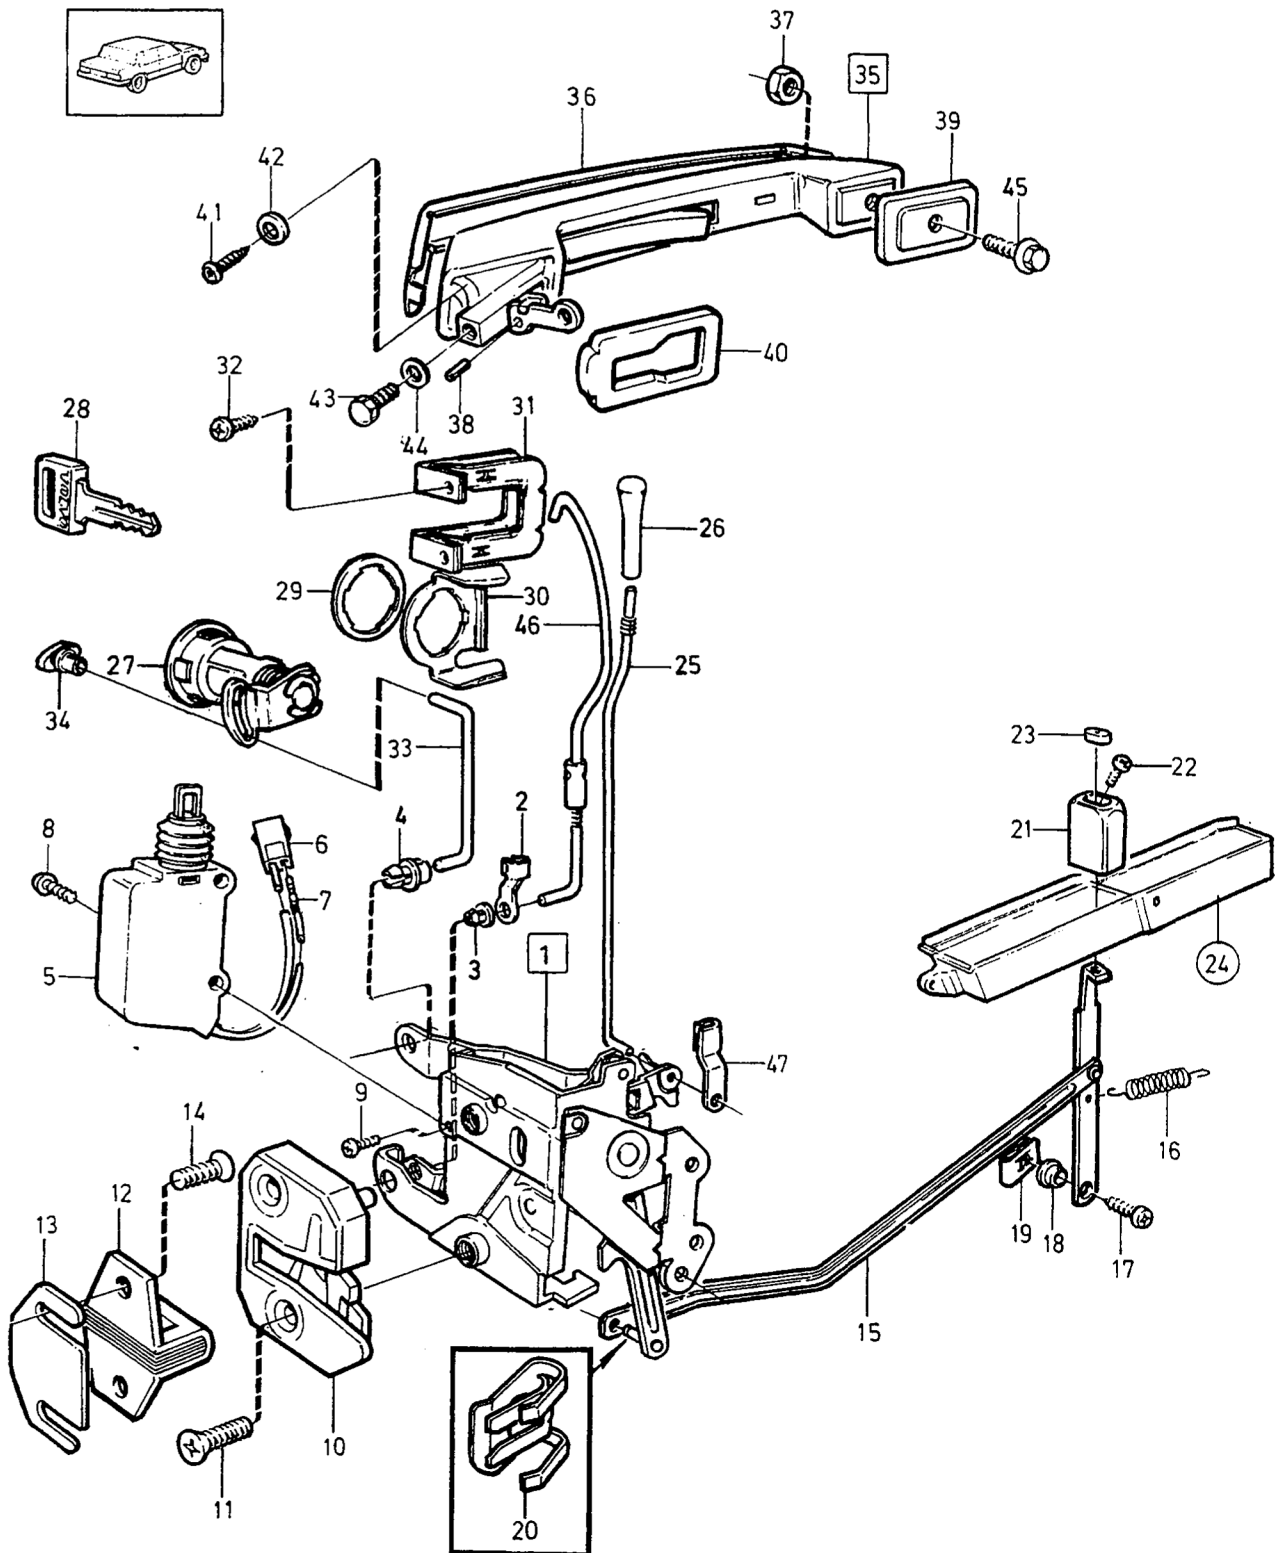

VOLVO
Genuine Parts
PV 831 53792

A							FRONT DOOR LOCKING SYSTEM		FRAMDÖRR LÅSSYSTEM		Group Grupp 83
B											Page Sida
C											
D											
E							1)				911
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
☆	1	6846049-2	1	-	-	-		Lock, l.h.	Lås, v	L.H.D	3
☆		6846051-8	1	-	-	-		Lock, l.h.	Lås, v	R.H.D	3
☆		6846052-6	1	-	-	-		Lock, r.h.	Lås, h	L.H.D	3
☆		6846050-0	1	-	-	-		Lock, r.h.	Lås, h	R.H.D	3
	2	1320863-2	1	-	-	-		•Clip	•Clips		2
	3	1320864-0	1	-	-	-		•Bushing	•Bussning		2
	4	1321511-6	1	-	-	-		•Clip	•Clips		2
	5	3503946-0	1	-	-	-		Switch drivers door	Strömställare förardörr		3
		3503941-1	1	-	-	-		Motor side door	Motor sidodörr		3
	6	968389-7	1	-	-	-		•Tab housing drivers door	•Stiftisolator förardörr		3
		968381-4	1	-	-	-		•Tab housing side door	•Stiftisolator sidodörr		3
	7	968373-1	3	-	-	-		•Cable terminal drivers door ..	•Ledningssko förardörr		3
		968373-1	2	-	-	-		•Cable terminal side door	•Ledningssko sidodörr		3
	8	949947-6	2	-	-	-		Screw	Skruv		2
	9	956057-4	1	-	-	-		Screw	Skruv		2
☆	10	9126336-8	1	-	-	-		Lock, l.h.	Lås, v		3
☆		9126337-6	1	-	-	-		Lock, r.h.	Lås, h		3
	11	1355226-0	4	-	-	-		Screw	Skruv		2
	12	1380074-3	2	-	-	-		Lock brace	Låsbygel		3
☆	13	6817942-3	X	-	-	-		Shim	Justerbleck	(1316087)	3
	14	3503873-6	4	-	-	-		Screw	Skruv		2
	15	1320310-4	1	-	-	-		Door opener, l.h.	Dörröppnare, v		3
		1320311-2	1	-	-	-		Door opener, r.h.	Dörröppnare, h		3
	16	1320316-1	2	-	-	-		Return spring	Returfjäder		2
	17	958246-1	2	-	-	-		Screw	Skruv		2
	18	1203311-4	2	-	-	-		Washer	Bricka		3
	19	1255989-4	2	-	-	-		Spring nut	Fjädermutter		2
	20	1203658-8	2	-	-	-		Clip	Clips		2
	21	1316145-0	2	-	-	-		Handle, black	Handtag, svart		3
		1316146-8	2	-	-	-		Handle, blue	Handtag, blå		3
		3503173-1	2	-	-	-		Handle, beige	Handtag, beige		3
		3503174-9	2	-	-	-		Handle, red	Handtag, röd		3
		3503175-6	2	-	-	-		Handle, grey	Handtag, grå		3
☆	22	969464-7	2	-	-	-		Six point socket screw	Sextandhålskruv	(955119)	2
	23	1316150-0	2	-	-	-		Plug, black	Propp, svart		3
		1316151-8	2	-	-	-		Plug, blue	Propp, blå		3
		3503176-4	2	-	-	-		Plug, beige	Propp, beige		3
		3503177-2	2	-	-	-		Plug, red	Propp, röd		3
		3503178-0	2	-	-	-		Plug, grey	Propp, grå		3
	24		-	-	-	-		Guide	Styrning	SEE 85 • 991	
☆	25	3536891-9	2	-	-	-		Link	Länk	EXC (AUS) (1334757)	3
		1334558-2	2	-	-	-		Link	Länk	(AUS)	3
	26	1334830-5	2	-	-	-		Lock button, black	Låsknapp, svart	EXC (AUS)	2
		1203219-9	2	-	-	-		Lock button, black	Låsknapp, svart	(AUS)	2
		1334831-3	2	-	-	-		Lock button, blue	Låsknapp, blå	EXC (AUS)	2
		1316928-9	2	-	-	-		Lock button, blue	Låsknapp, blå	(AUS)	2
		1380824-1	2	-	-	-		Lock button, beige	Låsknapp, beige	EXC (AUS)	2
		1380821-7	2	-	-	-		Lock button, beige	Låsknapp, beige	(AUS)	2
		1380825-8	2	-	-	-		Lock button, red	Låsknapp, röd	EXC (AUS)	2
		1380822-5	2	-	-	-		Lock button, red	Låsknapp, röd	(AUS)	2
		1380826-6	2	-	-	-		Lock button, grey	Låsknapp, grå	EXC (AUS)	2
		1380823-3	2	-	-	-		Lock button, grey	Låsknapp, grå	(AUS)	2
	27		1	-	-	-		Lock kit	Låssats	SEE 83 • 935	
☆	28	6817957-1	X	-	-	-		Key blank pass key	Nyckelämne huvudnyckel		2
☆		6817958-9	X	-	-	-		Key blank door and starting locks	Nyckelämne dörr och startlås ..		2
☆	29	3536509-7	2	-	-	-		Gasket	Packning	(1355535)	2
	30	3538087-2	2	-	-	-		Lock washer	Låsbricka		2
☆	31	3536825-7	2	-	-	-		Clip	Clips	(3528949)	3
	32	972079-8	4	-	-	-		Six point socket screw	Sextandhålskruv	(968464)	2
	33	1268605-1	1	-	-	-		Link, l.h.	Länk, v		3

1) 760 4DRS CH 58500-. 760 5DRS CH 23500-.

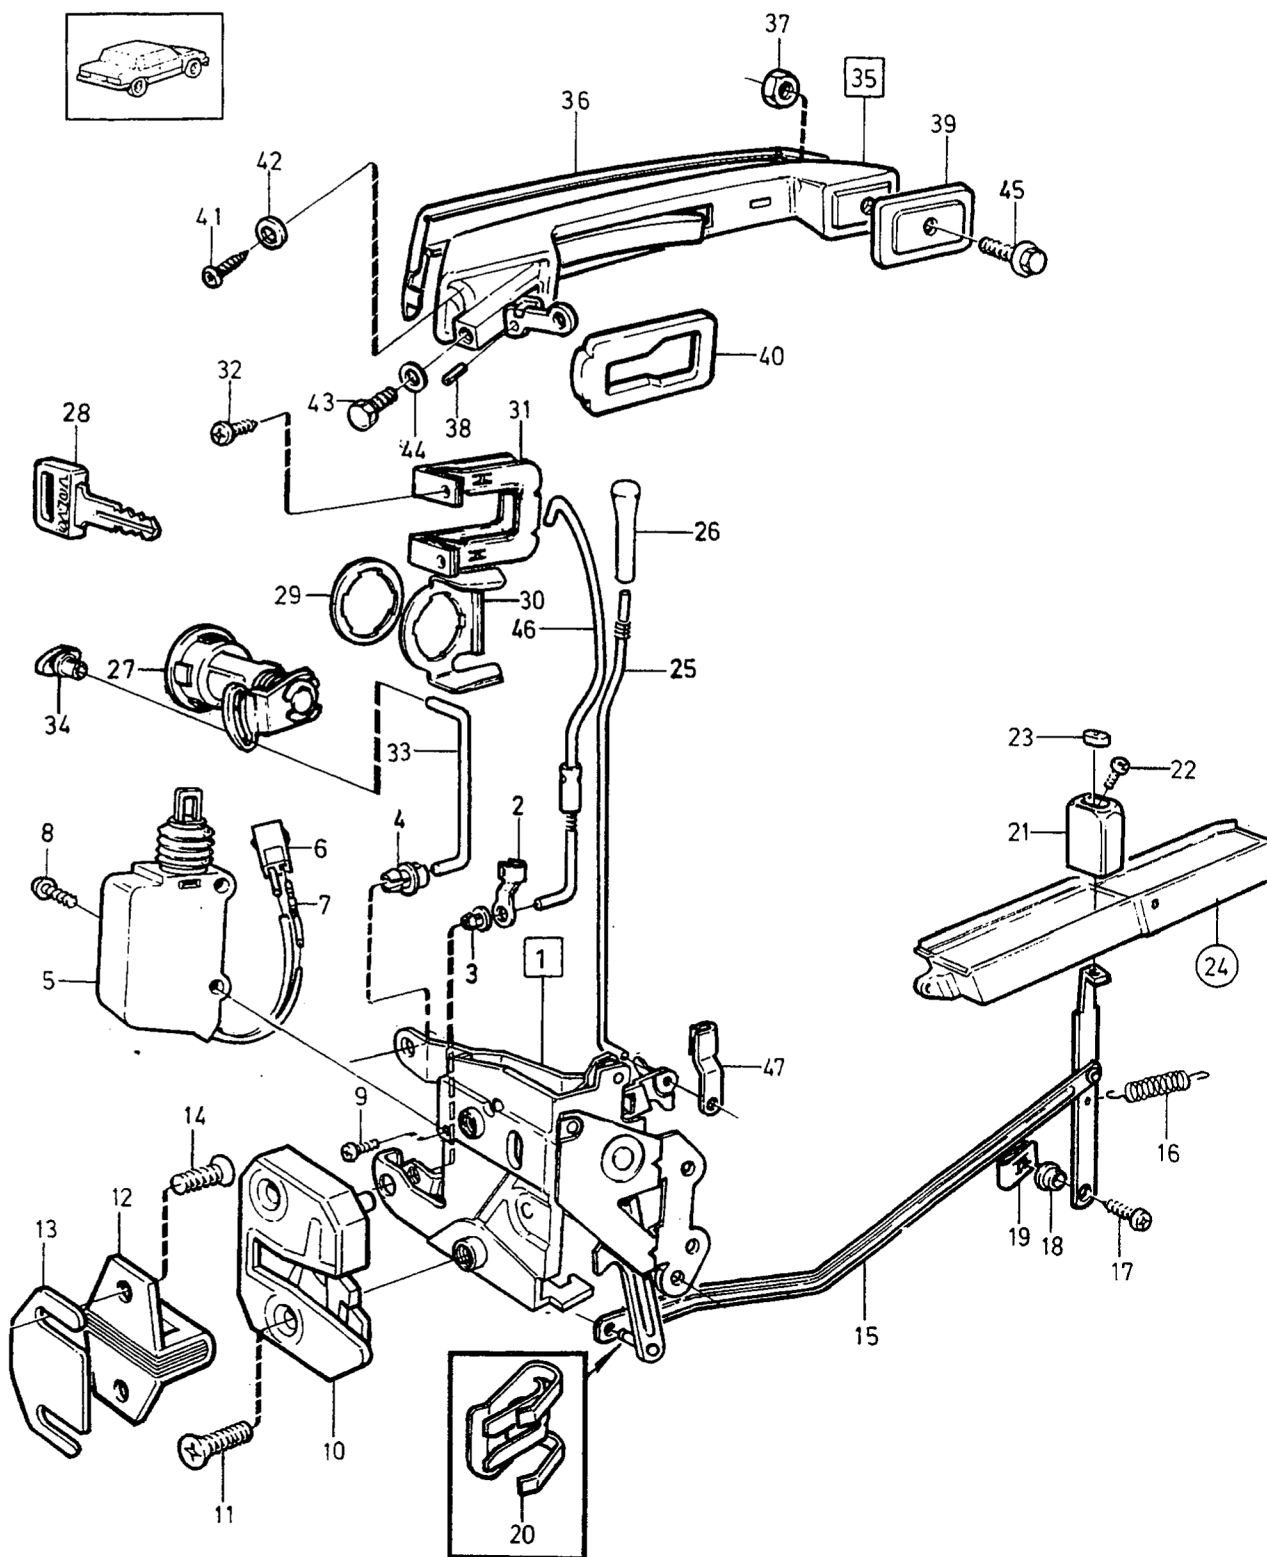

A						FRONT DOOR LOCKING SYSTEM		FRAMDÖRR LÄSSYSTEM		Group Grupp	
B										83	
C										Page Sida	
D											
E						1)				913	
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
	1268606-9	1	-	-	-	-		Link, r.h.	Länk, h		3
34	1334720-8	2	-	-	-	-		Clip	Clips		3
35	1380517-1	1	-	-	-	-		Handle, l.h. bright	Handtag, v blank		2
	1380518-9	1	-	-	-	-		Handle, r.h. bright	Handtag, h blank		2
36	1268806-5	1	-	-	-	-		• Trim moulding bright	• Prydnadslist blank		3
37	955781-0	1	-	-	-	-		• Nut	• Mutter		2
38	1380524-7	1	-	-	-	-		• Pin	• Pinne		2
39	3503041-0	2	-	-	-	-		Gasket	Packning		2
40	3503042-8	2	-	-	-	-		Gasket	Packning		2
41	956060-8	2	-	-	-	-		Screw	Skruv		2
42	955891-7	2	-	-	-	-		Washer	Bricka		2
43	955269-6	2	-	-	-	-		Screw	Skruv		2
44	955892-5	2	-	-	-	-		Washer	Bricka		2
45	965175-3	2	-	-	-	-		Flange screw	Flänsskruv		2
46	1268724-0	1	-	-	-	-		Link, l.h.	Länk, v		3
	1268725-7	1	-	-	-	-		Link, r.h.	Länk, h		3
47	6848358-5	2	-	-	-	-		Clamp	Klamma	(1304766)	3

1) 760 4DRS CH 58500-. 760 5DRS CH 23500-.