


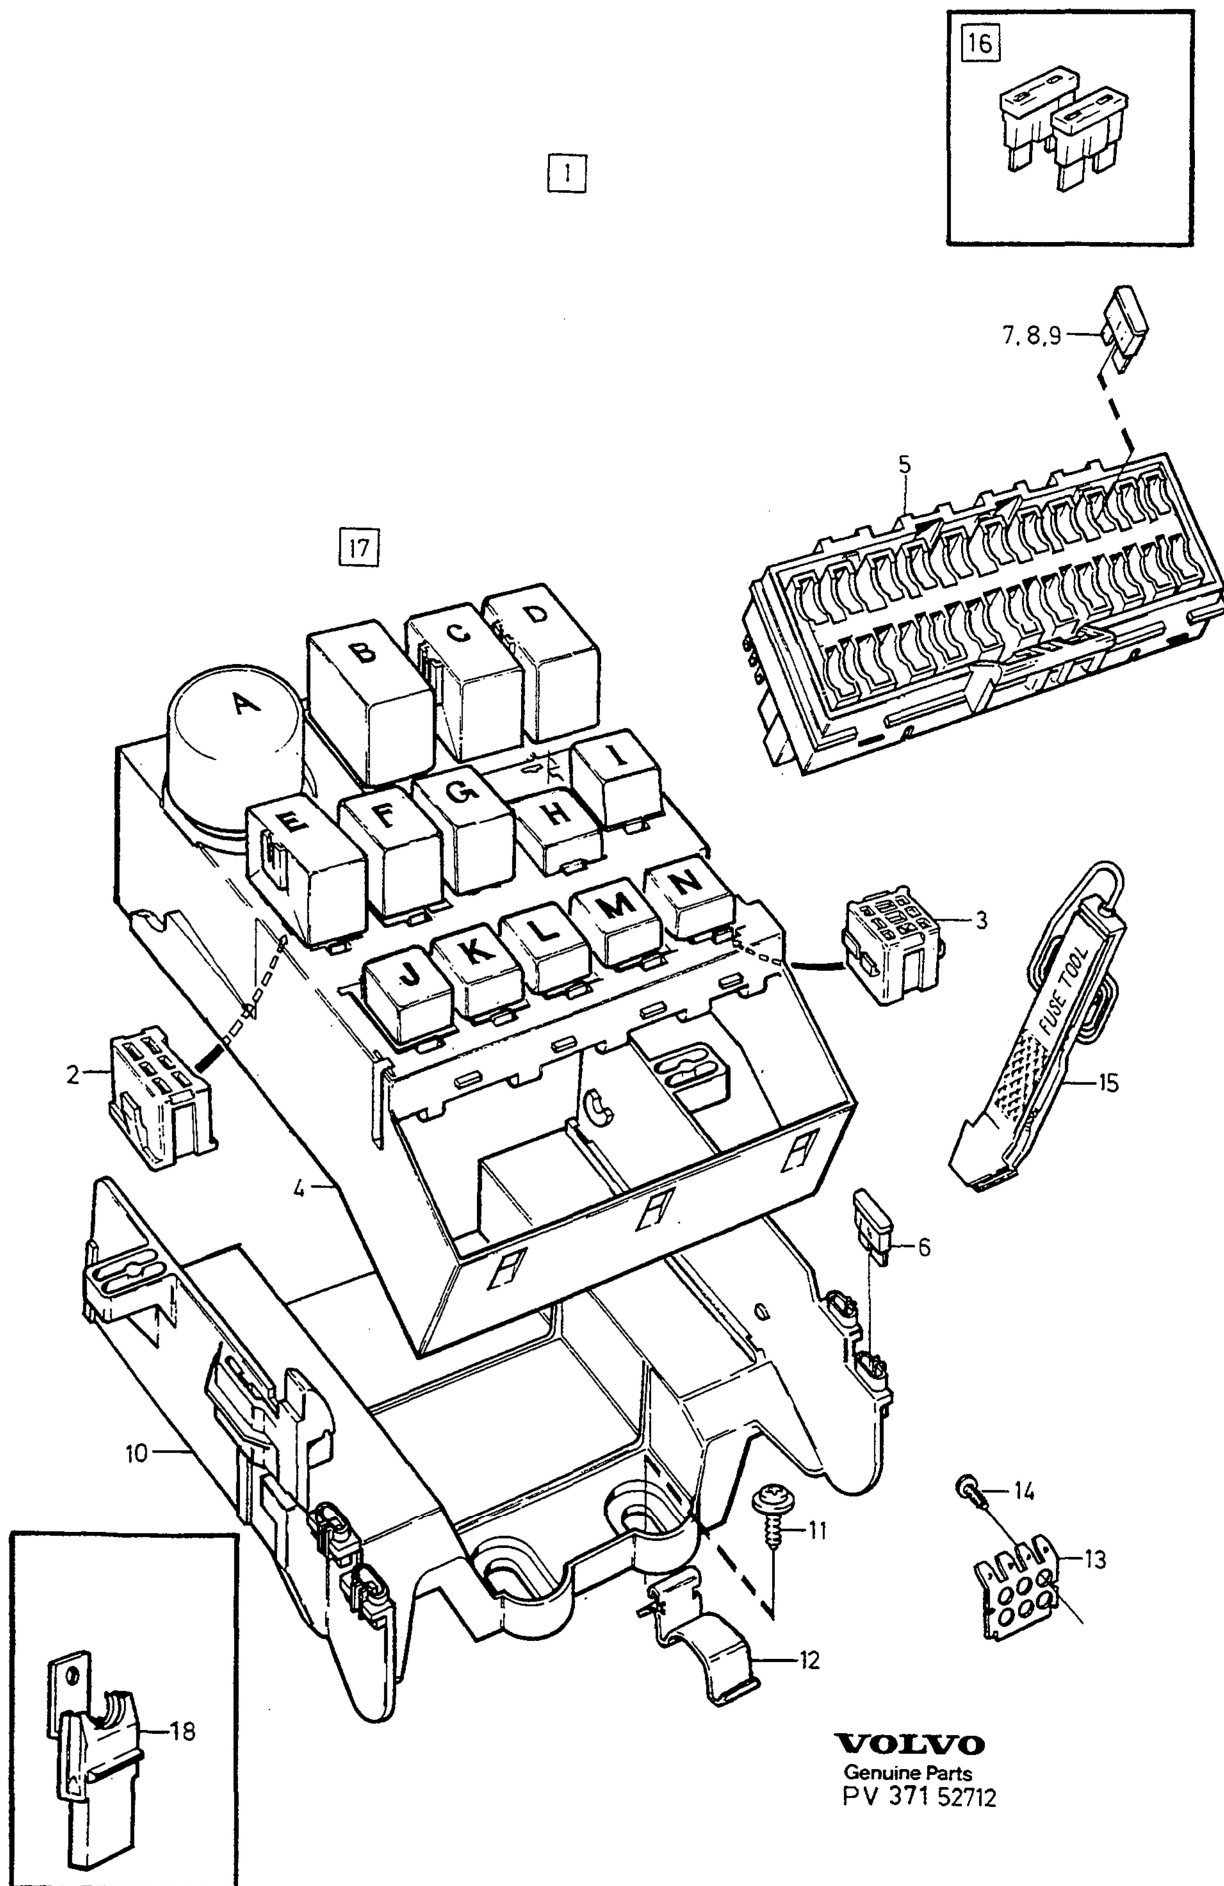

A	ELECTRICAL DISTRIBUTION CENTRE ELCENTRAL										Group
											Grupp
											37
											Page
											Sida
E											517
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
1		1	-	-	-	-	NS	Electrical distribut.unit	Elcentral		
2	1323801-9	X	-	-	-	-		• Socket housing	• Hylsisolator	6-POLE	2
3	1307160-0	X	-	-	-	-		• Socket housing	• Hylsisolator	9-POLE	2
4	3544224-3	1	-	-	-	-		• Frame	• Ram	(1258599)	3
5	1347425-9	1	-	-	-	-		• Fuse box	• Säkringsdosa	-1989	4
	3523574-6	1	-	-	-	-		• Fuse box	• Säkringsdosa	1990-	4
6	969162-7	1	-	-	-	-		Blade fuse blue	Bladsäkring blå	15A (966329)	1
	969163-5	1	-	-	-	-		Blade fuse uncoloured	Bladsäkring ofärgad	25A (966330)	1
	969164-3	1	-	-	-	-		Blade fuse green	Bladsäkring grön	30A (966331)	1
7	969162-7	X	-	-	-	-		Blade fuse blue	Bladsäkring blå	15A	1
8	969163-5	X	-	-	-	-		Blade fuse uncoloured	Bladsäkring ofärgad	25A	1
9	969164-3	X	-	-	-	-		Blade fuse green	Bladsäkring grön	30A	1
10	1307393-7	1	-	-	-	-		Bracket	Konsol	-1987	4
	3544223-5	1	-	-	-	-		Bracket	Konsol	(3544092), 1988-	4
	972079-8	3	-	-	-	-		Screw	Skruv	-1987. (965395)	2
	967552-1	3	-	-	-	-		Flange screw	Flänsskruv	-1989	1
☆	975561-2	3	-	-	-	-		Flange screw	Flänsskruv	1990-. (973475)	1
12	1348696-4	1	-	-	-	-		Clamp	Klamma		3
13	1347480-4	3	-	-	-	-		Terminal block	Kopplingsplint		3
☆	975561-2	2	-	-	-	-		Flange screw	Flänsskruv	(973475)	1
15	1347584-3	1	-	-	-	-		Fuse tool	Säkringstång		5
16	270927-7	X	-	-	-	-		Fuse kit	Säkringsats	(270162)	1
	969160-1	2	-	-	-	-		• Blade fuse	• Bladsäkring	5A	1
	969161-9	3	-	-	-	-		• Blade fuse	• Bladsäkring	10A	1
	969162-7	3	-	-	-	-		• Blade fuse	• Bladsäkring	15A	1
	969163-5	2	-	-	-	-		• Blade fuse	• Bladsäkring	25A	1
	969164-3	1	-	-	-	-		• Blade fuse	• Bladsäkring	30A	1
		-	-	-	-	-		Other electrical equipment	Övrig elektrisk utrustning	SEE 36 • 445	
17		-	-	-	-	-		Relay	Relä		
	1362278-2	1	-	-	-	-		• Failure sensor yellow	• Glödtrådvakt gul	(I),(F),(SA)	2
		" A "						" A "	" A "		
	1362284-0	1	-	-	-	-		• Failure sensor white	• Glödtrådvakt vit	(A),(B),(CH),(D),(NL)	2
		" A "						" A "	" A "		
	1362923-3	1	-	-	-	-		• Failure sensor green	• Glödtrådvakt grön	(S),(DK),(N),(J)	2
		" A "						" A "	" A "		
	1362268-3	1	-	-	-	-		• Seat belt reminder	• Bältespåminnare	(J)	3
		" B "						" B "	" B "		
	3523610-8	1	-	-	-	-		• Intermittent relay	• Intervallrelä	(1235067)	2
		Windscreen wiper						" C "	Vindrutetorkare		
		" C "						" C "	" C "		
	3523608-2	1	-	-	-	-		• Relay	• Relä	(1347603) EXC DSL	2
		Fuel pump						" E "	Bränslepump		
		" E "						" E "	" E "		
	1259925-4	1	-	-	-	-		• Relay	• Relä		2
		Headlamp						" F "	Strålkastare		
		" F "						" F "	" F "		
	1367598-8	1	-	-	-	-		• Relay	• Relä	(J)	3
		Temperature warning system						" F "	Temperaturvarningssystem		
		" F "						" F "	" F "		
	1363786-3	1	-	-	-	-		• Flasher relay	• Blinkrelä	-1987	1
		" G "						" G "	" G "		
	1396437-4	1	-	-	-	-		• Flasher relay	• Blinkrelä	1988-	1
		" G "						" G "	" G "		
	1504952-1	1	-	-	-	-		• Relay	• Relä		1
		Tank hatch						" H "	Tanklucka		
		" H "						" H "	" H "		
	1347768-2	1	-	-	-	-		• Relay	• Relä	-1990, MAN.TRANS M46	2
		Overdrive						" I "	Överväxel		
		" I "						" I "	" I "		
	3523805-4	1	-	-	-	-		• Relay	• Relä	1991-, MAN.TRANS M46	2

A							ELECTRICAL DISTRIBUTION CENTRE		ELCENTRAL		Group Grupp
B											37
C											Page
D											Sida
E											519
Fig	Part No. Artikel nr	Quantity / Antal					P S	Description	Benämning	Notes Anmärkning	S R
		A	B	C	D	E					
	3523804-7	1	-	-	-	-		Overdrive " I "	Ö överväxel " I "		
	1363875-4	1	-	-	-	-		• Relay Overdrive " I "	• Relä Ö överväxel " I "	1) (1347764) AUTO.TRANS AW71	2
	1259925-4	1	-	-	-	-		• Relay power windows cooling fan " J "	• Relä elektrisk fönsterhiss kylfläkt " J "	2) AUTO.TRANS AW71 -1987	2
		-	-	-	-	-		Relay cooling fan	Relä kylfläkt	1988-	
	1324749-9	1	-	-	-	-		• Relay main light, automatic . " K "	• Relä huvudljus, automatiskt .. " K "	SEE 37 • 521	2
	3523739-5	1	-	-	-	-		• Relay central locking " L "	• Relä centrallås " L "	(1348129)	2
	1504952-1	1	-	-	-	-		• Relay Rear fog lamp " M "	• Relä Dimbaklykta " M "	(1259926)	1
	1504952-1	1	-	-	-	-		• Relay auxiliary light " M "	• Relä extraljus " M "	(1259926), ALTER 1 (J)	1
	1504952-1	1	-	-	-	-		• Relay auxiliary light " N "	• Relä extraljus " N "	(1259926), ALTER 1 EXC (J)	1
	3515647-0	1	-	-	-	-		• Relay with diode auxiliary light " N "	• Relä med diod extraljus " N "	ALTER 2	2
18	1323312-7	1	-	-	-	-		Fuse holder " AIRBAG "	Säkringshållare " AIRBAG "		3

1) Without kick-down lock. / Utan kick-down spärr.

2) With kick-downs lock. / Med kick-down spärr.